

[Manuals.plus](#) /

> [MekiPow](#) /

> MekiPow MKW-CXJ-1630 Cordless Snow Shovel Instruction Manual

MekiPow MKW-CXJ-1630

MekiPow MKW-CXJ-1630 Cordless Snow Shovel Instruction Manual

Brand: MekiPow | Model: MKW-CXJ-1630

1. PRODUCT OVERVIEW

The MekiPow MKW-CXJ-1630 Cordless Snow Shovel is a powerful and versatile tool designed for efficient snow removal. It features a 12-inch clearing width and can handle up to 6 inches of snow depth, making it suitable for driveways, decks, patios, sidewalks, and steps. The brushless motor provides strong performance, clearing up to 400 lbs of snow in just 2 minutes, with a throwing distance of up to 16.5 feet.

This snow shovel is compatible with Milwaukee M18 18V batteries (models 448-11-1811, 48-11-1815, 48-11-1820, 48-11-1822, 48-11-1828, 48-11-1840, 48-11-1841, 48-11-1850, 48-11-1852, 48-11-1835, 48-11-1862, 48-11-1865, 48-11-1880, 48-59-181, 48-59-1850, and more), offering cordless freedom for various tasks.

For user safety, the device includes a safety lock switch to prevent accidental operation.



CORDLESS BATTERY POWER SNOW SHOVEL COMPATIBLE WITH MILWAUKEE 18V BATTERY

Battery and Charger are Not Included

Image 1: MekiPow Cordless Snow Shovel featuring a smart LCD display for real-time battery status and a safety lock switch on the handle.



60° ADJUSTABLE CHUT

Lift the adjustment knob first,
then turn left or right to adjust the throwing angle

Image 2: The MekiPow Cordless Snow Shovel highlighting its built-in brushless motor for 40% more efficiency and superior longevity.

2. SETUP

The MekiPow Cordless Snow Shovel is designed for quick and easy assembly. It typically arrives in a few main components that connect securely.

2.1 Assembly Steps

1. **Connect the Shaft Sections:** Align the electrical connectors and guide notches on the shaft sections. Push them firmly together and twist the connecting sleeves to secure them.
2. **Attach the Handle:** Slide the auxiliary handle onto the main shaft. Adjust its position for comfortable use and tighten the knob to secure it.
3. **Insert the Battery:** Ensure your Milwaukee 18V battery is fully charged. Slide the battery into the designated battery slot on the main handle until it clicks securely into place.

1 Min Easy to Install



Image 3: Diagram illustrating the easy 1-minute installation process of the MekiPow Cordless Snow Shovel, showing the shaft connections.



Image 4: Detailed diagram of the MekiPow Cordless Snow Shovel with key components labeled, including the lock-out button, trigger switch, battery slot, guide adjustment knob, guide shutter, and ergonomic handle design.

2.2 Video Guide: Assembly and Overview

Video 1: A brief overview from MekiPow demonstrating the assembly and initial operation of the Cordless Snow Shovel.

3. OPERATING INSTRUCTIONS

Before operating, ensure all connections are secure and the battery is fully charged. Always wear appropriate safety gear, including eye protection and sturdy footwear.

3.1 Starting the Snow Shovel

1. **Engage Safety Lock:** Press and hold the safety lock button (typically located on the side of the main handle).
2. **Activate Trigger:** While holding the safety lock, squeeze the trigger switch to start the motor. Release the safety lock once the motor is running.

3.2 Clearing Snow

- Push the snow shovel forward into the snow. The 12-inch clearing width and 6-inch clearing depth allow for efficient removal of moderate snow accumulation.
- The adjustable onboard blade allows for precise snow direction control, throwing snow up to 16.5 feet away. Lift the adjustment knob and turn left or right to set the desired throwing angle.
- Move in overlapping passes to ensure complete snow removal.



Image 5: The MekiPow Cordless Snow Shovel clearing snow, illustrating its 12x6 inch cleaning path, 16.5 ft throwing distance, and 60° adjustable chute.



Image 6: Close-up view of the MekiPow Cordless Snow Shovel's 60° adjustable chute, showing how to lift the adjustment knob and turn to adjust the throwing angle.

3.3 Video Guide: Operation

4. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your MekiPow Cordless Snow Shovel.

- **Clean After Each Use:** Remove any snow, ice, or debris from the auger and chute. Use a soft cloth or brush. Do not use harsh chemicals.
- **Inspect Scraper Bar:** Periodically check the scraper bar at the bottom of the unit for wear. A worn scraper bar can reduce clearing efficiency. Replace if necessary (replacement parts may be available from the manufacturer).
- **Battery Care:** Store batteries in a cool, dry place away from extreme temperatures. Always charge batteries indoors, especially in cold weather, to maintain optimal performance and lifespan.
- **Storage:** For long-term storage, disassemble the unit into its three main pieces for compact storage. Ensure it is clean and dry before storing.

5. TROUBLESHOOTING

If you encounter issues with your MekiPow Cordless Snow Shovel, try the following steps:

- **Unit Not Starting:**
 - Ensure the battery is fully charged and properly inserted.
 - Verify the safety lock button is pressed simultaneously with the trigger.
 - Check all shaft connections for secure attachment.
- **Reduced Performance:**
 - Clear any obstructions from the auger or chute.
 - Check the scraper bar for excessive wear and replace if needed.
 - Ensure the battery is fully charged, as low battery can affect power.
- **Unusual Noise/Vibration:**
 - Immediately stop the unit and inspect for any loose parts or foreign objects.
 - Ensure all connections are tight.

If problems persist, please refer to the Warranty and Support section for assistance.

6. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	MekiPow
Model Number	MKW-CXJ-1630
Product Dimensions	8 x 13 x 55 inches
Item Weight	10.43 pounds
Material	Alloy Steel
Color	Red-For Milwaukee
Clearing Width	12 inches
Clearing Depth	Up to 6 inches
Snow Throwing Distance	Up to 16.5 feet
Battery Compatibility	Milwaukee M18 18V (Battery not included)
Motor Type	Brushless
UPC	761740102385

7. WARRANTY AND SUPPORT

MekiPow is committed to the quality of its products and customer satisfaction. If you experience any issues with your product, please do not hesitate to reach out for support.

To contact customer support:

1. Go to your order details.
2. Click on the seller's name next to "Sold by."
3. Select "Ask a question" and use the messaging assistant to send your message.