

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [PARTPHONER](#) /
- › [PARTPHONER Floor Lamp with Table and Storage Shelves \(Model STR-FL-0219-rusticbrown\) Instruction Manual](#)

PARTPHONER STR-FL-0219-rusticbrown

PARTPHONER Floor Lamp with Table and Storage Shelves

MODEL: STR-FL-0219-RUSTICBROWN

Manufacturer: PARTPHONER

Introduction

Thank you for choosing the PARTPHONER Floor Lamp with Table and Storage Shelves. This versatile unit combines a functional floor lamp with a multi-tiered side table, designed to enhance your living space with both illumination and convenient storage. This manual provides essential information for safe assembly, operation, and maintenance of your new product. Please read all instructions carefully before use.

What's in the Box

Please verify that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Floor Lamp Frame (Metal Poles and Arched Arm)
- Table Shelves (3 pieces, Rustic Brown Wood Finish)
- Linen Fabric Lamp Shade
- 9W 3CCT LED Bulb (E26 Base)
- Assembly Hardware (Screws, Allen Wrench)
- Instruction Manual

Setup and Assembly

Assembly of your PARTPHONER Floor Lamp is designed to be quick and straightforward, typically taking less than 10 minutes. No additional tools are required beyond what is provided.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Assemble Shelves:** Attach the metal support poles to the wooden shelves using the provided screws and Allen wrench. Ensure all connections are secure.
3. **Attach Lamp Pole:** Connect the main lamp pole to the top shelf. The lamp pole is integrated with the arched arm.

4. **Install Lamp Shade:** Secure the linen fabric lamp shade to the lamp's light fixture.
5. **Insert LED Bulb:** Screw the included 9W 3CCT LED bulb into the E26 base socket.
6. **Position and Connect Power:** Place the assembled lamp in your desired location. Plug the power cord into a standard 120V electrical outlet.



Image: Product dimensions (15.8"D x 11.8"W x 59.25"H) for placement planning.

Operating Instructions

Your floor lamp is designed for ease of use with customizable lighting options.

- **Power On/Off:** Use the rocker switch located on the power cord to turn the lamp on or off.
- **Adjust Color Temperature (3CCT):** The included LED bulb offers three color temperature settings: Warm White (2700K), Neutral White (4000K), and Cool White (5000K). To cycle through these settings, simply toggle the rocker switch off and then on again quickly. Each toggle will switch to the next color temperature.
- **Adjust Lamp Head:** The lamp head features a 180-degree swivel mechanism. Gently adjust the lamp head to direct light precisely where needed, minimizing glare and shadows for tasks like reading or working.

3 Color Temperature Bulb Included



Warm 2700K



Neutral 4000K



Cold 5000K

Image: Demonstrates the three adjustable color temperatures of the LED bulb.

Adjustable Angle to your needs



Image: Shows the adjustable angle feature of the lamp head.

Maintenance

Regular maintenance will help prolong the life and appearance of your floor lamp.

- **Cleaning:** Disconnect the power before cleaning. Wipe metal and wood surfaces with a soft, dry cloth. For the fabric shade,

use a lint roller or a soft brush to remove dust. Do not use abrasive cleaners or solvents.

- **Bulb Replacement:** Ensure the lamp is unplugged and the bulb has cooled before attempting to replace it. Use an E26 base LED bulb, not exceeding 60W equivalent.
- **Cord Care:** Periodically inspect the power cord for any damage. Do not place heavy objects on the cord or run it under carpets.

Troubleshooting

If you encounter any issues with your lamp, please refer to the following common solutions:

- **Lamp Does Not Light Up:**
 - Ensure the power cord is securely plugged into a working electrical outlet.
 - Check if the rocker switch is in the 'ON' position.
 - Verify that the LED bulb is screwed in tightly and is not faulty. Try replacing the bulb with a known working one.
- **Light Flickers:**
 - Ensure the bulb is screwed in firmly.
 - Check for loose connections in the power cord or switch.
 - If using a dimmer, ensure it is compatible with LED bulbs.
- **Unstable Structure:**
 - Re-tighten all screws connecting the shelves and poles.
 - Ensure the lamp is placed on a flat, stable surface.

If these steps do not resolve the issue, please contact PARTPHONER customer support.

Specifications

Brand	PARTPHONER
Model Number	STR-FL-0219-rusticbrown
Product Dimensions	15.8"D x 11.8"W x 59.25"H
Item Weight	9 Pounds
Material Type	Fabric, Metal, Wood
Finish Type	Veneered
Shade Material	Linen
Shade Color	Beige
Light Source Type	LED
Bulb Base	E26
Wattage	9 watts
Voltage	120 Volts
Switch Type	Rocker

Additional Features	3 Color Temperature
Indoor/Outdoor Usage	Indoor

Warranty and Support

This PARTPHONER product is covered by a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

For warranty claims, technical support, or any questions regarding your product, please contact PARTPHONER customer service through the retailer where the product was purchased or visit the official PARTPHONER website for contact information.