



[Manuals.plus](#) /

> [Jectse](#) /

> Jectse 14MP Digital Film and Slide Scanner User Manual

Jectse B0FP5L14SJ

Jectse 14MP Digital Film and Slide Scanner User Manual

Model: B0FP5L14SJ

[Introduction](#) [Safety Information](#) [Package Contents](#) [Product](#)
[Overview](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your Jectse 14MP Digital Film and Slide Scanner. This device is designed to convert various film types, including 135 Film, 126KPK Film, 110 Film, Super8 Film, Monochrome, and Slides, into digital images. Please read this manual thoroughly before using the product and retain it for future reference.



Figure 1: Jectse 14MP Digital Film and Slide Scanner, a compact device for digitizing various film formats.

2. SAFETY INFORMATION

- **Power Source:** Use only the specified power adapter. Ensure the voltage is compatible with your region.
- **Water and Moisture:** Do not expose the device to water or excessive moisture. Do not operate with wet hands.
- **Ventilation:** Ensure proper ventilation around the device. Do not block ventilation openings.
- **Cleaning:** Disconnect power before cleaning. Use a soft, dry cloth. Avoid liquid cleaners.
- **Disassembly:** Do not attempt to disassemble or repair the device yourself. Refer all servicing to qualified personnel.
- **Children:** Keep the device out of reach of children.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Film Scanner

- 1 x HD Data Cable
- 1 x Type-C Cable
- 1 x Brush
- 1 x User Manual (this document)
- 1 x 110 Film Stand
- 1 x Super8 Film Stand
- 1 x 126 Film Stand
- 1 x Negative Film Stand

4. PRODUCT OVERVIEW

The Jectse Film and Slide Scanner features a 5-inch LCD screen for easy operation and previewing. It includes built-in 16GB memory for storing scanned images and supports various film types.

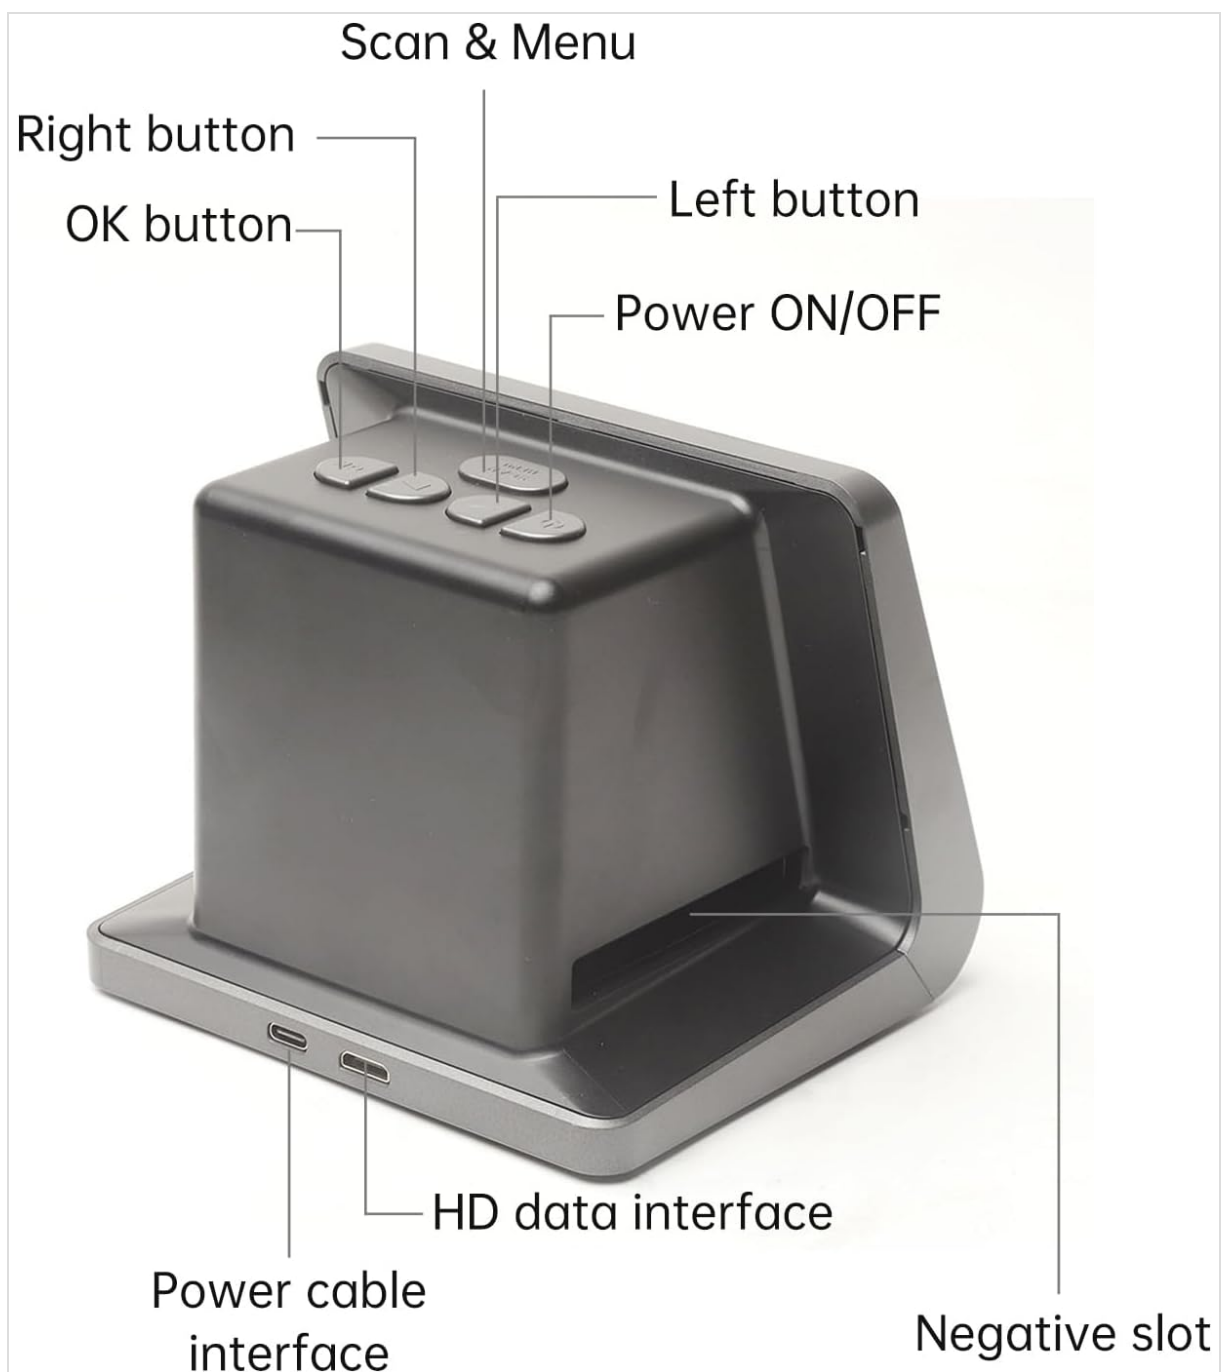 


Figure 2: Front and side view of the scanner with labeled buttons and interfaces. Key components include the Power ON/OFF button, Scan & Menu button, Left and Right navigation buttons, OK button, Power cable interface (Type-C), HD data interface, and Negative slot.

4.1 Key Features

- **Film Compatibility:** 135 Film (36*24mm), 126KPK Film (27*27mm), 110 Film (17*13mm), Super8 Film (4.01*5.79mm), Monochrome, Slide.
- **High-Resolution Sensor:** 14.0 Mega pixels (4416*3312) 1/2.33" CMOS sensor.
- **Display:** Color 5" LCD HD screen with 22W Pixels display.
- **Internal Storage:** Built-in 16GB memory.
- **Connectivity:** Type-C USB for power/data, Mini HD for TV output.
- **Multi-language Support:** Chinese, T-Chinese, English, French, German, Italian, Spanish, Japanese.



Figure 3: Overview of the scanner's capabilities, highlighting its compatibility with various film types, 22MP interpolation, 5-inch LCD screen, and 16GB internal memory.

5. SETUP

5.1 Powering On the Device

1. Connect the provided Type-C cable to the "Power cable interface" on the scanner.
2. Connect the other end of the Type-C cable to a DC 5V power adapter (not included) or a USB port on

your computer.

3. Press the **Power ON/OFF** button located on the top of the scanner to turn it on. The LCD screen will illuminate.

5.2 Connecting to a Computer or TV

The scanner can be connected to a computer or TV for a larger display of scanned images.

- **For Computer Connection:** Use the Type-C cable to connect the scanner to your computer. The scanner will function as a USB MSDC (Mass Storage Device Class), allowing you to transfer scanned images. No additional drivers or software are required. Compatible with Windows Vista/7/8/10 and above.
- **For TV Connection:** Use the provided HD Data Cable to connect the "HD data interface" on the scanner to the HD input on your television. Select the appropriate input source on your TV to view the scanner's display.



Operating System

Digital film scanner connects it to your computer, PC and TV for a larger screen display.

Compatible with Windows XP/vista/Windows7/8/Mac10.7.3 and above.

Computer

TV

Laptops

Figure 4: The scanner connected to a computer monitor and a television, demonstrating its compatibility with external displays for viewing scanned content.

 
6. OPERATION

6.1 Loading Film and Slides

Ensure you use the correct film stand for your film type. The scanner supports 135 Film, 126KPK Film, 110 Film, Super8 Film, Monochrome, and Slides.

6.1.1 Loading Slides

- a. Hold the slide up to the light to identify the correct orientation.
- b. Take out the slide holder. Ensure the side with the "open" logo faces you, and the side with the "<" logo faces down. Open the slide holder.
- c. Place the slides into the recessed area in the holder. Film strips can also be loaded into the slide holder. Close the slide holder and press the edges to lock it in place.
- d. Insert the loaded slide holder into the slot on the right side of the film scanner as shown in Figure 5.

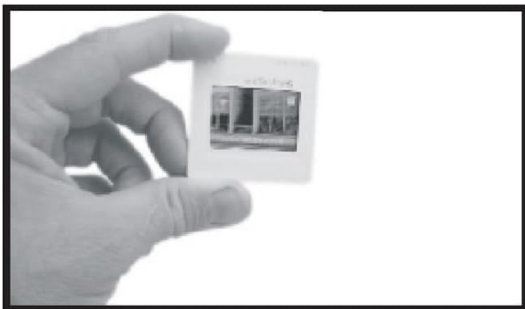

a. Hold up the slide toward the light. Face (we don't provide white small holder)

b. Take out slide holder out. Let the side with "open" logo face yourself, and let the side with "<" logo face down. Open the slide holder, then place slides into recessed area in the holder. (films also could be loaded as a strip into the slide holder, forming drawer type as below picture) Close the slide holder and press the edges so that it locks in place.

c. Insert the slide holder into the slot on the right side of the film scanner as shown.



Figure 5: Step-by-step guide illustrating how to correctly load individual slides into the slide holder and then insert the holder into the scanner.

6.1.2 Loading Negative Film (135, 126KPK, 110, Super8)

1. Hold the negative film strip up to the light to determine the correct orientation.
2. Take out the negative holder. Ensure the side with the "open" logo faces you, and the side with the "<" logo faces down. Open the negative holder.
3. Place the negative film strip into the recessed area in the holder. Close the negative holder and press

the edges to lock it in place.

  4. Insert the loaded negative holder into the slot on the right side of the film scanner as shown in Figure 6.

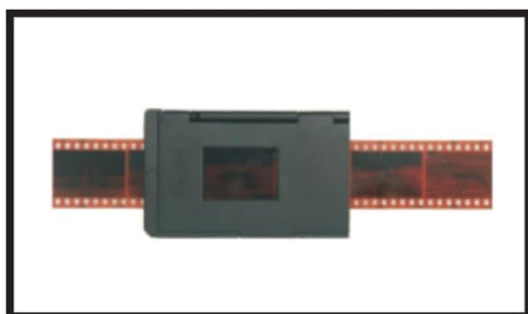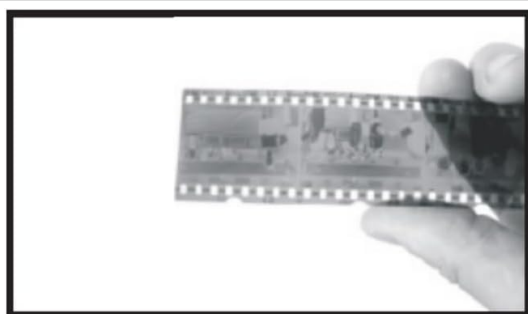

① Slide and negative holder loading method

② Hold up the negative toward the light. Face the right side of the neg-

③ Take out negative holder out. Let the side with "open" logo face yourself, and let the side with " < "logo face down. Open the negative holder, then place negative into recessed area in the holder. Close the negative holder and press the edges so that it locks in place.

④ Insert the negative holder into the slot on the right side of the film scanner .

Figure 6: Step-by-step guide demonstrating how to correctly load negative film strips into the negative holder and then insert the holder into the scanner.

6.2 Scanning Process

1. After loading the film/slide, the image will appear on the 5-inch LCD screen.
2. Use the **Left** and **Right** buttons to navigate through menu options or adjust settings.
3. Press the **Scan & Menu** button to access the scanning options or menu.
4. Select the appropriate film type (e.g., 135 Film, Slide) from the menu if prompted.
5. Adjust exposure compensation (Automatic / Manual (-2.0 EV~ +2.0EV)) and white balance (Automatic) if necessary using the menu options.
6. Once the image is properly framed and settings are adjusted, press the **OK** button to capture and save the digital image. The scanned image will be saved to the built-in 16GB memory.

Fast Scanning

Convert film types of **135 Film(36*24mm)**, **126KPK Film(27*27mm)**, **110 Film(17*13mm)**, **Super8 Film(4.01*5.79mm)**, **Monochrome, Slide.**



Figure 7: The scanner in operation, demonstrating its ability to quickly convert various film types into digital images, displayed on its integrated screen.

6.3 Language Settings

The scanner supports 8 system languages. To change the language:

1. Press the **Scan & Menu** button to enter the main menu.
2. Use the **Left** or **Right** buttons to navigate to the "Language" option.
3. Press the **OK** button to select.
4. Choose your desired language (Chinese, T-Chinese, English, French, German, Italian, Spanish, Japanese) and press **OK** to confirm.

7. MAINTENANCE

7.1 Cleaning the Scanner

- **Exterior:** Use a soft, dry, lint-free cloth to wipe the exterior of the scanner. Do not use liquid cleaners or abrasive materials.
- **Film Slot/Sensor:** Use the provided brush to gently remove dust or debris from the film slot and around the scanning sensor. Avoid touching the sensor directly.
- **LCD Screen:** Use a soft, dry microfiber cloth specifically designed for electronics screens.

Regular cleaning helps maintain optimal scanning quality and extends the life of your device.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	No power connection or faulty cable.	Ensure the Type-C cable is securely connected to both the scanner and a working power source (DC 5V adapter or computer USB port). Try a different cable or power source.
Scanned images are blurry or unclear.	Dust/debris on film or sensor; incorrect film loading.	Clean the film/slide thoroughly before scanning. Use the provided brush to clean the scanner's film slot and sensor. Ensure the film/slide is correctly seated in its holder.
Cannot transfer files to computer.	Incorrect USB mode; cable issue.	Ensure the scanner is connected to the computer via the Type-C cable. The scanner should automatically enter USB MSDC mode. Check cable connection. Ensure your computer's operating system is compatible (Vista/7/8/10 and above).
No image on TV when connected.	Incorrect TV input; faulty HD cable.	Verify the HD Data Cable is securely connected to both the scanner and the TV. Select the correct HD input source on your television. Try a different HD cable if available.

9. SPECIFICATIONS

Feature	Detail
Function	Film scanner / USB MSDC
Interface	Type-C, Mini HD
Image Sensor	14.0 Mega pixels (4416*3312), 1/2.33" CMOS sensor
Display	Color 5" LCD HD (22W Pixels display)
Exposure Control	Automatic / Manual (-2.0 EV~ +2.0EV)
White Balance	Automatic
Resolution	14.0 Mega pixels / 22 Mega pixels (interpolation)
Film Types Supported	135 Film (36*24mm), 126KPK Film (27*27mm), 110 Film (17*13mm), Super8 Film (4.01*5.79mm), Monochrome, Slide
Picture Effects	Slides, Negatives
File Format	JPEG
TV-OUT Type	NTSC/PAL
Built-in Memory	16GB

Feature	Detail
Power Supply	DC 5V Adapter / USB Port
Supported Languages	S-Chinese, T-Chinese, English, French, German, Italian, Spanish, Japanese
Operating System Support	For Vista/7/8/10 and above
Product Size	132x115x110mm
Weight	330g

Compact Size

Weight: 330g



Figure 8: Dimensions of the Jectse Film and Slide Scanner, showing its compact size (14cm/5.51in width, 12cm/4.72in height, 11cm/4.33in depth).

10. CUSTOMER SUPPORT

For technical assistance, warranty information, or service inquiries, please contact your retailer or the manufacturer's customer support channels. Refer to the product packaging or the manufacturer's official website for contact details.

