



[Manuals.plus](#) /

› [Ninja](#) /

› Ninja Crispi Air Fryer Instruction Manual - Model FN101BL

## Ninja FN101BL

# Ninja Crispi Air Fryer Instruction Manual

Brand: Ninja | Model: FN101BL

## INTRODUCTION

---

The Ninja Crispi Air Fryer is a versatile 4-in-1 portable cooking system designed for convenience and healthy meal preparation. This manual provides essential information for setting up, operating, and maintaining your appliance to ensure optimal performance and longevity. The system includes the Ninja Crispi PowerPod, 4-quart and 6-cup TempWare glass containers, and storage lids, offering functionality for Max Crisp, Bake, Air Fry, and Re crisp modes.



Image: The Ninja Crispi Air Fryer in use, showcasing a whole chicken and vegetables in the 4-quart glass container, ready to be served directly on a dining table. A smaller container with food is also visible.

## WHAT'S INCLUDED

---

Your Ninja Crispi Air Fryer package contains the following components:

- **Ninja Crispi PowerPod:** The main heating and control unit.
- **4-quart TempWare Glass Container:** For larger meals, such as a 4-pound chicken.
- **6-cup TempWare Glass Container:** Ideal for personal-sized meals.
- **Crisper Plates:** Two crisper plates (one for each container size) to ensure even crisping.
- **Crispi Container Adapter:** Allows the PowerPod to be used with the larger 4-quart container.
- **Storage Lids:** Two leak-proof snap-lock lids for convenient food storage.



## Complete cooking system

Ninja CRISPI™ PowerPod™, big-batch 4-qt container, small-batch 6-cup container, adapter, and storage lids.

Image: A complete overview of the Ninja Crispi Portable Cooking System components, including the PowerPod, two glass containers with their respective crisper plates, and storage lids, arranged on a kitchen countertop.

### SETUP

---

1. **Unpack:** Carefully remove all components from the packaging.
2. **Wash Components:** Before first use, wash the TempWare glass containers, crisper plates, and storage lids in warm, soapy water or in the dishwasher. Rinse thoroughly and dry.
3. **Place PowerPod:** Position the Ninja Crispi PowerPod on a stable, heat-safe countertop. The fixed heat-safe feet allow safe placement on various surfaces like granite, laminate, quartz, butcher block, and marble.
4. **Assemble Container:** Place the desired TempWare glass container into its base. Insert the appropriate crisper plate into the container.
5. **Attach PowerPod:** For the 6-cup container, simply place the PowerPod directly onto the container. For the 4-quart container, first attach the Crispi Container Adapter to the PowerPod, then place the assembled unit onto the 4-quart container.



## Meet the Ninja CRISPi™ PowerPod™

The power of a full-sized, 1500-watt air fryer now  
in the palm of your hand.\*

\*Based on wattage compared to AF100

Image: A close-up view of the Ninja Crispi PowerPod being lowered onto the smaller 6-cup glass container filled with food, demonstrating the direct attachment for small-batch cooking.



## Switch to big-batch cooking

Switch from small-batch to big-batch cooking with the included Ninja CRISPi™ adapter.

Image: The Ninja Crispi PowerPod is shown with the Crispi Container Adapter attached, positioned next to the larger 4-quart glass container, illustrating how to prepare for big-batch cooking.

### OPERATING INSTRUCTIONS

---

The Ninja Crispi offers 4 versatile cooking functions:

- **Max Crisp:** Best for frozen favorites, providing optimal crispiness. (380-415°F, 15-20 minutes)
- **Bake:** Gentle heat for all your baked treats. (350-380°F, 10-15 minutes)
- **Air Fry:** Gives your food crispiness and crunch. (360-400°F, 20-25 minutes)
- **Re crisp:** Revive your leftovers. (355-380°F, 5-10 minutes)
- **Keep Warm:** Keep meals at the perfect temperature. (150-175°F, 1-60 minutes)

To operate:

1. Prepare your food and place it in the appropriate TempWare container with the crisper plate.
2. Place the PowerPod (with adapter if using 4-quart container) onto the container.
3. Plug the PowerPod into a 3-prong outlet.
4. Press the 'MODE' button to select your desired cooking function.

5. Use the '+' and '-' buttons to adjust the cooking time.
6. Press 'START' to begin cooking.
7. The PowerPod will automatically shut off if lifted during operation for safety.

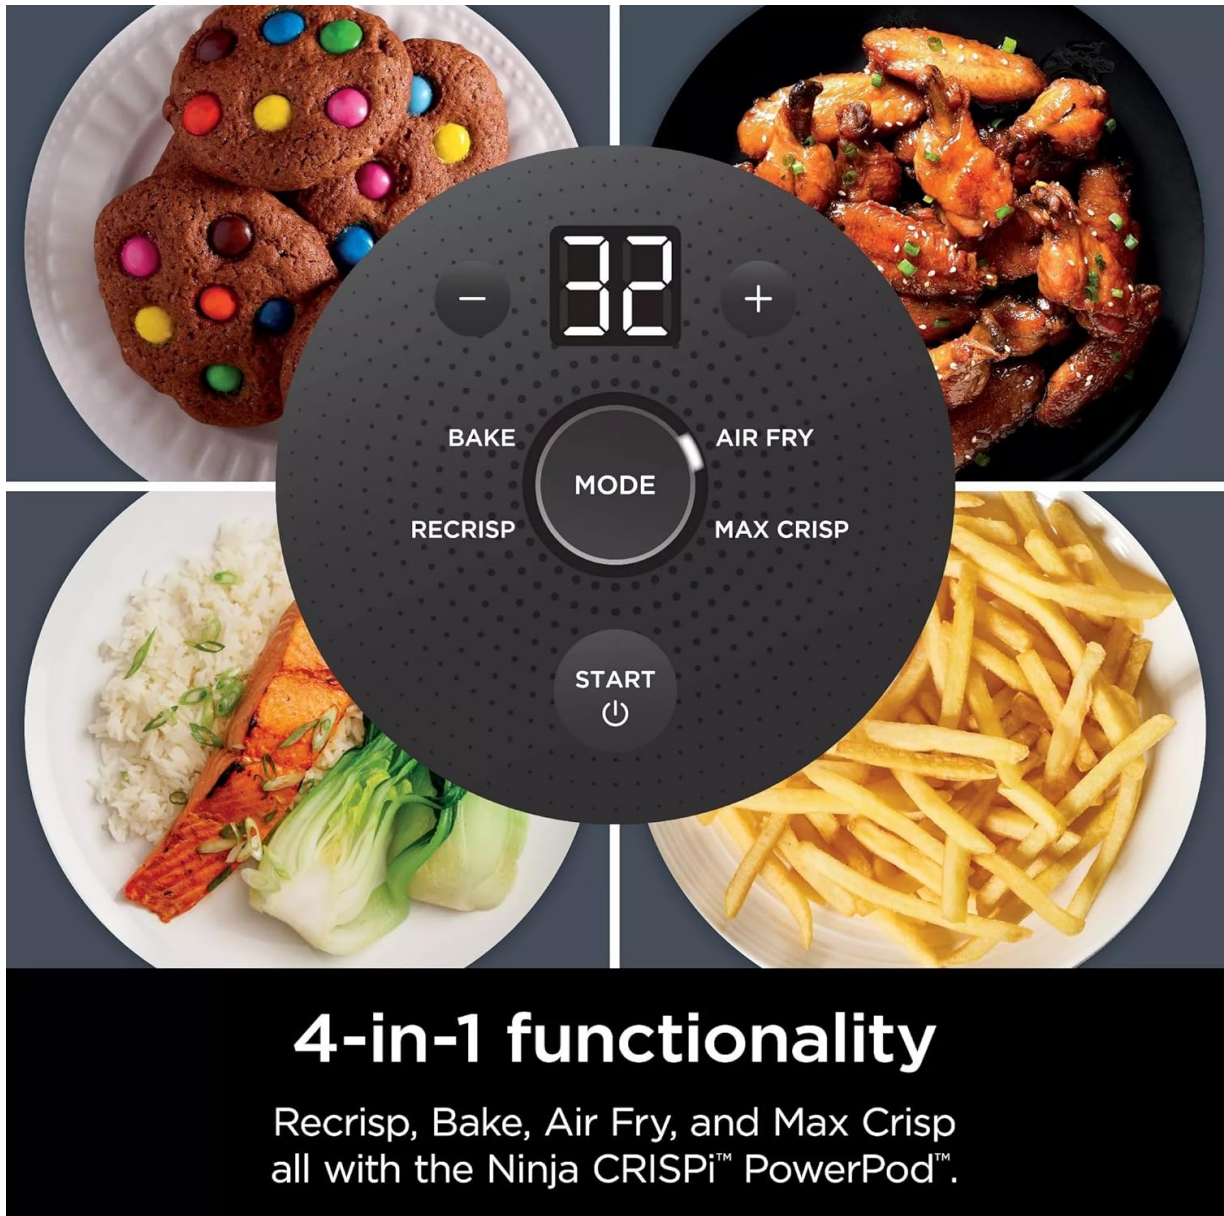


Image: The digital control panel of the Ninja Crispi PowerPod, highlighting the 'MODE' button and options for Recrip, Bake, Air Fry, and Max Crisp, along with time adjustment buttons and a 'START' button.

Your browser does not support the video tag.

Video: A detailed review and demonstration of the Ninja Crispi, showcasing its features and ease of use for various cooking tasks.

Your browser does not support the video tag.

Video: A demonstration highlighting the countertop-safe design and easy-to-handle features of the Ninja Crispi Air Fryer.

Your browser does not support the video tag.

Video: A user review emphasizing the non-plastic, glass construction of the Ninja Crispi Air Fryer for healthier cooking.

Your browser does not support the video tag.

Video: A review showcasing the Ninja Crispi as a perfect air fryer and oven solution for small spaces, highlighting its compact design.

Your browser does not support the video tag.

Video: A demonstration of the Ninja Crispi Glass Air Fryer's fast and even cooking capabilities.

## CLEANING AND MAINTENANCE

---

Proper cleaning and maintenance will extend the life of your Ninja Crispi Air Fryer.

- **Glass Containers, Crisper Plates, Adapter, and Lids:** All these components are dishwasher safe for quick and easy cleanup. They can also be hand-washed with warm, soapy water.
- **PowerPod:** The PowerPod contains electrical components and should NEVER be submerged in water. To clean, wipe the exterior with a damp cloth. For the heating element, ensure the unit is unplugged and completely cool, then gently wipe with a damp cloth or soft brush to remove any food residue.
- **Storage:** The Ninja Crispi PowerPod and TempWare glassware are designed to nest together for mess-free storage in your cabinets, optimizing space.



### Easy to clean

The Ninja Crispi™ adapter and TempWare™ glassware and lids are dishwasher safe for quick and easy cleanup.

Image: The interior of a dishwasher, showing the Ninja Crispi glass containers, crisper plates, and adapter placed on the racks, illustrating their dishwasher-safe feature for easy cleaning.



## Nesting storage

Ninja CRISPI™ PowerPod™ and TempWare™ glassware nest together for easy, mess-free storage in your cabinets.

Image: The Ninja Crispi PowerPod and its accompanying glass containers are neatly nested and stored within a kitchen cabinet, demonstrating its space-saving design.

### TROUBLESHOOTING

---

If you encounter any issues with your Ninja Crispi Air Fryer, please refer to the following general advice:

- **Unit Not Turning On:** Ensure the PowerPod is securely plugged into a functioning 3-prong electrical outlet. Check if the PowerPod is correctly seated on the container (or adapter for the 4-quart container).
- **Food Not Cooking Evenly:** Ensure not to overcrowd the crisper plate. For best results, arrange food in a single layer. Flip or shake food halfway through the cooking cycle.
- **PowerPod Shuts Off During Operation:** The PowerPod has a safety feature that automatically turns it off if it is lifted from the container during cooking. Simply place it back securely to resume.
- **Smoke Emitting from Unit:** A small amount of smoke may occur during initial use. If excessive smoke occurs, unplug the unit immediately and allow it to cool. Ensure the crisper plate and container are clean and free of excess oil or food debris.

For persistent issues, please contact Ninja customer support.

## SPECIFICATIONS

---

Feature	Detail
Brand	Ninja
Model Name	Ninja FN101BL
Product Dimensions	13.38"D x 11.97"W x 13.58"H
Color	Blue
Capacity	4 Quarts (large container) & 6 Cups (small container)
Material	Metal (PowerPod), Borosilicate Glass (Containers)
Output Wattage	1500 Watts
Voltage	120 Volts
Control Method	Touch
Special Features	Automatic Shut-Off, Programmable, Temperature Control, Timer
Has Nonstick Coating	No (Glass cooking surface is 100% PFAS free)
Is Dishwasher Safe	Yes (Containers, crisper plates, adapter, lids)

## WARRANTY AND SUPPORT

---

This product is listed as a 'Renewed' item. For specific warranty details and support options, please refer to the documentation included with your purchase or contact Ninja customer service directly. General support information can often be found on the manufacturer's official website.