



[Manuals.plus](#) /

› [Bright Starts](#) /

› Bright Starts Giggle & Rattle Gift Set Instruction Manual (Model 17879-000)

Bright Starts 17879-000

Bright Starts Giggle & Rattle Gift Set Instruction Manual

Model: 17879-000 | Brand: Bright Starts

INTRODUCTION

This instruction manual provides important information for the safe and proper use of your Bright Starts Giggle & Rattle Gift Set. This set includes two interactive baby toys: the Grab & Giggle Monkey and the Giggle & Glow Musical Elephant. Both toys are designed to engage babies aged 6 months and up through sensory exploration and developmental play.



Image: The Bright Starts Giggle & Rattle Gift Set, featuring the Grab & Giggle Monkey and the Giggle & Glow Musical Elephant.

SAFETY INFORMATION

- Always supervise infants during play.
- Inspect toys regularly for damage. Discard if any parts are broken or loose.
- Keep batteries out of reach of children. If swallowed, seek immediate medical attention.
- Do not immerse electronic components in water.
- This product is intended for children aged 6 months to 3 years.

PACKAGE CONTENTS

- 1 x Grab & Giggle Monkey Toy
- 1 x Giggle & Glow Musical Elephant Toy

SETUP

Battery Installation (Grab & Giggle Monkey)

1. Locate the battery compartment on the base of the Grab & Giggle Monkey toy.
2. Using a Phillips head screwdriver, loosen the screw and open the battery compartment cover.
3. Insert 3 AA batteries (not included), ensuring correct polarity (+/-).
4. Replace the battery compartment cover and tighten the screw.

Note: The product description states 3 AA batteries are required for the Grab & Giggle Monkey. The Giggle & Glow Musical Elephant's light-up and sound features are also battery-operated, but specific battery requirements for the elephant are not detailed in the provided information. Please refer to the product packaging for complete battery information for both toys.

OPERATING INSTRUCTIONS

Grab & Giggle Monkey



Image: Detailed view of the Grab & Giggle Monkey, highlighting its soft face and textured ears.

- **Grasping:** The flexible Oball design allows for easy grasping by little hands. Encourage your baby to hold and manipulate the toy.
- **Sounds & Lights:** The monkey features a wobbly base. Gently shake or tap the monkey to activate over 20 silly sounds, giggles, and multicolored lights.
- **Sensory Exploration:** The crinkly ears, colorful ribbons, and rattle-filled ball in the center provide various textures and sounds for sensory development.

**Great for
gifting!**



Image: A baby interacting with the Grab & Giggle Monkey, demonstrating its light and sound features.

Giggle & Glow Musical Elephant





**Feel & explore
the crinkle ears**

Image: Detailed view of the Giggle & Glow Musical Elephant, highlighting its features.

- **Grasping:** Similar to the monkey, the elephant's Oball design is easy for small hands to grip.
- **Sounds & Lights:** Shake the elephant gently to activate playful sounds and make its cheeks light up. The peanut rattle belly also adds to the auditory stimulation.
- **Tactile Exploration:** The crinkly ears and numerous finger holes encourage tactile exploration and fine motor skill development.

6M+

The original easy grasp

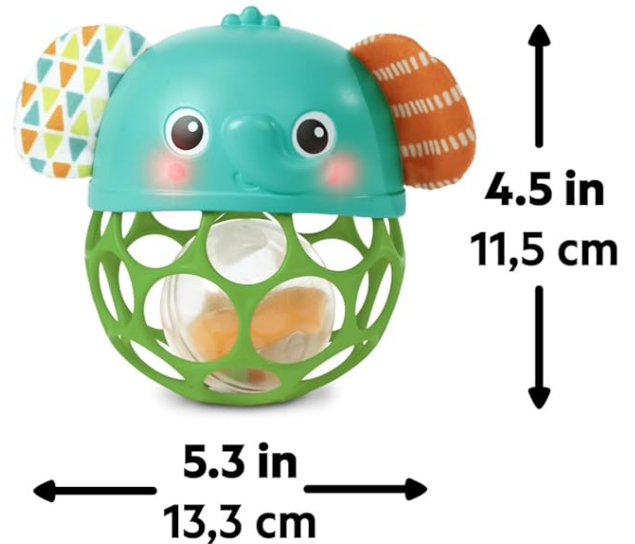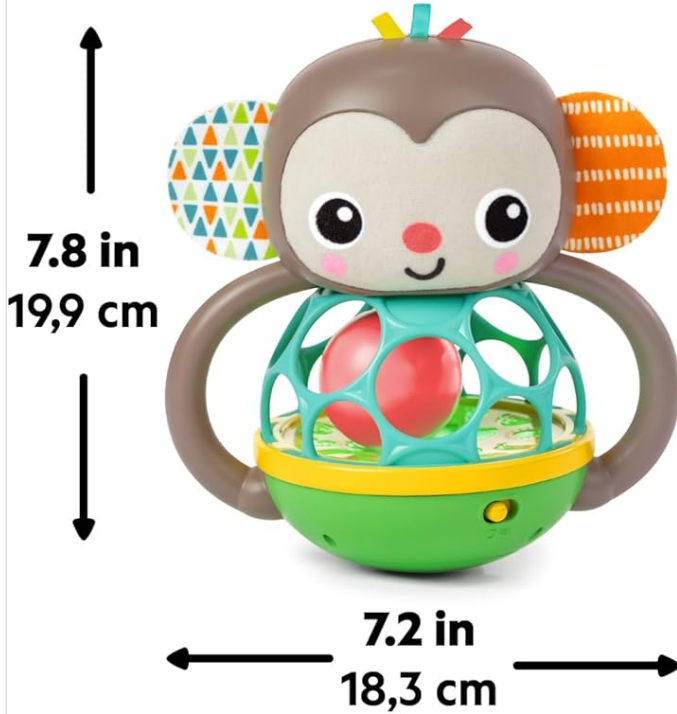

Fine Motor™



Lights & Music™



Cause & Effect™

Image: A baby interacting with the Giggle & Glow Musical Elephant, demonstrating its light and sound features.

MAINTENANCE & CARE

To clean the toys, wipe them with a damp cloth and mild soap. Do not immerse the electronic components (Grab & Giggle Monkey and Giggle & Glow Musical Elephant) in water. Allow to air dry completely before next use.

TROUBLESHOOTING

Problem	Solution
Toy not making sounds or lighting up.	Check battery installation. Ensure batteries are inserted with correct polarity. Replace with fresh batteries if necessary.
Toy appears dirty.	Wipe clean with a damp cloth and mild soap. Do not submerge in water.

SPECIFICATIONS

- **Model Number:** 17879-000
- **Brand:** Bright Starts
- **Material:** Plastic
- **Item Weight:** 1.32 pounds
- **Product Dimensions:** 4.76 x 9.06 x 7.83 inches
- **Recommended Age:** 6 months - 3 years
- **Batteries:** 3 AA batteries required (for Grab & Giggle Monkey, not included)
- **Care Instructions:** Wipe clean with a damp cloth and mild soap. Do not immerse in water.



Grasp easily with Oball technology

Image: Product dimensions for both the Monkey and Elephant toys.

WARRANTY & SUPPORT

For warranty information or product support, please refer to the contact details provided on the product packaging or visit

the official Bright Starts website.

© 2024 Bright Starts. All rights reserved.