

Blaupunkt 32FBG5010S

Blaupunkt 32FBG5010S 32-inch Full HD Smart TV User Manual

Model: 32FBG5010S (Also known as 32WGC5501S)

1. INTRODUCTION

Thank you for choosing the Blaupunkt 32FBG5010S 32-inch Full HD Smart TV. This manual provides essential information for setting up, operating, and maintaining your new television. Please read it thoroughly before use and keep it for future reference.

1.1 Safety Information

- Do not expose the TV to rain or moisture.
- Ensure proper ventilation around the TV.
- Do not block ventilation openings with items like newspapers, table-cloths, or curtains.
- Protect the power cord from being walked on or pinched.
- Unplug the TV during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

1.2 What's in the Box

- Blaupunkt 32FBG5010S Smart TV
- Power Cable
- Remote Control
- Stand (2 pieces)
- User Manual (this document)

2. SETUP

2.1 Unpacking and Placement

Carefully remove the TV from its packaging. It is recommended to have two people for this process. Place the TV on a stable, flat surface or prepare for wall mounting.

2.2 Attaching the Stand

If you are not wall-mounting the TV, attach the included stand pieces. Ensure the TV is placed face down on a soft, clean surface to prevent screen damage.



Image: Close-up view of the TV's stand, showing the two feet attached to the bottom of the television. This illustrates how the stand supports the TV.

Align the stand pieces with the designated slots on the bottom of the TV. Secure them with the provided screws. Refer to the diagram below for proper orientation.

2.3 Wall Mounting

The Blaupunkt 32FBG5010S is compatible with VESA 200x200 wall mounts. Follow the instructions provided with your wall mount kit. Ensure the wall can support the weight of the TV and the mount.



Image: Rear view of the Blaupunkt 32-inch Smart TV, showing the VESA mounting points and various input ports. This helps identify where to attach a wall mount or connect cables.

2.4 Connecting Peripherals

Connect your devices to the TV using the available ports. The TV features 2 HDMI ports and 1 USB port, along with Ethernet and S/PDIF connections.



Image: Side view of the Blaupunkt 32-inch Smart TV, highlighting the various input ports such as HDMI, USB, and others. This image assists users in locating and connecting external devices.

- **HDMI:** Connect Blu-ray players, game consoles, or set-top boxes.
- **USB:** Connect USB drives for media playback.
- **Power:** Connect the power cable to the TV and a wall outlet.

2.5 First Time Setup

After connecting the power cable, turn on the TV. Follow the on-screen instructions to select your language, connect to your Wi-Fi network, and log in to your Google account to activate Google TV features.

3. OPERATING YOUR TV

3.1 Remote Control Overview

The included remote control allows you to navigate the TV's interface, adjust settings, and access smart features. Familiarize yourself with the buttons for power, volume, channel, input selection, and Google Assistant.

3.2 Google TV Interface

Your Blaupunkt Smart TV runs on Google TV, providing a personalized experience with access to a vast library of apps and content. The home screen displays recommended content, installed apps, and quick access to settings.



Image: The Blaupunkt Smart TV screen showing the Google TV interface, with various streaming app icons and content recommendations. This demonstrates the user interface for smart TV functions.

3.3 Chromecast Built-in

Use Chromecast built-in to cast content from your compatible smartphone, tablet, or computer directly to your TV. Ensure your device and TV are on the same Wi-Fi network.

3.4 Voice Control (Google Assistant)

Press the Google Assistant button on your remote control and speak into the microphone to control your TV, search for content, get answers, and manage smart home devices.

3.5 Picture Settings (HDR)

Access the picture settings menu to adjust brightness, contrast, color, and sharpness. The TV supports HDR (High Dynamic Range) for enhanced contrast and color with compatible content.

3.6 Sound Settings (Dolby Audio)

Navigate to the sound settings to customize audio output. The TV features Dolby Audio for immersive sound. You can select different sound modes or adjust equalizer settings.

3.7 Connectivity (Wi-Fi, Bluetooth)

Connect your TV to the internet via Wi-Fi for smart features and streaming. Use Bluetooth 5.1 to connect wireless headphones, soundbars, or other compatible devices.

4. MAINTENANCE

4.1 Cleaning the TV

- Always unplug the TV before cleaning.
- Use a soft, dry cloth to wipe the screen and cabinet.
- For stubborn marks, lightly dampen the cloth with water or a mild, non-abrasive cleaner specifically designed for electronics.
- Never spray cleaner directly onto the screen.

4.2 Software Updates

Your TV may receive automatic software updates to improve performance and add new features. Ensure your TV is connected to the internet to receive these updates. You can also manually check for updates in the settings menu.

4.3 Care and Storage

When moving or storing the TV, use the original packaging if possible. Avoid exposing the TV to extreme temperatures or humidity. Do not place heavy objects on top of the TV.

5. TROUBLESHOOTING

If you encounter any issues with your TV, refer to the following common solutions before contacting support.

Problem	Possible Solution
No power	Check if the power cable is securely connected to the TV and the wall outlet. Try a different outlet.
No picture, but sound is present	Ensure the correct input source is selected. Check cable connections to external devices.
No sound, but picture is present	Check volume levels and mute status. Verify audio output settings. Check external audio device connections.
Cannot connect to Wi-Fi	Ensure your router is on and within range. Re-enter the Wi-Fi password. Restart the TV and router.
Remote control not working	Replace batteries. Ensure no obstructions between the remote and TV.

5.1 Factory Reset

If problems persist, a factory reset may resolve them. This will erase all personal settings and installed apps. Navigate to **Settings > System > About > Reset > Factory data reset**

6. SPECIFICATIONS

Feature	Detail
Model Number	32FBG5010S (32WGC5501S)
Display Size	32 Inches
Display Technology	LED
Resolution	1920x1080 (Full HD)
Refresh Rate	60 Hz
Operating System	Google TV
Audio Technology	Dolby Audio, 2.0 Surround Sound
HDMI Ports	2
USB Ports	1
Wireless Connectivity	Wi-Fi, Bluetooth 5.1
Other Connectivity	Ethernet, S/PDIF
Special Features	Chromecast built-in, Parental Control, Game Mode
Dimensions (with stand)	18.2 x 71.9 x 47 cm
Weight	3.8 kg
Power Consumption	26 W (typical)

7. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Blaupunkt website. Keep your purchase receipt as proof of purchase.

Online Support: www.blaupunkt.com