



[Manuals.plus](#) /

> [YHNNH](#) /

> YHNNH Brushless Electric Nail Gun (F30/422J/1022J) Instruction Manual

YHNNH F30/422J/1022J

YHNNH Brushless Electric Nail Gun Instruction Manual

Models: F30, 422J, 1022J

1. INTRODUCTION

This manual provides essential instructions for the safe and effective operation, maintenance, and troubleshooting of your YHNNH Brushless Electric Nail Gun. This versatile tool is designed for various fastening tasks in woodworking, upholstery, and DIY projects. Please read this manual thoroughly before using the tool to ensure proper handling and to prevent injury or damage.



Figure 1: Overview of YHNNH Brushless Electric Nail Guns (Models F30, 422J, 1022J). These tools are designed for efficient fastening in various applications.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electric tools to reduce the risk of fire, electric shock, and personal injury.

- **Wear Eye Protection:** Always wear safety glasses or goggles that comply with applicable standards.
- **Wear Hearing Protection:** Prolonged exposure to noise from power tools can cause hearing damage.
- **Keep Work Area Clear:** Ensure your workspace is well-lit and free from clutter.
- **Secure Workpiece:** Always secure the material you are working on to prevent movement.
- **Avoid Accidental Firing:** Keep fingers away from the trigger when not actively nailing.
- **Disconnect Power:** Always remove the battery pack before making adjustments, changing accessories, or storing the tool.
- **Use Correct Nails/Staples:** Only use nails or staples specified for your model to prevent jams and damage.
- **Do Not Overreach:** Maintain proper footing and balance at all times.
- **Store Safely:** Store the tool in a dry, secure place out of reach of children.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact your retailer.

- YHNNH Brushless Electric Nail Gun (Specific model: 422J, F30, or 1022J)
- 18V Lithium-Ion Battery (Quantity may vary by package, e.g., "One Big Battery")
- Battery Charger
- Instruction Manual
- (Optional) Abrasive Pad/Sandpaper (as seen in image)



Figure 2: Typical package contents for the 422J model, including the nail gun, one 18V battery, and a charger. An abrasive pad is also shown.

4. PRODUCT FEATURES

- **Durable Construction:** Magazine components are hard oxidized and surface heat-treated for extended tool life.
- **Optimized Performance:** Aerodynamic layout design provides enhanced power for efficient fastening.
- **Ergonomic Design:** User-friendly handle reduces operator fatigue during prolonged use.
- **Versatile Nail Compatibility:** Supports various nail and staple types depending on the model (e.g., 422J, 1022J, or F30).
- **18V Battery System:** Compatible with 18V B-series lithium batteries for reliable cordless operation.

5. SPECIFICATIONS

Refer to the following specifications for your YHNNH Brushless Electric Nail Gun:

General Specifications:

- **Power Source:** 18V DC (Battery Operated)
- **Battery Voltage:** 18V
- **Battery Capacity:** 3.0AH (typical, may vary)
- **Operating Pressure:** 0.4-0.8 MPa (for pneumatic-assisted models, if applicable)
- **Compatible Battery Types:** 18V B-series lithium batteries (e.g., BL1850B, BL1840B, BL1830B, BL1430B, BL1820B, BL1850, BL1840, BL1440, BL1415, BL1815N)
- **Incompatible Battery Types:** G Series battery (e.g., BL1813G, BL1413G, BL1415G, BL1430G, BL1815G) and 18V battery 1822 (194465-7)

Model-Specific Nail/Staple Specifications:

Model	Use Nail Model	Clip Capacity	Max Nail Length	Applicable Nail Types	Suitable Nail Sizes
422J	422J	100 PCS	22mm	Straight / U Staples	404J, 405J, 406J, 408J, 410J, 413J, 416J, 419J, 422J
1022J	1022J	100 PCS	22mm	U Staples	1004J, 1006J, 1008J, 1010J, 1013J, 1016J, 1019J, 1022J
F30	F30	(Not specified, assume 100 PCS)	30mm	Straight Nail	F10, F15, F20, F25, F30

6. SETUP

6.1. Charging the Battery

1. Connect the battery charger to a standard electrical outlet.
2. Slide the 18V Lithium-Ion battery pack onto the charger until it clicks into place.
3. Allow the battery to charge fully. The charger's indicator light will typically change color or turn off when charging is complete.
4. Once charged, remove the battery from the charger.

6.2. Installing the Battery

1. Ensure the nail gun's trigger is disengaged and the power switch (if present) is off.
2. Align the charged battery pack with the battery port on the bottom of the nail gun handle.
3. Slide the battery into the port until it securely locks into place. Do not force it.
4. To remove the battery, press the release button(s) on the battery pack and slide it out.

6.3. Loading Nails/Staples

Always ensure the battery is removed before loading or unloading fasteners.

1. Locate the magazine release latch, typically at the rear or bottom of the magazine.
2. Press the latch and pull the magazine open or slide it back.
3. Insert a strip of appropriate nails or staples into the magazine, ensuring the points face forward and the fasteners are

correctly oriented. Refer to the specifications for compatible nail types and sizes for your specific model (422J, 1022J, or F30).

4. Push the magazine closed until it latches securely.
5. Gently pull the follower back until it engages with the fasteners.

7. OPERATION

7.1. Before Each Use

- Inspect the tool for any damage or loose parts.
- Ensure the battery is fully charged and securely installed.
- Verify that the correct type and size of nails/staples are loaded.
- Always wear appropriate personal protective equipment (PPE), including eye and hearing protection.

7.2. Firing the Nail Gun

1. Place the nose of the nail gun firmly against the workpiece where you intend to drive a fastener.
2. Ensure the contact trip (if present) is fully depressed against the surface.
3. Squeeze the trigger to fire a nail or staple.
4. Release the trigger and lift the tool from the workpiece.
5. For continuous firing (if supported by model), keep the trigger depressed and repeatedly press the nose against the workpiece.

7.3. Adjusting Depth (If Applicable)

Some models may feature a depth adjustment mechanism, typically a dial or lever near the nose of the tool. Consult your specific model's design for details:

- **To increase depth:** Adjust the mechanism to drive fasteners deeper into the material.
- **To decrease depth:** Adjust the mechanism to drive fasteners less deeply, leaving them flush or slightly proud.
- Always test the depth setting on a scrap piece of material before working on your final project.

8. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your nail gun.

- **Cleaning:** Keep the tool clean and free of dust, debris, and resin buildup. Use a dry cloth or compressed air. Do not use solvents.
- **Magazine Inspection:** Periodically check the magazine for any obstructions or damage. Ensure the follower moves freely.
- **Fastener Path:** Inspect the nose and firing pin area for any bent or broken parts.
- **Battery Care:** Store batteries in a cool, dry place. Do not expose them to extreme temperatures. Charge them regularly, even if not in use, to maintain battery health.
- **Storage:** When not in use, remove the battery and store the nail gun in a dry, secure location, out of reach of children.

9. TROUBLESHOOTING

Before attempting any repairs, always remove the battery pack from the tool.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Tool does not fire	Battery not installed or discharged; Safety contact not fully depressed; Fastener jam.	Ensure battery is charged and installed correctly; Press nose firmly against workpiece; Clear any jammed fasteners.
Nails/Staples jam frequently	Incorrect fastener size/type; Damaged fasteners; Dirty magazine; Worn driver blade.	Use correct fasteners; Inspect fasteners for damage; Clean magazine; Contact service for driver blade replacement.
Fasteners not driven to full depth	Low battery charge; Depth adjustment incorrect; Insufficient pressure on workpiece.	Recharge battery; Adjust depth setting (if applicable); Apply more firm pressure to the tool.
Tool overheats	Prolonged heavy use; Blocked ventilation slots.	Allow tool to cool down; Clear any obstructions from ventilation slots.

10. WARRANTY AND SUPPORT

For warranty information, technical support, or to order replacement parts, please refer to the documentation provided with your purchase or contact the manufacturer directly through their official website or customer service channels. Keep your proof of purchase for warranty claims.

11. DISPOSAL INFORMATION

Do not dispose of electric tools or battery packs with household waste. They must be collected separately and recycled in an environmentally sound manner. Contact your local authority for information regarding available collection schemes.

