

Manuals.plus /
› YOHOOLYO /
› YOHOOLYO Instant Print Kids Camera PC02 User Manual

YOHOOLYO PC02

YOHOOLYO Instant Print Kids Camera PC02 User Manual

Model: PC02 | Brand: YOHOOLYO

INTRODUCTION

Thank you for choosing the YOHOOLYO Instant Print Kids Camera, model PC02. This camera is designed to provide a fun and creative experience for children aged 3-12, allowing them to capture photos, record videos, and print their memories instantly. Please read this manual carefully to ensure proper use and maintenance of your device.

Appareil Photo Multifonction Instantanée Enfants

Cadeaux pour enfants de 3 à 14 ans



Impression
instantanée



Minuteur
de Photographie



Mode rafale



Vidéo HD 1080p



Lecteur MP3



Dessins et
autocollants



Cadres photo
et filtres



Jeux amusants



Flash



Carte SD 32 Go

Image: The YOHOOLYO Instant Print Kids Camera in use by a child.

WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- Instant Camera x1
- Black and White Thermal Paper Rolls x3
- Colored Pens x6
- 32GB SD Card x1
- USB Data Cable x1
- Sticker Sheets x3
- Lanyard x1
- Instruction Manual x1



Contenu de la boîte



Feuilles d'autocollants
mignons x3



Stylos de
couleur x6



Rouleaux de papier
thermique noir et blanc x3



Cordon x1



Carte Micro SD
32 Go x1



Manuel d'utilisation x1



Câble USB Type-C x1



Appareil photo instantanée
pour enfants x1



Image: Contents of the YOHOOLYO Instant Print Kids Camera package.

SETUP

1. Charging the Camera

Before first use, fully charge the camera using the provided USB data cable. Connect the cable to the camera's USB port and a compatible USB power adapter (not included). The charging indicator will show the charging status.

2. Inserting the SD Card

Locate the SD card slot on the side of the camera. Insert the included 32GB SD card into the slot until it clicks into place. Ensure the card is inserted correctly to avoid damage. The SD card is essential for storing photos and videos.

3. Loading Thermal Paper

1. Open the paper compartment cover on the side of the camera.
2. Insert a thermal paper roll, ensuring the paper feeds out from the top and extends 2.5 to 5 cm (1-2 inches) from the output slot.
3. Close the cover firmly until it clicks into place.



Image: Steps for replacing the thermal paper roll.

OPERATING INSTRUCTIONS

Power On/Off

Press and hold the power button to turn the camera on or off.

Taking Photos

In photo mode, press the shutter button to capture an image. The camera supports 12 Megapixel effective still resolution.

Video Recording

Switch to video mode and press the shutter button to start recording. Press again to stop. The camera records in 1080p HD resolution. Ensure an SD card is inserted for video recording.

Your browser does not support the video tag.

Video: Demonstration of the camera's video recording capabilities and features.

Instant Printing

After taking a photo, you can choose to print it instantly. The camera uses inkless thermal printing technology, producing black and white prints. These prints can then be colored using the provided pens.



Impression en noir et blanc



Stockage de photos couleur

Mode de stockage des photos couleur



Pas besoin de carte SD –
Imprimez immédiatement
après la prise de vue

01X 8M

Avec une carte SD de
32 Go – Photographie
illimitée

01X 8M



Image: Instant black and white print versus color digital storage.

Zoom Function

The camera features a 16x digital zoom. Use the navigation buttons to zoom in or out while composing your shot.

ZOOM 16X – Agrandir l'image



4X



8X



16X



Image: Digital zoom levels (4x, 8x, 16x).

Timer Function

Activate the timer function from the menu for delayed photos. Options typically include 3, 5, or 10 seconds, allowing time to pose for group shots or selfies.

Minuteur de Photographie



Image: Camera timer function in use.

Creative Features


Explore various built-in features to enhance creativity:

- **Photo Frames:** Choose from 18 different frames to add fun borders to your pictures.
- **Filters:** Apply 6 different color filters to change the mood of your photos.
- **Mirror Effects:** Experiment with 6 mirror effects for unique compositions.
- **Flash:** The automatic flash helps capture clear photos in low-light conditions.

Une variété de cadres photo et de filtres amusants

18

18 Motifs de bordure

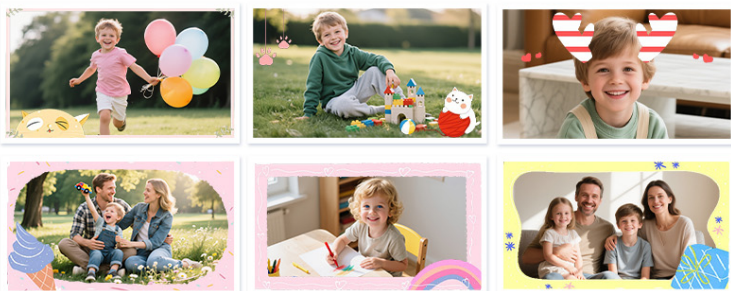

6

6 Effets miroir



6

6 Filtres



Image: Examples of photo frames, mirror effects, and filters.

Games and MP3 Player

The camera includes 5 educational games and an MP3 player for entertainment. Transfer MP3 files to the SD card to enjoy music.

5 Jeux éducatifs et Lecteur MP3

Fatigué de filmer ? Écoutez une chanson ou jouez !



10 Niveaux de
volume réglables



Image: Camera's educational games and MP3 player features.

MAINTENANCE

Cleaning

Use a soft, dry cloth to clean the camera body and screen. Do not use liquid cleaners or abrasive materials. Keep the lens free of dust and fingerprints.

Paper Replacement

Refer to the 'Loading Thermal Paper' section under Setup for detailed instructions on replacing paper rolls. Always use compatible thermal paper.

Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Charge the camera regularly, even if not in use for extended periods. Store the camera in a cool, dry place.

TROUBLESHOOTING

- **Camera won't turn on:** Ensure the battery is charged. Connect the camera to a power source and try again.
- **Cannot take photos/record videos:** Check if the SD card is properly inserted and has sufficient free space. Format the SD card if necessary (this will erase all data).
- **Prints are blank or faded:** Verify that the thermal paper is loaded correctly and that the paper roll is not exhausted. Ensure the paper is thermal paper and not standard paper.
- **Poor print quality:** Check the paper roll for any damage or moisture. Ensure the print head is clean (refer to maintenance section).
- **Camera freezes:** Try resetting the camera by pressing the reset button (if available, usually a small pinhole) or by holding the power button for an extended period (10-15 seconds).

SPECIFICATIONS

Feature	Specification
Brand	YOHOOLYO
Model	PC02
Color	Blue
Product Type	Compact Digital Camera
Screen	2.4-inch LED
Effective Still Resolution	12 Megapixels
Video Resolution	1080p HD
Zoom Type	Digital Zoom (16x)
Special Features	Automatic Flash, Timer, Photo Frames, Filters, Mirror Effects, Games, MP3 Player
Connectivity Technology	USB
Battery Type	Lithium-ion (1500 mAh)
Storage	32GB SD Card (included), supports up to 128GB

Package Dimensions (L x W x H)	14 x 13.3 x 6.4 cm
Weight	372 grams

WARRANTY AND SUPPORT

Manufacturer Warranty

This YOHOOLYO product comes with a **2-year manufacturer warranty**. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use.

Customer Support

For any questions, technical assistance, or warranty inquiries, please contact YOHOOLYO customer support through the retailer's platform or the official YOHOOLYO website. Please have your model number (PC02) and purchase date ready when contacting support.

© 2025 YOHOOLYO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0FPC6T8GN>

More documents and user manuals: <https://manuals.plus/>