

[Manuals.plus](#) /

› [YOHOOPLYO](#) /

› YOHOOLYO PC02 Kids Instant Print Camera User Manual

YOHOOPLYO PC02

YOHOOPLYO PC02 Kids Instant Print Camera User Manual

Model: PC02

1. INTRODUCTION

Thank you for choosing the YOHOOLYO PC02 Kids Instant Print Camera. This camera is designed to provide a fun and creative photography experience for children aged 3-12. It features instant thermal printing, 1080P HD video recording, a 2.4-inch screen, and various creative modes. Please read this manual carefully to ensure proper use and maintenance of your camera.

2. SAFETY INFORMATION

- This product is intended for children aged 3 and above. Adult supervision is recommended.
- Do not disassemble or attempt to repair the camera yourself. Contact customer support for assistance.
- Keep the camera away from water, moisture, and extreme temperatures.
- Use only the provided USB cable for charging.
- Ensure the paper compartment is securely closed after loading paper to prevent damage.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- YOHOOLYO Kids Instant Print Camera (PC02) x1
- Printing Paper Rolls x3 (one pre-loaded)

- Colored Pens x6
- Adjustable Lanyard x1
- 32GB Micro SD Card x1
- USB Type-C Cable x1
- User Manual x1
- Cute Sticker Sheets x3



Figure 1: Package Contents. The image displays the YOHOOLYO Kids Instant Print Camera along with its accessories: three rolls of thermal paper, six colored pens, an adjustable lanyard, a 32GB Micro SD card, a USB Type-C charging cable, the user manual, and three sheets of cute stickers.

4. CAMERA OVERVIEW

Familiarize yourself with the camera's features and controls.



Figure 2: Multi-Function Overview. This image shows the camera's front with its lens and print slot, surrounded by icons representing its various features like instant printing, video recording, games, and photo customization options.

4.1. Screen and Display

The camera features a 2.4-inch IPS LCD screen for clear viewing of photos, videos, and menu options.



Figure 3: 2.4-inch IPS LCD Screen. The screen displays the camera interface, and the image illustrates its use for capturing 1080P HD video and the effect of the flash.

4.2. Control Buttons

The camera has intuitive buttons for easy navigation and operation:

- **Power/Mode Button:** Long press to power on/off. Short press to switch between photo, video, and playback modes.
- **Shutter/OK Button:** Press to take a photo or start/stop video recording. Also used to confirm selections in menus.
- **Navigation Buttons (Up/Down/Left/Right):** Used to navigate menus, zoom in/out, and select options.
- **Print Button:** In photo mode, press to print the current photo. In settings, used to adjust print

options.

5. SETUP

5.1. Charging the Camera

Before first use, fully charge the camera using the provided USB Type-C cable. Connect the cable to the camera's charging port and a compatible USB power source. The charging indicator light will show the charging status.

5.2. Inserting the SD Card

The camera comes with a 32GB Micro SD card. Locate the SD card slot on the side of the camera. Insert the Micro SD card with the gold contacts facing down until it clicks into place. The camera supports up to 128GB SD cards.

5.3. Loading Print Paper

The camera uses thermal printing paper. Follow these steps to load a new roll:

1. Open the paper compartment cover on the side of the camera.
2. Insert the paper roll with the paper tip extending approximately 2.5-5 cm out of the exit slot. Ensure the paper is oriented correctly for printing.
3. Close the cover securely until it clicks.

5 Puzzle Games & MP3 Music Player

Tired of filming? Listen to some songs, play a game!



Figure 4: How to Replace the Paper Roll. This image illustrates the process of opening the paper compartment, correctly placing the thermal paper roll, and closing the compartment.

6. OPERATING THE CAMERA

6.1. Power On/Off

Long press the **Power/Mode** button to turn the camera on or off.

6.2. Navigation

Use the **Navigation Buttons** (Up/Down/Left/Right) to move through menu options and settings. Press the **Shutter/OK** button to confirm a selection.

6.3. Photo Mode

Short press the **Power/Mode** button to switch to Photo Mode. The screen will display the live view.

- **Taking Photos:** Press the **Shutter/OK** button to capture a photo.
- **Zoom:** Use the Up/Down navigation buttons to adjust the 16x digital zoom.
- **Flash:** The camera has a built-in flash for low-light conditions. The flash can be toggled on or off via the settings menu or a dedicated button (if available).



Figure 5: 16x Zoom and Shooting Modes. This image illustrates the camera's zoom capabilities and highlights options for time-lapse and burst shooting.

6.4. Video Mode

Short press the **Power/Mode** button to switch to Video Mode. Press the **Shutter/OK** button to start recording. Press again to stop. The camera records in 1080P HD resolution.

6.5. Printing

After taking a photo, you can instantly print it. The camera uses thermal printing technology, requiring no ink.

- **Instant Print:** In photo mode, if the print icon is enabled, photos will print automatically after capture.
- **Adjusting Print Density:** You can adjust the print density (7 levels) and choose between Grayscale or Dot-Matrix print modes in the camera's settings menu.



200DPI
Black & White Printing
Clear and Smooth



Grayscale Mode **Dot-Matrix Mode**



7 Levels of Print Density

1 2 3 4 5 6 7

Figure 6: Print Modes and Density. This image demonstrates the visual difference between Grayscale and Dot-Matrix printing, and the range of print density settings available.

Your browser does not support the video tag.

Video 1: Adjusting Printing Mode and Density. This video demonstrates how to navigate the camera's settings to change the printing mode (Grayscale or Dot-Matrix) and adjust the print density for desired output.

6.6. Creative Features

Enhance your photos with various built-in creative options:

- **Photo Frames & Filters:** Choose from 18 photo frames, 6 color filters, and 6 mirror effects to personalize your pictures.
- **Time-Lapse & Burst Shooting:** Set a 3, 5, or 10-second delay for time-lapse photos, or use burst mode to capture 3 or 5 photos in a row.
- **Doodling & Stickers:** Use the included colored pens to draw on your printed photos and decorate them with the fun sticker sheets.

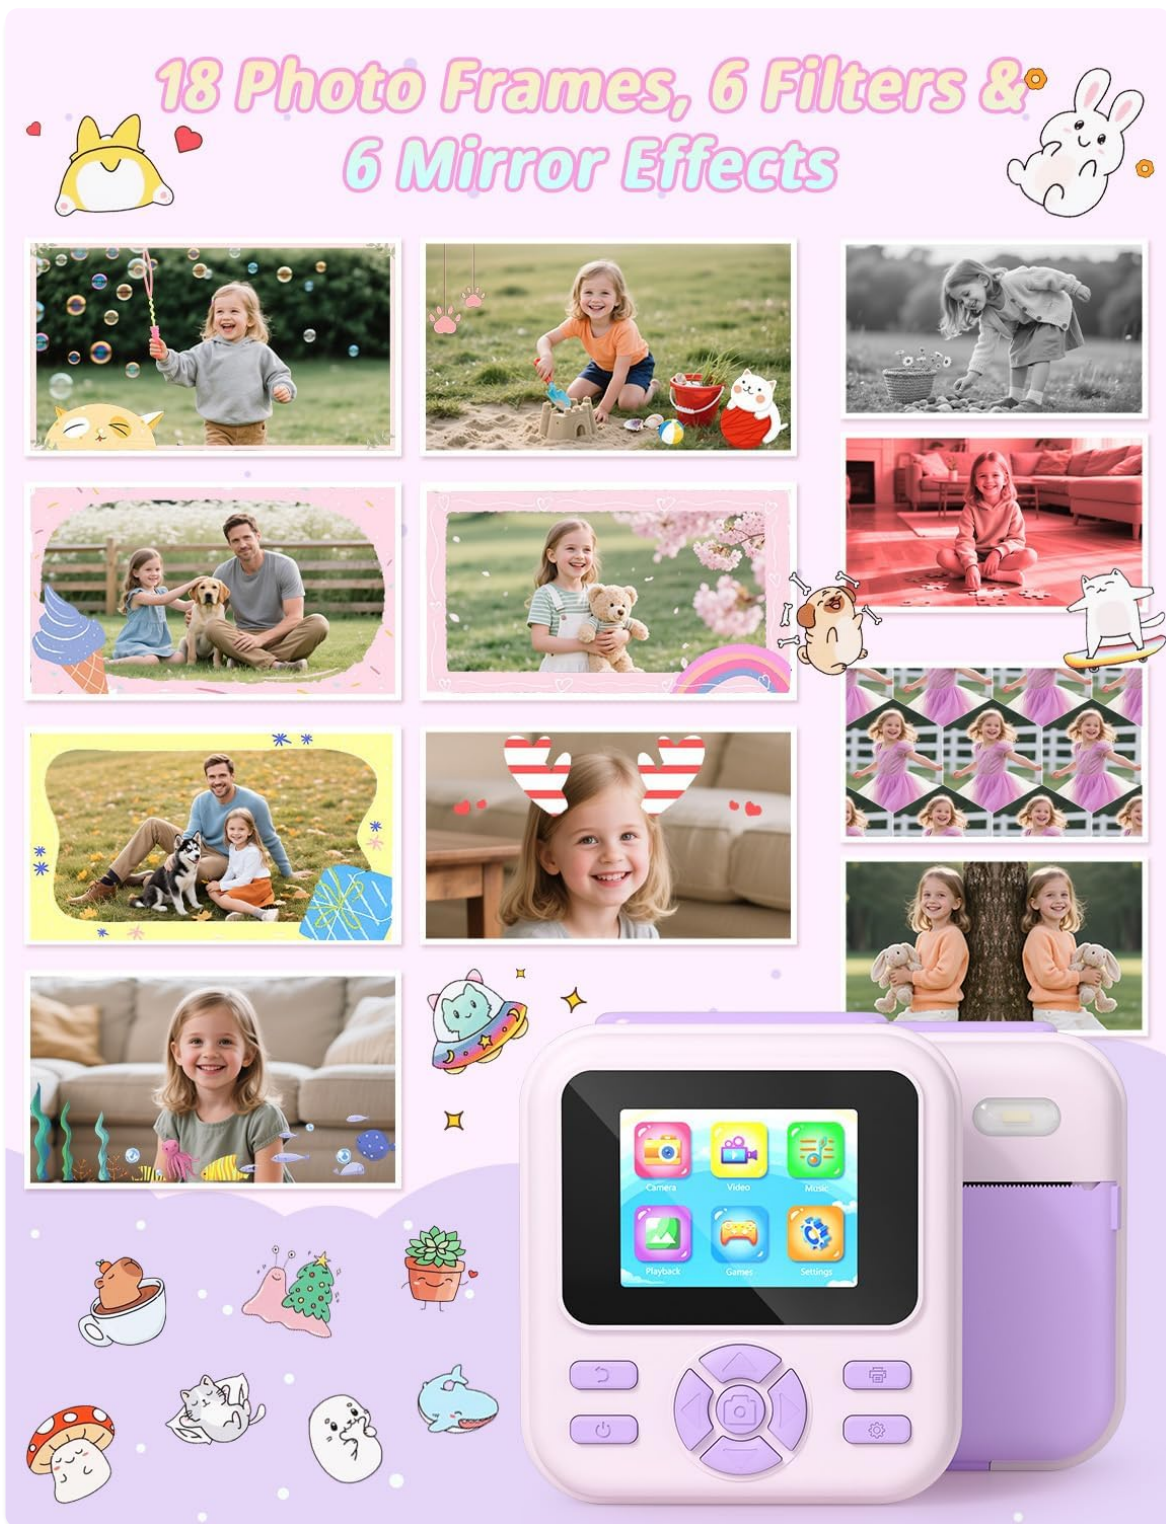


Figure 7: Photo Frames, Filters, and Mirror Effects. This image highlights the variety of creative options available to customize photos directly from the camera.



Figure 8: Doodling and Stickers. This image shows how children can personalize their instant prints using the provided colored pens and sticker sheets.

6.7. Other Features

- **MP3 Player:** The camera includes a built-in MP3 player for listening to music.
- **Educational Games:** Enjoy 5 pre-loaded educational games for entertainment.
- **Language Settings:** The camera supports multiple languages, including French, allowing children to operate it independently.



Figure 9: Games and MP3 Player. The camera offers entertainment beyond photography with built-in games and music playback.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body and screen. Do not use liquid cleaners.
- **Battery Care:** The 1500mAh rechargeable battery provides up to 5 hours of standby time. For optimal battery life, avoid fully discharging the battery frequently.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight when not in use.

Bringing Black & White Photos to Life with Color Pencils

Every child is the color master of his/her own story

Create Your Own Unique Skin for Your Camera with Stickers

3 Sticker Sheets, a total of 55 Fun Patterns

Figure 10: Battery Life and Dimensions. This image highlights the camera's 1500mAh battery capacity and its compact size, along with its memory card support.

8. TROUBLESHOOTING

- **Camera not turning on:** Ensure the battery is charged. Connect the camera to a power source using the USB cable.
- **Poor print quality (too dark/light):** Adjust the print density in the camera's settings menu. Ensure the paper roll is loaded correctly.

- **Paper jam:** Open the paper compartment and carefully remove any jammed paper. Reload the paper roll correctly.
- **SD card error:** Ensure the SD card is inserted correctly. Try reformatting the SD card through the camera's settings (this will erase all data).

9. SPECIFICATIONS

Feature	Specification
Model Name	PC02
Screen Size	2.4-inch IPS LCD
Video Resolution	1080P HD
Zoom	16x Digital Zoom
Printing Technology	Thermal Printing (Ink-Free)
Print Modes	Grayscale, Dot-Matrix
Print Density Levels	7
Battery Capacity	1500mAh
Memory Card	32GB Micro SD (included), supports up to 128GB
Special Features	MP3 Player, Educational Games, Color Filters, Photo Frames, Mirror Effects, Time-Lapse, Burst Shooting
Recommended Age	3-12 years
Dimensions	14 x 13.1 x 6.5 cm
Weight	370 g

10. WARRANTY AND SUPPORT

Your YOHOOLYO PC02 Kids Instant Print Camera comes with a standard manufacturer's warranty.

For detailed warranty information, please refer to the product packaging or contact YOHOOLYO customer support. If you encounter any issues or have questions about your camera, please reach out to our support team for assistance.