

Jadfezy b66f924f-6423-4d17-9922-51c16396415e

Jadfezy FHD 1080P Action Camera User Manual

Model: b66f924f-6423-4d17-9922-51c16396415e

1. INTRODUCTION

Thank you for choosing the Jadfezy FHD 1080P Action Camera. This manual provides essential information for setting up, operating, and maintaining your camera. Please read it thoroughly before use to ensure optimal performance and longevity of your device. This camera is designed to capture high-quality video and photos in various environments, including underwater, making it ideal for sports and outdoor activities.



JUST CHALLENGE IT!



Image 1.1: The Jadfezy Action Camera shown in an outdoor setting, emphasizing its suitability for adventure and the included 32GB memory card.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

- 1 x Jadfezy Action Camera
- 1 x 32GB Memory Card
- 2 x Rechargeable Batteries (one pre-installed)
- 1 x Waterproof Case
- 1 x USB Cable
- 1 x User Manual (Multilingual)
- Various Installation Accessories (for bicycle, helmet, self-stick, etc.)



Image 2.1: A comprehensive view of all items included in the Jadfezy Action Camera package, such as the camera, waterproof housing, two batteries, a 32GB memory card, USB cable, and multiple mounting accessories.

3. PRODUCT OVERVIEW

The Jadfezy Action Camera features a compact design with a 2-inch LCD screen for real-time viewing and playback. It is equipped with a lens for capturing FHD 1080P video and 12MP photos. The camera is designed to be used with its included waterproof case for underwater activities.



Image 3.1: The Jadfezy Action Camera, enclosed in its waterproof housing, displayed with its accessories including a 32GB memory card and two rechargeable batteries. The camera's screen shows a vibrant image of children swimming.



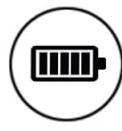
FHD 1080P/30FPS



12 MP



Time-lapse/
Loop video



2 × 900 mAh



30m/98ft



Wide-Angle

Image 3.2: The camera's 2-inch LCD screen is shown displaying a paragliding scene, illustrating its real-time viewing capability. Feature icons below highlight key specifications such as video resolution, photo quality, battery capacity, and waterproof depth.

4. GETTING STARTED

4.1 Battery Installation

1. Locate the battery compartment on the bottom of the camera.
2. Slide the battery cover open.
3. Insert a fully charged 900mAh battery, ensuring the contacts align correctly.
4. Close the battery cover securely.



Image 4.1: A close-up of the two included 900mAh rechargeable batteries, ready for installation or charging.

4.2 Memory Card Installation

1. Open the memory card slot cover, usually located on the side of the camera.
2. Insert the included 32GB Micro SD card with the gold contacts facing the front of the camera, until it clicks into place.
3. To remove, gently push the card until it springs out.

4.3 Charging the Batteries

Connect the camera to a USB power source using the provided USB cable. The charging indicator light will illuminate. It is recommended to fully charge both batteries before first use. Alternate use of the two batteries extends shooting time.

4.4 Powering On/Off

- **Power On:** Press and hold the Power/Mode button for a few seconds until the screen turns on.
- **Power Off:** Press and hold the Power/Mode button again until the screen turns off.

5. BASIC OPERATION

5.1 Mode Switching

Press the Power/Mode button repeatedly to cycle through different modes: Video Recording, Photo Capture, and Playback.

5.2 Video Recording

1. Switch to Video Recording mode.
2. Press the OK/Shutter button to start recording. A red indicator light will flash, and a timer will appear on the screen.
3. Press the OK/Shutter button again to stop recording. The indicator light will stop flashing.

5.3 Photo Capture

1. Switch to Photo Capture mode.
2. Press the OK/Shutter button to take a photo. The screen will briefly flash.

5.4 Waterproof Case Usage

The included waterproof case allows the camera to be submerged up to 30 meters (98 feet). Ensure the case is properly sealed before any underwater use. Test the case without the camera first to confirm its integrity.



Image 5.1: The Jadfezy Action Camera, securely housed in its waterproof casing, captures an underwater scene with vibrant marine life, demonstrating its 30M/98FT waterproof capability.

6. ADVANCED FEATURES

6.1 Time-Lapse Video

Capture stunning time-lapse sequences by setting the camera to Time-Lapse mode and selecting your desired interval. This feature condenses long periods into short, dynamic videos.

6.2 Dash Cam Functionality

The camera can function as a dash cam, automatically recording footage in a loop. This is useful for capturing road trips or for security purposes while driving.

- **Time-Lapse video**
- **Dash Cam**



Image 6.1: The camera's screen shows a time-lapse video of city traffic at night, illustrating its Time-Lapse and Dash Cam capabilities.

6.3 Self-Timer and Burst Photo

Utilize the self-timer for delayed photo capture, allowing you to be in the shot. The burst photo mode captures multiple images in quick succession, ideal for fast-moving action.



Image 6.2: A visual representation of the camera's versatile shooting modes, including Self-Timer for group photos, Dash Cam for vehicle recording, Time-Lapse for capturing gradual changes, and Burst Photo for action sequences.

7. MOUNTING AND ACCESSORIES

The Jadfezy Action Camera comes with a variety of accessories designed for diverse mounting options. These include mounts for bicycles, helmets, skateboards, and self-sticks, allowing you to capture footage from unique perspectives during your activities.

Refer to Image 2.1 in the Package Contents section for a visual representation of the included accessories.

8. MAINTENANCE

8.1 Cleaning

- Use a soft, lint-free cloth to clean the camera lens and screen.
- After underwater use, rinse the waterproof case with fresh water and allow it to air dry.
- Do not use harsh chemicals or solvents.

8.2 Battery Care

- Store batteries in a cool, dry place.
- Avoid fully discharging batteries for extended periods.
- If not using the camera for a long time, remove the batteries.

8.3 Storage

Store the camera and accessories in a dry, dust-free environment away from direct sunlight and extreme temperatures.

9. TROUBLESHOOTING

- **Camera not turning on:** Ensure batteries are fully charged and correctly inserted. Try using the second battery.
- **Recording issues (freezing, poor quality):** Check if the memory card is properly inserted and has sufficient free space. Format the memory card if issues persist (this will erase all data). Ensure the memory card is a high-speed Micro SD card.
- **Short battery life:** Ensure batteries are fully charged. Reduce screen brightness or turn off Wi-Fi if not needed to conserve power.
- **Water leakage in waterproof case:** Ensure the rubber seal is clean and free of debris. Verify the case is securely latched. Do not use if the seal is damaged.
- **Unable to transfer files to computer:** Ensure the USB cable is securely connected. Try a different USB port or cable. Ensure the camera is in the correct mode for data transfer (if applicable). A card reader can also be used.

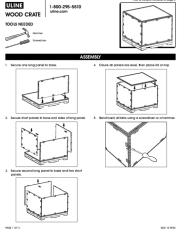
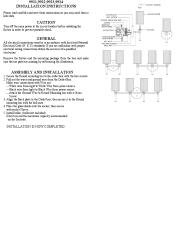
10. SPECIFICATIONS

Feature	Specification
Brand	Jadfezy
Model Number	b66f924f-6423-4d17-9922-51c16396415e
Video Capture Resolution	1080p
Photo Sensor Technology	CMOS
Screen Size	2 Inches (Visible screen diagonal: 6 cm)
Flash Memory Type	Micro SD (32GB card included)
Batteries	2 x 900mAh Nonstandard Battery (included)
Waterproof Depth	Up to 30M / 98FT (with waterproof case)
Connectivity Technology	USB
Item Weight	10.8 ounces
Color	Black

11. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the retailer. Keep your proof of purchase for any warranty claims.

Related Documents - b66f924f-6423-4d17-9922-51c16396415e

	<p>Paul Neuhaus Q-AKUSTIK Smart Home LED Light Fitting Instructions</p> <p>Comprehensive fitting instructions and technical specifications for the Paul Neuhaus Q-AKUSTIK Smart Home LED light, model 6423-79. Learn how to install, connect, and operate your smart lighting system.</p>
	<p>Uline Wood Crate Assembly Instructions</p> <p>Step-by-step guide for assembling a Uline wood crate, including tools needed and detailed instructions for secure assembly.</p>
	<p>Installation Instructions for 9921, 9922, 9923, 9924 Lighting Fixtures</p> <p>Step-by-step installation guide for lighting fixtures model numbers 9921, 9922, 9923, and 9924, including safety precautions, general information, and assembly procedures.</p>
	<p>Coleman 2-Burner Propane Grill Stove User Manual</p> <p>Comprehensive user manual for the Coleman 2-Burner Propane Grill Stove, covering assembly, operation, safety precautions, maintenance, and warranty information. Includes detailed instructions for lighting, cooking, cleaning, and storage.</p>
	<p>Celtic 64mm Cavity Sliding Door Installation Guide Criterion</p> <p>Comprehensive installation instructions for the Criterion Celtic 64mm Cavity sliding door system. Learn how to install tracks, rollers, doors, and achieve proper clearances for a smooth operation.</p>
	<p>Cisco ASR 9000 Series IOS XR Software Release 4.3.2 Release Notes</p> <p>Comprehensive release notes for Cisco IOS XR Software Release 4.3.2, detailing features, system requirements, hardware support, and caveats for Cisco ASR 9000 Series Aggregation Services Routers. Note: This product has reached end-of-life status.</p>