

[Manuals.plus](#) /

› [SURFOU](#) /

› SURFOU Wireless Doorbell Set User Manual (Model N128)

SURFOU N128

SURFOU Wireless Doorbell Set User Manual (Model N128-2B3R)

Model: N128 (2 Push Buttons + 3 Receivers)

INTRODUCTION

Thank you for choosing the SURFOU Wireless Doorbell Set. This manual provides detailed instructions for the installation, operation, and maintenance of your new doorbell system. Designed for convenience and reliability, this set features an ultra-long operating range, waterproof push buttons, and customizable chime options to enhance your home security and comfort.

PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Wireless Push Button (x2)
- Plug-in Receiver (x3)
- User Manual
- Welcome Guide
- 12V 23A Alkaline Battery (for push buttons)
- Double-sided Adhesive Tapes (x2)
- Screws (x2)
- Wall Anchors (x2)

WIRELESS RANGE OF 1300FT



1-3 Years
Maximum Lifespan



Penetrating
Power



Image: Contents of the SURFOU Wireless Doorbell Set, showing push buttons, receivers, manual, battery, adhesive, screws, and wall anchors.



**DUSTPROOF
AND WATERPROOF**



-22°F to 158°F

(-30°C to 70°C)

Operating Temperature

Image: Dimensions of the SURFOU wireless doorbell receiver (7cm x 7cm) and push button (8.6cm x 3.5cm).

SETUP AND INSTALLATION

The SURFOU Wireless Doorbell Set is pre-paired for immediate use. Follow these steps for quick installation:

1. Install the Push Button Battery

1. Open the back cover of the push button.
2. Insert the provided 12V 23A alkaline battery, ensuring correct polarity.
3. Close the back cover securely.



2. Mount the Push Button

You have two options for mounting the push button:

Option A: Using Double-Sided Adhesive

1. Clean the desired mounting surface thoroughly to ensure it is dry and free of dust.
2. Peel off one side of the double-sided adhesive tape and apply it firmly to the back of the push button.
3. Peel off the other side of the adhesive tape.
4. Press the push button firmly onto the cleaned surface for at least 30 seconds.

2 Working Modes

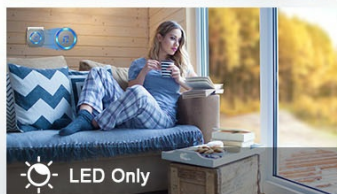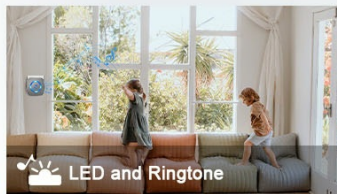

Volume Control and Mode Selection (0-110dB):

Ringtone and LED flash
LED flash only

Ringtone Selection:

55 gockenspiel melodies
(choose your favourite music)



Image: Installation steps for the push button using adhesive tape.

Option B: Using Screws

1. Open the back cover of the push button to expose the screw holes.
2. Mark the desired mounting position on the wall.
3. Drill two holes at the marked positions. Insert the wall anchors if mounting on masonry or drywall.
4. Align the push button's back plate with the holes and secure it with the provided screws.
5. Reattach the front cover of the push button.



Image: Installation steps for the push button using screws and wall anchors.

3. Plug in the Receiver

Simply plug each receiver into a standard electrical outlet in your desired locations. Ensure the outlets are within the

1300ft operating range of the push button.

OPERATING INSTRUCTIONS

Your SURFOU Wireless Doorbell Set is designed for ease of use. The push buttons and receivers are pre-paired from the factory.

Changing Melodies

To change the melody on a receiver:

1. Press the "Music Selection" button (usually a musical note icon) on the side of the receiver to cycle through the 55 available melodies.
2. Once you hear your desired melody, stop pressing the button. The receiver will save this selection automatically.

Adjusting Volume

To adjust the volume level:

1. Press the "Volume Control" button (usually a speaker icon with +/-) on the side of the receiver.
2. There are 5 adjustable volume levels (0dB to 110dB). Continue pressing until you reach your preferred volume.

Silent Mode (LED Alert)

To activate silent mode, which uses only an LED flash for notification:

1. Press the "Volume Control" button repeatedly until the volume reaches 0dB. The receiver will then only flash its LED indicator when the push button is pressed.
2. This mode is ideal for households with sleeping babies or for individuals with hearing impairments.



Image: Overview of doorbell features including 55 melodies, 5 volume levels, and silent mode with LED flash.



Image: The LED indicator on the receiver flashing, demonstrating its utility for silent alerts or for users with hearing impairments.

Expanding Your System

The SURFOU wireless chime system is expandable. You can add more SURFOU receivers or push buttons to cover additional entry points or areas within your property. Refer to the welcome guide or contact support for pairing instructions for new components.

KEY FEATURES

- **Ultra-Long 1300ft Wireless Range:** Advanced wireless technology ensures reliable signal transmission across large homes, gardens, or offices.
- **Waterproof & Weather Resistant:** The push button is designed to withstand harsh weather conditions, operating reliably from -22°F to 158°F (-30°C to 70°C).
- **Customizable Chimes & Silent Mode:** Choose from 55 diverse melodies and 5 adjustable volume levels (0dB to 110dB), including a silent mode with LED flash.
- **Smart Memory Function:** The system remembers your last set melody and volume level even after a power outage.

Installation Instructions



Image: Diagram illustrating the 1300ft wireless range of the doorbell system, covering multiple areas of a large home.

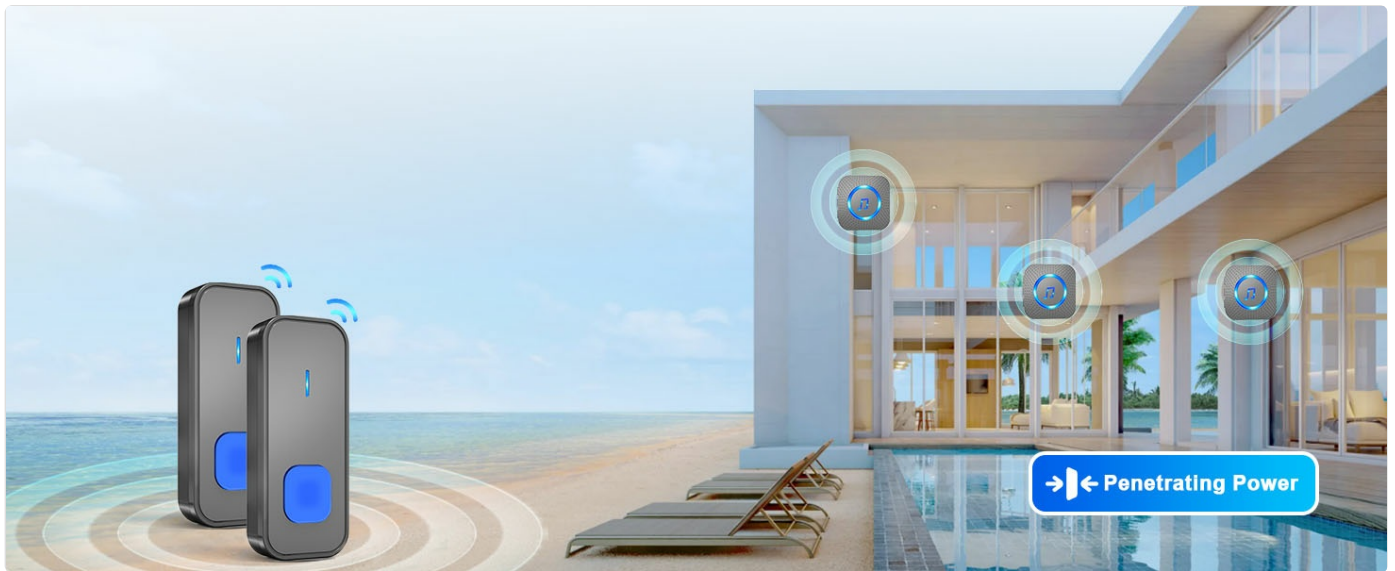


Image: Visual representation of the push button's dustproof and waterproof capabilities, alongside its wide operating temperature range.

MAINTENANCE

- **Cleaning:** Wipe the doorbell components with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** The push button uses a 12V 23A alkaline battery. When the push button's LED indicator no longer lights up or the range decreases significantly, it's time to replace the battery. Open the back cover, replace the old battery with a new one, ensuring correct polarity, and close the cover.
- **Receiver Care:** Ensure receivers are plugged into dry, indoor outlets.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Receiver does not chime.	◦ Receiver unplugged or power outage. ◦ Volume set to 0 (silent mode). ◦ Push button battery is dead. ◦ Out of range. ◦ Interference from other devices.	◦ Ensure receiver is plugged in and power is on. ◦ Increase volume using the volume button. ◦ Replace the push button battery. ◦ Move receiver closer to the push button. ◦ Relocate receiver or push button away from potential interference sources.
Short operating range.	◦ Obstructions (thick walls, metal structures). ◦ Low push button battery. ◦ Interference.	◦ Relocate receiver or push button to minimize obstructions. ◦ Replace the push button battery. ◦ Move away from other wireless devices.
Doorbell rings randomly.	◦ Interference from nearby wireless devices. ◦ Push button malfunction.	◦ Relocate receiver or push button. ◦ Contact customer support if problem persists.

SPECIFICATIONS

Model Number	N128-Black--CDXH
Operating Range	Up to 1300ft (in open areas)
Melodies	55 selectable chimes
Volume Levels	5 levels (0dB to 110dB)
Operating Temperature	-22°F to 158°F (-30°C to 70°C)
Push Button Battery	12V 23A Alkaline (included)
Receiver Power	AC Plug-in
Item Weight	10.8 ounces (total package)
Product Dimensions	5.5 x 3.3 x 3 inches (package)

WARRANTY AND SUPPORT

SURFOU products come with a standard warranty. For specific warranty details, please refer to the welcome guide included in your package or contact customer support.

If you encounter any issues or have questions regarding your SURFOU Wireless Doorbell Set, please contact our customer support team:

Email: service@surfou.com

Please provide your model number (N128) and a detailed description of your issue for faster assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question