

[Manuals.plus](#) /

> [HONEY JOY](#) /

> HONEY JOY Kids Wooden Kitchen Playset Instruction Manual (Cream Model)

HONEY JOY Kids Kitchen Playset

HONEY JOY Kids Wooden Kitchen Playset Instruction Manual

Model: Kids Kitchen Playset (Cream)

Brand: HONEY JOY

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your HONEY JOY Kids Wooden Kitchen Playset. Please read thoroughly before use to ensure safe and enjoyable play.

CONTENTS

The HONEY JOY Kids Wooden Kitchen Playset includes the following components and accessories:

- 1 x Play Kitchen Unit
- 4 x Ice Cubes
- 1 x Cup
- 1 x Cordless Telephone
- 1 x Spoons & Spatula Set
- 1 x Pan
- 1 x Pot

SAFETY GUIDELINES

Please observe the following safety guidelines to ensure a safe play environment:

- Adult supervision is recommended during play.
- Ensure all parts are securely fastened before and during use.
- Keep small parts, such as ice cubes, away from children under 3 years of age to prevent choking hazards.
- Regularly inspect the playset for any loose or damaged components. Discontinue use if damage is

found.

- The playset is equipped with an anti-toppling device. Attach the playset to a wall using this device to prevent accidental tipping.

SETUP AND ASSEMBLY

The HONEY JOY Kids Kitchen Playset requires adult assembly. Please follow the detailed, step-by-step instructions provided in the separate assembly guide included with your packaging. Ensure all screws and fasteners are tightened securely to maintain structural integrity.



Image: Product dimensions and recommended age for assembly reference.

OPERATING INSTRUCTIONS

Familiarize yourself with the various interactive features of your playset:

Chalkboard Surface

The refrigerator door features a functional chalkboard surface. Use standard chalk (not included) to write menus, grocery lists, or draw creative designs. Wipe clean with a damp cloth.



Image: Front view of the kitchen playset, highlighting the chalkboard on the refrigerator door.

Telephone

A cordless telephone is included for imaginative role-play. It can be removed from its holder for pretend conversations. Note: The buttons on the telephone are for play only and do not produce sound.

Ice Maker

The playset includes a realistic ice maker feature. Place the provided ice cubes into the dispenser located at the top of the refrigerator compartment. Press the lever to dispense ice cubes into a cup for pretend drinks.



Image: Detailed view of the ice maker mechanism, showing how to insert and dispense ice cubes.

Stove and Oven

The stove features two burners with rotary knobs that produce a satisfying "click" sound when turned, simulating real cooking. The oven door opens to reveal interior space for storage or pretend baking activities.



Image: Close-up of the stove area, showing the rotatable faucet, clicking knobs, and digital display.

Microwave

The microwave unit has a door that opens and a simulated keypad for interactive play. Children can pretend to heat up their play food.

Sink and Faucet

The sink includes a rotatable faucet and knobs for realistic water play (without actual water). The sink basin is removable for easy cleaning and to prevent accumulation of small items.

Storage

The playset offers diverse storage spaces including shelves, a refrigerator compartment, and an oven, encouraging children to organize their play accessories and develop good habits.



Image: Open doors revealing the interior storage compartments of the playset.

MAINTENANCE AND CARE

Proper care will extend the life of your playset:

- **Cleaning:** Wipe all surfaces with a soft, damp cloth. Avoid using abrasive cleaners, harsh chemicals, or excessive water, as these can damage the wood finish.
- **Drying:** Ensure the playset is completely dry after cleaning to prevent warping or mold growth.
- **Inspection:** Periodically check all screws, hinges, and connections for tightness. Re-tighten if necessary to maintain stability and safety.
- **Storage:** Store the playset in a dry environment, away from direct sunlight and extreme temperatures, to prevent material degradation and color fading.

TROUBLESHOOTING

If you encounter any issues with your playset, refer to the following common solutions:

- **Knobs not clicking:** Ensure the rotary knobs on the stove are properly seated and not obstructed. Gently re-seat them if they feel loose.
- **Ice cubes not dispensing:** Verify that the ice cubes are correctly loaded into the dispenser at the top of the refrigerator. Ensure the dispensing lever is fully pressed.
- **Doors not closing properly:** Check for any objects obstructing the door hinges or latches. Ensure the playset is on a level surface.
- **Playset instability:** Confirm that all assembly screws are securely tightened. Ensure the anti-toppling device is correctly installed and anchored to a wall.

PRODUCT SPECIFICATIONS

Feature	Detail
Product Dimensions	9.5 x 9.5 x 31.5 inches
Recommended Age	36 months - 8 years
Material	Solid MDF
Certifications	ASTM & CPSIA Certified
Model Number	B0FPCPDMVJ
Brand	HONEY JOY

Included Accessories

- 4 Ice Cubes
- 1 Cup
- 1 Cordless Telephone
- Spoons & Spatula
- 1 Pot
- 1 Pan

WARRANTY AND SUPPORT

Warranty Information

This product comes with a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty details and duration, please refer to the warranty card included with your purchase or contact HONEY JOY customer service.

Customer Support

For assistance with assembly, parts, or any other inquiries, please contact HONEY JOY customer support. Visit our official website or refer to the contact information provided in your product packaging for further details.