

Garvee 4vIKxGMKSj4XR1gZV4NtFwkQ6W

Garvee 26-inch Heavy-Duty Push Lawn Sweeper Instruction Manual

Model: 4vIKxGMKSj4XR1gZV4NtFwkQ6W | Brand: Garvee

1. PRODUCT OVERVIEW

The Garvee 26-inch Heavy-Duty Push Lawn Sweeper is designed for efficient collection of grass clippings, leaves, and other light debris from various terrains. It features a robust construction and user-friendly adjustments to simplify lawn maintenance.

Key Features:

- **Superior Sweeping Power:** Equipped with four extra-thick, high-density brushes for enhanced debris collection and durability.
- **Precision Height Adjustment:** A dial-adjustment system allows for tool-free customization of brush height to suit different surfaces and protect turf.
- **Industrial-Grade Construction:** Features a reinforced steel frame and commercial-grade components for stability and longevity.
- **Massive Capacity Collection Bag:** An oversized 7 cubic foot non-woven collection bag reduces the frequency of emptying.
- **Effortless Operation:** Ergonomic design with a balanced handle and smooth-rolling tires for ease of use.

2. SAFETY INFORMATION

Please read and understand all safety instructions before operating the lawn sweeper. Failure to follow these instructions may result in injury or damage to the equipment.

- Always wear appropriate safety gear, including gloves and eye protection, during assembly and operation.
- Ensure all fasteners are securely tightened before each use.
- Keep hands, feet, and loose clothing away from moving parts, especially the brushes.
- Do not operate the sweeper on steep slopes where stability may be compromised.

- Store the sweeper in a dry, secure location, out of reach of children.
- Do not attempt to clear jams while the sweeper is in motion.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly. Refer to the assembly video for visual identification of parts.

- Sweeper Housing Assembly with Wheels
- Hitch Tubes (Left and Right Side)
- Bag Arm Tubes (Left and Right Side)
- Handle Assembly
- Hitch Brackets (Straight and Angled)
- Hitch Pin & Spacer
- Hopper Bag
- Rear Hopper Tube
- Lower Hopper Side Tubes (2)
- Upper Hopper Side Tubes (2)
- Hopper Support Rods (2)
- Rope
- Assorted Bolts, Nuts, Washers, and Cotter Pins

4. ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your Garvee Lawn Sweeper. It is recommended to lay out all parts before starting.

Assembly Video Guide:

Your browser does not support the video tag. Please update your browser to view this content.

This video provides a detailed visual guide for the complete assembly process of the Garvee Lawn Sweeper.

Step-by-Step Assembly:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface. Verify all components are present against the package contents list.



Image: All components of the lawn sweeper unpacked and ready for assembly.

2. **Attach Hitch Tubes:** Secure the right and left hitch tubes to the main sweeper housing using the provided bolts and nuts. Ensure they are firmly attached.

MORE STABLE PUSH SWEEPING



**10" Rubber
Wheels**
Stronger Grip



**Thickened
Steel Pipes**
More Durable
Frame



Image: Attaching the hitch tube to the main sweeper body.

- 3. Assemble Hitch Brackets:** Connect the straight and angled hitch brackets to the ends of the hitch tubes using bolts, nuts, and cotter pins. Insert the hitch pin and spacer into the assembled bracket.

ADJUSTABLE SWEEPING HEIGHT

Large Knob Adjustment Makes it Simpler



Image: Assembling the hitch brackets and securing them with pins.

- 4. Install Handle Assembly:** Attach the handle assembly to the sweeper housing using the designated bolts and nuts.
- 5. Attach Bag Arm Tubes:** Secure the left and right bag arm tubes to the sweeper housing using the provided pins.
- 6. Assemble Hopper Bag Frame:** Insert the rear hopper tube and the two lower hopper side tubes into the designated sleeves of the hopper bag. Secure them with bolts and nuts.
- 7. Connect Upper Hopper Tubes:** Attach the two upper hopper side tubes to the lower hopper side tubes, securing them with bolts and nuts.
- 8. Insert Hopper Support Rods:** Slide the two hopper support rods through the loops on the hopper bag and into the designated holes on the frame.
- 9. Secure Hopper Bag:** Use the provided rope to tie the hopper bag securely to the sweeper frame, ensuring it is taut and ready to collect debris.

5. OPERATING INSTRUCTIONS

Proper operation ensures efficient debris collection and extends the life of your Garvee Lawn Sweeper.

Height Adjustment:

The sweeper features a dial-adjustment system for brush height. Rotate the dial to raise or lower the brushes. For optimal sweeping, adjust the brushes so they just lightly touch the top of the grass or surface. Too low an adjustment can make pushing difficult and potentially damage the brushes or turf.



Image: Adjusting the sweeping height using the visible dial.

Sweeping Procedure:

1. Ensure the collection bag is empty and properly attached.
2. Adjust the brush height according to the type and amount of debris and the terrain.
3. Push the sweeper at a steady, moderate pace over the area to be cleaned. Overlapping passes slightly will ensure thorough coverage.
4. When the collection bag is full, detach it using the quick-release mechanisms and empty the contents. Reattach the bag before continuing.



Image: The lawn sweeper in operation, collecting leaves.

6. MAINTENANCE

Regular maintenance will help keep your lawn sweeper in optimal working condition.

- **Cleaning:** After each use, clear any debris from the brushes and the sweeper housing. The collection bag can be rinsed with water and allowed to air dry.
- **Lubrication:** Periodically apply a light lubricant to moving parts, such as the wheel axles and brush bearings, to ensure smooth operation.
- **Inspection:** Regularly inspect the brushes for wear and tear. Replace worn brushes to maintain sweeping efficiency. Check all bolts, nuts, and pins for tightness and re-tighten as necessary.
- **Storage:** Store the lawn sweeper in a dry, covered area to protect it from the elements.

7. TROUBLESHOOTING

Here are some common issues and their potential solutions:

- **Sweeper not picking up debris:**

- Check brush height adjustment. Brushes may be set too high.
- Inspect brushes for wear. Worn brushes may need replacement.
- Ensure the sweeper is being pushed at a consistent, appropriate speed.

- **Difficulty pushing the sweeper:**

- The brush height may be set too low, causing excessive drag. Adjust to a higher setting.
- The collection bag may be overloaded. Empty the bag.
- Check for debris caught in the brushes or wheels.

- **Unusual noises during operation:**

- Inspect for loose parts or fasteners. Tighten as needed.
- Check for foreign objects caught in the brushes or gears.
- Lubricate moving parts if they appear dry or stiff.

8. SPECIFICATIONS

Feature	Detail
Brand	Garvee
Model Number	4vIKxGMKSj4XR1gZV4NtFwkQ6W
Power Source	Manual
Material	Alloy Steel
Color	Black
Sweeping Width	26 inches (66 cm)
Hopper Capacity	7 cubic feet
Item Weight	37.9 pounds
Product Dimensions	33.07"D x 12.6"W x 15.55"H
Assembly Required	Yes
UPC	199641875631



Hopper Capacity: 7 ft³	Wheel Size: 10"125.4 cm
Sweeping Width: 26"/66cm	Brush-Wheel Ratio: 50:12
Item Model Number: GT1110	Product Weight: 33.1 lbs/15 kg
Product Size: 55.9"x31.9"x29.5"/142 x81 x75cm	

Image: Product dimensions and hopper capacity details.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your product or contact Garvee customer service. Keep your purchase receipt for warranty claims.