



Manuals.plus /

› TRESKO /

› TRESKO 2000W Infrared Standing Heater Instruction Manual

TRESKO 2000W Standing Infrared Heater (B0FPD9RF1Z)

TRESKO 2000W Infrared Standing Heater Instruction Manual

Model: 2000W Standing Infrared Heater (B0FPD9RF1Z)

Brand: TRESKO

1. IMPORTANT SAFETY INFORMATION

Please read this instruction manual carefully before using the TRESKO Infrared Standing Heater. Failure to follow these instructions may result in electric shock, fire, or serious injury. Keep this manual for future reference.

- **Electrical Safety:** Ensure the heater is connected to a properly grounded outlet with the correct voltage (230V AC). Do not overload electrical circuits. Always unplug the heater before cleaning or maintenance.
- **Placement:** Place the heater on a firm, level, and stable surface to prevent tipping. Maintain a safe distance from combustible materials such as furniture, curtains, and other flammable objects. Do not cover the heater.
- **Indoor/Outdoor Use:** This heater is designed for both indoor and outdoor use, featuring an IP34 protection rating, making it waterproof and corrosion-resistant. However, avoid direct exposure to heavy rain or extreme weather conditions.
- **Anti-Tip Safety:** The heater is equipped with an anti-tip safety switch that automatically shuts off the unit if it is accidentally knocked over. Ensure this feature is not obstructed.
- **Children and Pets:** Keep children and pets away from the heater, especially when it is in operation, as surfaces can become very hot.
- **Ventilation:** Ensure adequate ventilation when using the heater indoors.
- **Damaged Cord/Plug:** Do not operate the heater with a damaged cord or plug. Contact customer support for assistance.



Image 1: Anti-tip safety feature. The heater automatically shuts off if it is tilted or knocked over, enhancing safety.

2. PRODUCT OVERVIEW AND COMPONENTS

The TRESKO 2000W Infrared Standing Heater provides efficient and instant heat using a carbon tube element. It features a robust aluminum housing and a stainless steel protective grille for durability.

Key Features:

- **Instant Heat Technology:** Heats up in seconds.
- **Energy Efficient:** Carbon tube technology is 30% more economical than standard halogen tubes.
- **Adjustable Heat Levels:** Three power settings (650W, 1350W, 2000W).
- **Remote Control:** Convenient operation from a distance.
- **Timer Function:** Programmable shut-off from 1 to 24 hours.
- **Quiet Operation:** Extremely low noise level, suitable for various environments.
- **Durable Construction:** Stainless steel protective grille and aluminum housing.
- **Anti-Tip Safety:** Automatic shut-off upon accidental tipping.
- **Weather Resistant:** IP34 rated for indoor and outdoor use, waterproof and corrosion-resistant.



Image 2: Overview of the TRESKO Infrared Heater, highlighting its dimensions, weight, cable length, protective grille, and the included remote control.

3. SETUP INSTRUCTIONS

Follow these steps to assemble and prepare your heater for use.

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for storage or return if necessary.
2. **Base Assembly:** Attach the large footplate to the base of the heater column using the provided screws. Ensure it is securely fastened for robust stability.
3. **Placement:** Position the heater on a flat, stable, and non-combustible surface. Ensure there is at least 1 meter (3 feet) of clearance from any walls, furniture, or other objects.
4. **Power Connection:** Plug the power cord into a suitable 230V AC grounded electrical outlet. Ensure the main power switch on the unit is in the OFF position before plugging in.



Image 3: Stable design and key features, including the anti-tip switch and carbon heating element.

4. OPERATING INSTRUCTIONS

Your TRESKO Infrared Heater can be operated using the control panel on the unit or the included remote control.

4.1 Powering On/Off

- **Main Power Switch:** Locate the waterproof main power switch, usually at the bottom or rear of the unit. Flip it to the 'ON' position.
- **Unit Control Panel / Remote Control:** Press the power button (**U**) on the unit's control panel or the remote control to turn the heater on. Press it again to turn off.

4.2 Adjusting Heat Levels

The heater offers three heat settings:

- **Level 1:** 650W
- **Level 2:** 1350W
- **Level 3:** 2000W

Use the corresponding buttons (650W, 1350W, 2000W) on the remote control to select your desired heat level. The unit will display the current setting.

4.3 Timer Function

The timer function allows you to set the heater to automatically turn off after a specified period (1 to 24 hours).

- Press the 'TIMER' button on the remote control.
- Each press will increase the timer setting by one hour. The display will show the set duration.
- The heater will operate for the set duration and then automatically switch off.



Image 4: Remote control functions for power, heat levels, and timer settings.

5. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your heater.

- **Cleaning:** Always unplug the heater and allow it to cool completely before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents. Ensure no water enters the internal components.
- **Protective Grille:** Periodically check the stainless steel protective grille for any obstructions or

damage. Clean gently if dust or debris accumulates.

- **Storage:** If storing the heater for an extended period, ensure it is clean and dry. Store it in a cool, dry place. The product includes an outdoor cover for protection against elements when not in use.
- **Inspection:** Regularly inspect the power cord and plug for any signs of damage. If damage is found, do not use the heater and contact customer support.

**Boîtier Résistant
Aux Intempéries**

IMPERMÉABLE

RÉSISTANT À LA CORROSION

Incluse
Housse Extérieure

Image 5: Weather-resistant housing and the included outdoor cover for protection.

6. TROUBLESHOOTING

If you encounter issues with your TRESKO Infrared Heater, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Heater does not turn on.	No power supply. Main switch off. Anti-tip switch activated.	Check power cord connection. Ensure main switch is ON. Place heater on a flat surface to reset anti-tip switch.
No heat output.	Low heat setting selected. Heating element failure.	Increase heat level using the remote or control panel. If still no heat, contact customer support.
Remote control not working.	Dead batteries. Obstruction between remote and heater.	Replace remote control batteries. Ensure clear line of sight to the heater's receiver.
Heater turns off unexpectedly.	Anti-tip switch activated. Overheating protection. Timer function.	Ensure heater is upright and stable. Check for obstructions. Allow unit to cool down. Check if timer is set.

If the problem persists after attempting these solutions, please contact TRESKO customer support.

7. SPECIFICATIONS

Technical details for the TRESKO 2000W Infrared Standing Heater.

Feature	Detail
Brand	TRESKO
Model	2000W Standing Infrared Heater (B0FPD9RF1Z)
Color	Black
Heat Output	2000 Watts (Max)
Heat Levels	3 (650W, 1350W, 2000W)
Voltage	230 Volts (AC)
Power Source	Electric Cable
Heating Method	Radiant (Carbon Tube)
Dimensions (Product)	30 cm (D) x 30 cm (W) x 100 cm (H)
Item Weight	7 Kilograms
Protection Rating	IP34 (Waterproof and Corrosion-resistant)
Timer Function	1-24 Hours
Heating Area	Up to 25 m ²
Lifespan	Up to 6000 hours



Image 6: Heating coverage area of 25m² and estimated lifespan of the heating element.

8. WARRANTY AND SUPPORT

TRESKO products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or contact your retailer.

Customer Support:

If you have any questions, require technical assistance, or need to report a problem with your TRESKO Infrared Standing Heater, please contact the retailer from whom you purchased the product. They will be able to provide the most accurate and timely support.