

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [BRUNNER](#) /

› [BRUNNER VIVAMOCA Portable and Rechargeable Espresso Machine User Manual](#)

BRUNNER VIVAMOCA

BRUNNER VIVAMOCA Portable and Rechargeable Espresso Machine User Manual

Model: VIVAMOCA

INTRODUCTION

Thank you for choosing the BRUNNER VIVAMOCA Portable and Rechargeable Espresso Machine. This device is designed to provide a rich, aromatic espresso experience wherever you are. Featuring ceramic heating technology and a 20-bar pump, it ensures perfect extraction from both NS capsules and ground coffee. Please read this manual carefully before use to ensure proper operation and maintenance.

SAFETY INSTRUCTIONS

- Always keep the device away from water and other liquids to prevent electric shock.
- Do not immerse the machine in water.
- Ensure the charging port is dry before connecting the USB cable.
- Handle hot water and espresso with care to avoid burns.
- Keep out of reach of children.
- Use only the provided USB charging cable or a compatible 5V charger.
- Do not operate the machine if it is damaged. Contact customer support.

SETUP

1. Initial Charge

Before first use, fully charge the BRUNNER VIVAMOCA machine. Connect the provided USB charging cable to the machine's charging port and a suitable power source (e.g., USB wall adapter, power bank, or computer USB port).

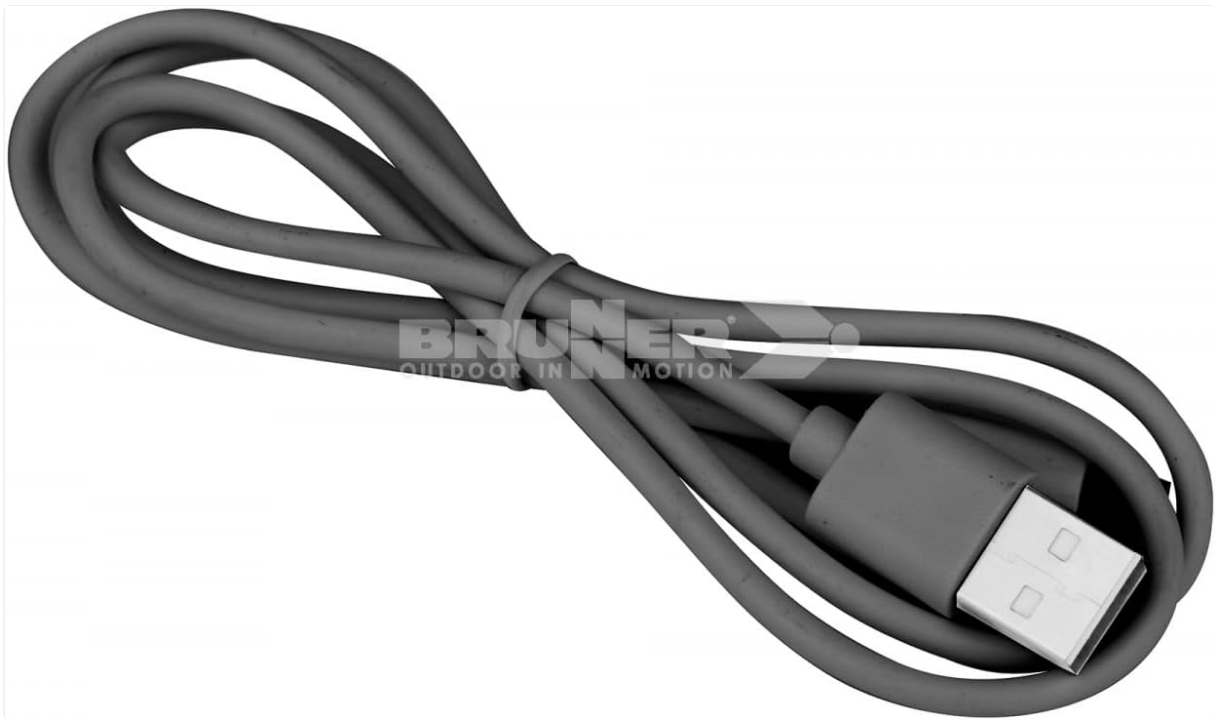


Image: The USB charging cable provided with the BRUNNER VIVAMOCA machine.

The charging indicator light will show the charging status. A full charge typically takes several hours.

2. Assembly

Familiarize yourself with the machine's components. The machine consists of the main body, a water tank, and a coffee basket/adaptor for capsules or ground coffee.



Image: The BRUNNER VIVAMOCA machine disassembled, showing its main components: the base unit, the transparent water tank, and the coffee preparation section.

Ensure all parts are clean and correctly assembled before use.

OPERATING INSTRUCTIONS

1. Preparing with NS Capsules

1. Unscrew the top section of the machine.
2. Insert an NS-compatible capsule into the designated slot.
3. Screw the top section back onto the machine securely.
4. Fill the water tank with cold water (90-120 ml capacity). Do not exceed the MAX fill line.
5. Place a cup under the dispenser.
6. Press the power button to turn on the machine.
7. Press the brew button to start the heating and extraction process. The machine will heat the water to 80°C and extract espresso at 20 bars of pressure. This process takes approximately 5-6 minutes.
8. Once brewing is complete, the machine will stop automatically. Enjoy your espresso.

2. Preparing with Ground Coffee

1. Unscrew the top section of the machine.
2. Place the ground coffee adapter into the machine.
3. Add finely ground espresso coffee into the adapter. Tamp lightly if desired.
4. Screw the top section back onto the machine securely.
5. Fill the water tank with cold water (90-120 ml capacity). Do not exceed the MAX fill line.
6. Place a cup under the dispenser.
7. Press the power button to turn on the machine.
8. Press the brew button to start the heating and extraction process. The machine will heat the water to 80°C and extract espresso at 20 bars of pressure. This process takes approximately 5-6 minutes.
9. Once brewing is complete, the machine will stop automatically. Enjoy your espresso.



Image: The BRUNNER VIVAMOCA machine in operation, dispensing freshly brewed espresso into a cup.

MAINTENANCE

1. Cleaning After Each Use

- After each use, allow the machine to cool down.
- Unscrew the top section and remove the used capsule or ground coffee. Dispose of coffee waste responsibly.
- Rinse the water tank, coffee basket/adaptor, and dispenser nozzle with clean water.
- Wipe the exterior of the machine with a damp cloth. Do not use abrasive cleaners or immerse the main body in water.
- Ensure all parts are dry before reassembling or storing.

2. Descaling (Periodically)

Depending on water hardness and frequency of use, descaling may be required to maintain optimal performance. Use a descaling solution suitable for coffee machines and follow the manufacturer's instructions. Run the descaling solution through the machine without coffee, then rinse thoroughly with several cycles of clean water.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine does not turn on.	Battery is depleted.	Charge the machine using the USB cable.
No coffee or very little coffee dispensed.	Water tank is empty or insufficient water.	Fill the water tank to the appropriate level.
	Coffee capsule/ground coffee is blocked.	Clean the coffee basket/adaptor and ensure the capsule is correctly inserted.
Coffee tastes weak or watery.	Insufficient coffee grounds or incorrect grind size.	Use the recommended amount of finely ground espresso coffee.
	Machine needs descaling.	Perform a descaling cycle.
Leaking from the machine.	Parts not properly assembled or seals are damaged.	Ensure all parts are screwed on tightly. Check seals for damage.

SPECIFICATIONS

DATI TECNICI	
 Ø 8 x 26,5 cm	 790 g
 4000mAh Li-Ion	 150W
 5 - 10 coffees	 5h
mbar	20 bar
	

Image: A graphic displaying the technical specifications of the BRUNNER VIVAMOCA machine.

- **Brand:** Brunner
- **Model:** VIVAMOCA
- **Color:** Black
- **Product Dimensions (L x W x H):** 8 x 3 x 27 cm
- **Weight:** 1.2 Kilograms
- **Voltage:** 5 Volts
- **Special Features:** Portable, Rechargeable
- **Coffee Maker Type:** Espresso Machine
- **Material:** Ceramic Stoneware (internal heating element)

- **Operating Mode:** Fully Automatic
- **Pressure:** 20 bars
- **Water Capacity:** 90 - 120 ml
- **Distribution Volume:** 60 - 100 ml
- **Heating Time:** 5 - 6 minutes (to 80°C)
- **Compatibility:** NS capsules and ground coffee

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation provided at the time of purchase or contact your retailer. If you encounter any issues not covered in this manual, please contact BRUNNER customer support for assistance.

DISPOSAL

This product contains electronic components and a rechargeable battery. Do not dispose of it with general household waste. Please follow local regulations for the proper disposal of electronic waste and batteries to protect the environment.