

[manuals.plus](#) /› [Indesit](#) /› [Indesit IO 255H X Multifunction Built-in Electric Oven User Manual](#)

Indesit IO 255H X

Indesit IO 255H X Multifunction Built-in Electric Oven User Manual

Model: IO 255H X | Brand: Indesit

1. SAFETY INFORMATION

Please read these instructions carefully before installing and using the appliance. Keep this manual for future reference. The manufacturer is not responsible for any injury or damage caused by incorrect installation or improper use.

- Ensure the appliance is disconnected from the power supply before performing any maintenance.
- Installation must be carried out by a qualified technician in accordance with the manufacturer's instructions and local safety regulations.
- Do not use abrasive cleaners or sharp metal scrapers to clean the oven door glass, as they can scratch the surface, which may result in shattering.
- The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements.
- Children under 8 years of age should be kept away unless continuously supervised.

2. PRODUCT OVERVIEW

The Indesit IO 255H X is a 71-liter multifunction built-in electric oven designed for efficient and versatile cooking. It features a modern stainless steel finish with a digital display, offering a range of cooking functions and easy-to-clean solutions.



Front view of the Indesit IO 255H X multifunction built-in electric oven with its door open, showing the interior racks and control panel.

3. INSTALLATION

The Indesit IO 255H X oven is designed for built-in installation. Ensure the cabinet dimensions are appropriate for the oven's size (approximately 59.5 x 59.5 x 55.1 cm). Professional installation is recommended to ensure proper electrical connection and secure fitting.



Side view of the Indesit IO 255H X oven, illustrating its dimensions and design for built-in installation.



Front view of the Indesit IO 255H X oven with the door fully open, showing the interior cavity and racks.

The oven comes with a power cable. Ensure a suitable electrical outlet is available and accessible for connection. Refer to the detailed installation diagrams in the separate installation guide provided with the product for precise measurements and wiring instructions.

4. SETUP

- Unpacking:** Carefully remove the oven from its packaging. Retain all packaging materials for potential future transport or service. Ensure the power cable is present.
- Initial Cleaning:** Before first use, clean the oven interior and accessories with a damp cloth and mild detergent. Dry thoroughly.
- First Use:** Heat the empty oven for approximately one hour at maximum temperature to burn off any manufacturing residues. Ensure the room is well-ventilated during this process.

5. OPERATING INSTRUCTIONS

5.1 Control Panel

The oven features intuitive rotary knobs for function and temperature selection, along with a digital display for precise time and setting adjustments.



Close-up of the Indesit IO 255H X oven's control panel, featuring rotary knobs and a digital display for settings.

5.2 Cooking Functions

- **Turn&Go:** This function allows you to prepare a variety of tasty dishes in a single gesture, such as roast beef, chicken, salmon fillet, and stuffed vegetables, in rapid times. Simply select the Turn&Go function, and the oven will optimize settings for common recipes.
- **Integral Grill:** Ideal for achieving perfect and uniform browning and gratination. Use this function for savory pies, baked pasta, and skewers to ensure they are cooked to perfection without the need for excessive oils or fats.
- **Ventilated Cooking:** The oven's fan-assisted heating ensures even heat distribution throughout the cavity, providing consistent cooking results for all types of dishes.

5.3 Programmable Timer

The integrated programmable timer allows you to set precise cooking durations for your recipes. Once the set time elapses, the oven will alert you and may automatically switch off, depending on the selected function.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Indesit oven.

- **Click&Clean:** For easy cleaning of the oven door, the glass panel can be removed in two simple steps. Refer to the detailed instructions in the full manual for safe removal and reinstallation.
- **Steam&Clean:** This function utilizes steam to eliminate dirt and residues from the oven cavity in just 35 minutes, without the need for harsh detergents. Pour water into the designated area at the bottom of the oven and activate the Steam&Clean cycle. Once complete and the oven has cooled, wipe away softened residues with a soft cloth.
- **Reclinable Grill:** The integral grill can be unhooked and tilted outwards, providing easy access to the upper part of the oven cavity for thorough cleaning.
- **General Cleaning:** For daily cleaning, use a damp cloth and mild, non-abrasive cleaning agents. Avoid

harsh chemicals or scouring pads that could damage surfaces.

7. TROUBLESHOOTING

If you encounter any issues with your oven, consult the following common troubleshooting tips:

- **Oven not heating:** Check if the oven is properly plugged in and if the circuit breaker has tripped. Ensure the timer is not set to a delayed start.
- **Uneven cooking:** Ensure food is placed centrally on the rack and that the correct cooking function (e.g., ventilated) is selected for even heat distribution. Avoid overcrowding the oven.
- **Smoke or odors during first use:** This is normal during the initial burn-off process. Ensure good ventilation. If it persists after initial use, consult the full manual.
- **Error codes on display:** Refer to the comprehensive troubleshooting section in the full user manual for specific error code meanings and solutions.

If problems persist after attempting these solutions, contact customer support.

8. SPECIFICATIONS

- **Model:** Indesit IO 255H X
- **Type:** Multifunction Built-in Electric Oven
- **Capacity:** 71 Liters
- **Dimensions (H x W x D):** 59.5 x 59.5 x 55.1 cm
- **Energy Efficiency Class:** A
- **Fuel Type:** Electric
- **Heating Method:** Convection
- **Color:** Stainless Steel
- **Included Accessories:** Power cable

9. WARRANTY AND SUPPORT

Your Indesit IO 255H X oven comes with a manufacturer's warranty. Please refer to the warranty card included with your product for specific terms and conditions. For technical assistance, spare parts, or to schedule a service appointment, please contact Indesit customer support. Keep your purchase receipt and product model number (IO 255H X) readily available when contacting support.