

[Manuals.plus](#) /

› [ZJSWTH](#) /

› ZJSWTH Remote Control Instruction Manual for RG51B1/CEU, RG51B30/CEU, RG51B30/CE Air Conditioners

ZJSWTH RG51B1/CEU, RG51B30/CEU, RG51B30/CE

ZJSWTH Remote Control Instruction Manual

Models: RG51B1/CEU, RG51B30/CEU, RG51B30/CE

1. INTRODUCTION

Thank you for choosing the ZJSWTH Remote Control. This manual provides detailed instructions for the proper setup, operation, and maintenance of your new remote control, designed for use with RG51B1/CEU, RG51B30/CEU, and RG51B30/CE air conditioner models. Please read this manual thoroughly before use to ensure optimal performance and longevity of the product.

2. PRODUCT OVERVIEW

This remote control is a high-quality replacement or spare unit, offering full functionality for compatible air conditioner models. It features a durable design and responsive buttons for comfortable and reliable use.

Key Features

- High-quality construction for durability.
- Flexible and durable buttons for extended use.
- Direct replacement for original RG51B1/CEU, RG51B30/CEU, RG51B30/CE remotes.
- Comprehensive control over air conditioner functions.

Package Contents

- 1 x ZJSWTH Remote Control Unit (Batteries not included)

3. SETUP

Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 3.1: Rear view of the remote control with the battery compartment open, illustrating correct battery insertion. Note the model number and voltage rating on the label.

Important: To prevent damage from battery leakage, remove the batteries if the remote control will not be used for an extended period.

4. OPERATING INSTRUCTIONS

Point the remote control directly at the air conditioner's receiver window. Ensure there are no obstructions between the remote and the unit.



Figure 4.1: Front view of the remote control, highlighting the LCD display and various function buttons.

Button Functions

Button	Function
ON/OFF	Powers the air conditioner on or off.
MODE	Cycles through operating modes: AUTO, COOL, DRY.
TEMP ▲ / ▼	Adjusts the desired temperature setting up or down.
FAN SPEED	Selects fan speed: HIGH, MED, LOW.

Button	Function
SWING	Activates or deactivates the automatic louver swing function.
ECONOMY	Engages or disengages the energy-saving mode.
TIMER ON	Sets a timer for the air conditioner to turn on automatically.
TIMER OFF	Sets a timer for the air conditioner to turn off automatically.
RESET LOCK	Resets settings or locks the remote to prevent accidental changes. Refer to your AC unit's manual for specific functionality.
LED DISPLAY	Toggles the LED display on the air conditioner unit (if applicable).

5. MAINTENANCE

Battery Replacement

When the remote control's display dims or its response becomes sluggish, it is time to replace the batteries. Follow the battery installation steps outlined in Section 3.1. Always replace both batteries simultaneously with new ones of the same type (AAA).

Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Do not use abrasive cleaners, solvents, or immerse the remote in water.

6. TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new ones.
 - Ensure there are no obstructions between the remote control and the air conditioner's receiver.
 - Confirm the remote is pointed directly at the air conditioner.
- **Display not working:**
 - This usually indicates low or dead batteries. Replace them.
 - If the display remains blank after battery replacement, contact customer support.
- **Buttons not functioning:**
 - Ensure the remote is powered on and has fresh batteries.
 - Clean the remote's surface to remove any debris that might be obstructing button presses.
 - If only specific buttons are not working, there might be internal damage.

7. SPECIFICATIONS

Feature	Detail
Model Compatibility	RG51B1/CEU, RG51B30/CEU, RG51B30/CE Air Conditioners

Feature	Detail
Rated Voltage	3VDC
Power Source	2 x AAA Batteries (not included)
Manufacturer	ZJSWTH
ASIN	B0FPDXC4XT

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the purchase documentation or contact the seller directly. Keep your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question