

ZAQE ZAQE Clip MP3 Player X20

ZAQE Clip MP3 Player X20 User Manual

Model: X20

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your ZAQE Clip MP3 Player X20. Please read this manual thoroughly before using the device to ensure proper function and to maximize your user experience. Keep this manual for future reference.

2. WHAT'S IN THE Box

Upon opening your ZAQE Clip MP3 Player X20 package, please verify that all the following items are included:

- ZAQE Clip MP3 Player X20
- USB Charging Cable
- Wired Earphones
- User Manual (this document)

If any items are missing or damaged, please contact customer support.

Packaging item:

Clip player×1

Charging cable×1

Headphones×1

User Manual x1



Image: Contents of the ZAQE Clip MP3 Player X20 package, including the player, charging cable, earphones, and user manual.

3. PRODUCT OVERVIEW

3.1 Device Layout

The ZAQE Clip MP3 Player X20 features a compact design with intuitive controls and a secure clip for portability.



Image: Front and side view of the ZAQE Clip MP3 Player X20, highlighting its compact design and rear clip.

3.2 Display Interface

The device features a 2.0-inch TFT color display with a user-friendly interface for easy navigation through its various functions.

Multi-functional Sports MP3 player



Image: The ZAQE Clip MP3 Player X20 displaying its main interface, surrounded by icons representing its various functions such as music, video, Bluetooth, FM radio, and pedometer.

4. GETTING STARTED

4.1 Charging the Device

Before first use, fully charge the MP3 player. Connect the provided USB charging cable to the device's charging port and to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the screen illuminates.
- **To Power Off:** Press and hold the Power button until the power-off prompt appears, then confirm.

4.3 File Transfer

To transfer music, videos, or other files to your MP3 player:

1. Connect the MP3 player to your computer using the USB cable.
2. The device will appear as a removable disk on your computer.

3. Drag and drop your desired files into the appropriate folders on the MP3 player (e.g., 'Music' for audio files).
4. Safely eject the device from your computer before disconnecting the USB cable.



Image: The ZAQE Clip MP3 Player X20 supports 128GB internal storage and expandable memory.

4.4 Inserting a MicroSD Card

The ZAQE Clip MP3 Player X20 supports expandable storage up to 128GB via a MicroSD card (not included). Locate the MicroSD card slot on the device and gently insert the card until it clicks into place. Ensure the card is inserted in the correct orientation.

5. OPERATING INSTRUCTIONS

5.1 Basic Navigation


Use the physical buttons on the device to navigate through menus and select options. The central button typically acts as 'Enter' or 'Confirm', while directional buttons allow movement. The 'Back' button returns to the previous screen.

5.2 Music Playback

From the main menu, select the 'Music' icon to access your audio library. You can browse by artist, album, genre, or all songs. During playback, controls for play/pause, skip track, and volume adjustment are available.

Multiple Playback Modes

There are four playback modes for you to choose from.

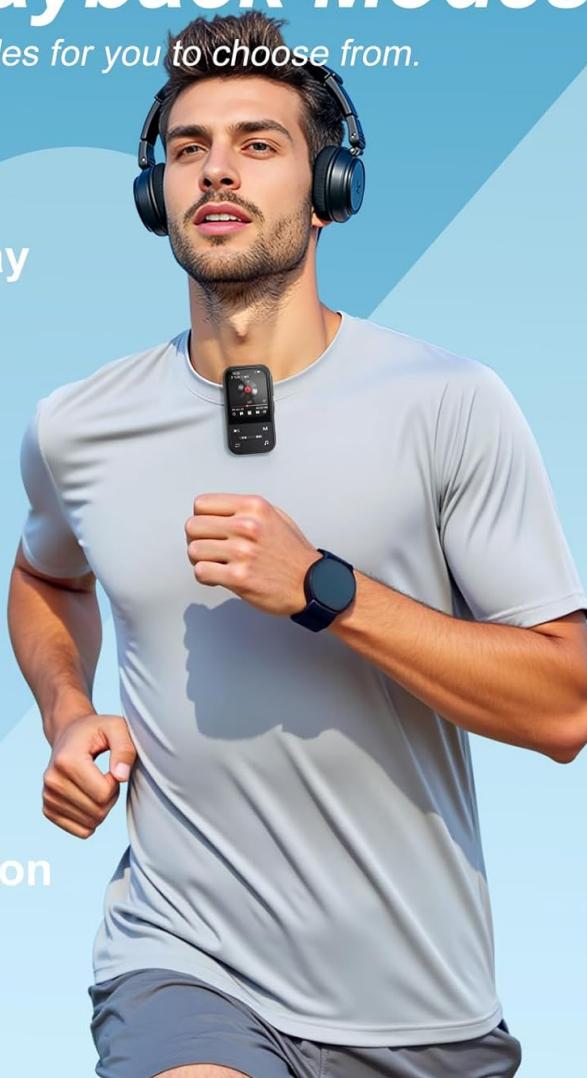

- Sequential play**
- Repeat all**
- Shuffle**
- Single repetition**

Image: The ZAQE Clip MP3 Player X20 offers multiple playback modes for music.

Quickly open the music interface

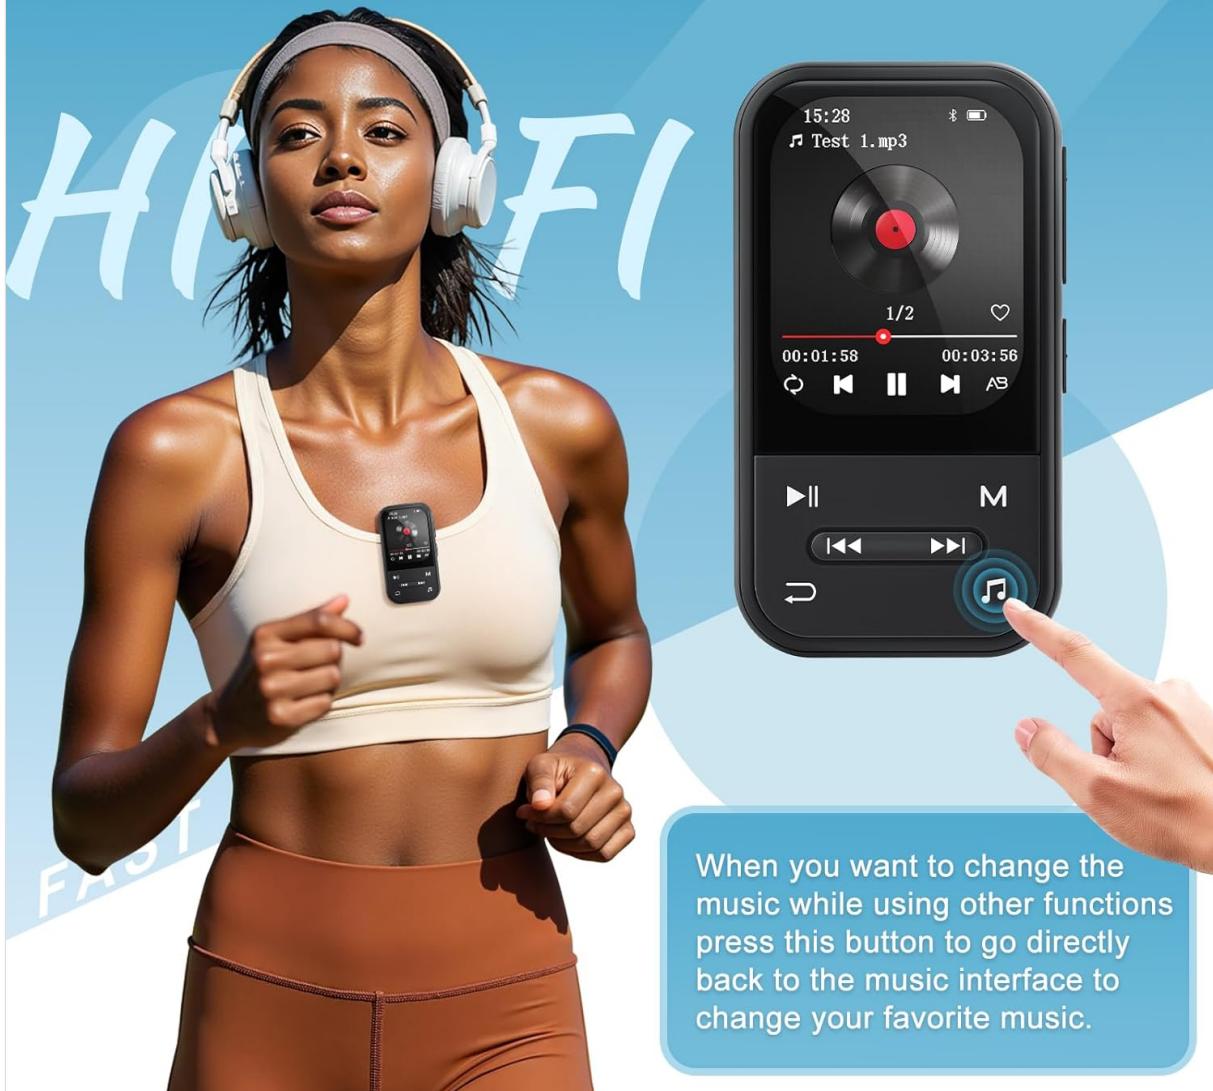


Image: Quick access to the music interface on the ZAQE Clip MP3 Player X20.

5.3 Bluetooth Connectivity

The device features Bluetooth 5.3 for wireless audio streaming.

1. Navigate to the 'Bluetooth' menu from the main screen.
2. Turn on Bluetooth and select 'Search for devices'.
3. Ensure your Bluetooth headphones or speaker are in pairing mode.
4. Select your device from the list to pair.

Note: This device cannot pair with smartphones or tablets.

Bluetooth 5.3

ZAQE

*Faster connection, more stable playback,
greater compatibility*

Bluetooth 5.3

New upgrade



Image: ZAQE Clip MP3 Player X20 connected to Bluetooth headphones and speaker.

5.4 FM Radio

To use the FM Radio function, plug in the wired earphones (included) as they act as the antenna. Navigate to the 'FM Radio' icon, then scan for available stations.

5.5 Voice Recorder

Select the 'Voice Recorder' icon to access the recording function. You can start, pause, and save recordings. Recorded files are typically saved in WAV or MP3 format.

5.6 Pedometer Function

The built-in pedometer tracks your steps. Access this feature via the 'Pedometer' icon. Ensure the device is securely clipped to your clothing for accurate tracking.

Mini and lightweight



Image: The ZAQE Clip MP3 Player X20 is ideal for sports and activities.

5.7 E-Book Reader

The device supports e-book reading. Transfer compatible text files to the 'E-Book' folder on the player. Select the 'E-Book' icon to browse and read your files.

5.8 Additional Tools

The ZAQE Clip MP3 Player X20 includes several useful tools:

- **Alarm Clock:** Set alarms for reminders or wake-up calls.
- **Calendar:** View the current date and manage simple schedules.
- **Stopwatch:** Use for timing activities or workouts.

6. MAINTENANCE

- Keep the device dry. Moisture can damage electronic components.
- Clean the screen and body with a soft, dry cloth. Avoid abrasive cleaners.
- Avoid extreme temperatures.
- Do not drop or subject the device to strong impacts.

- Regularly back up important files to prevent data loss.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery.	Charge the device for at least 30 minutes.
Cannot transfer files.	Incorrect USB connection or driver issue.	Ensure the USB cable is securely connected. Try a different USB port or computer.
Bluetooth device not pairing.	Device not in pairing mode or too far.	Ensure your Bluetooth device is in pairing mode and within range. Restart both devices.
No sound from FM Radio.	Earphones not connected or not functioning as antenna.	Ensure wired earphones are properly plugged in. They serve as the antenna.
MicroSD card not recognized.	Card improperly inserted or incompatible format.	Reinsert the card. Ensure it is formatted to FAT32 or exFAT.

8. SPECIFICATIONS

Brand	ZAQE
Model	X20 (Clip Player)
Memory Storage Capacity	128 GB (Internal) + Expandable via Micro SDHC
Screen Size	2.0 Inches
Display Technology	TFT
Bluetooth Version	5.3
Supported Audio Formats	MP3, OGG, APE, FLAC, WAV, AAC, ACELP
Battery Life	Up to 40 Hours (audio playback)
Item Weight	1 Grams (0.035 ounces)
Package Dimensions	4.72 x 4.69 x 0.94 inches

9. WARRANTY AND SUPPORT

ZAQE products are designed for reliability and performance. For warranty information, technical support, or customer service inquiries, please refer to the contact details provided on the product packaging or visit the official ZAQE website.

Please retain your proof of purchase for warranty claims.

