

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [aiprotabket](#) /

› [aiprotabket A30 10.1-inch Android 15 Tablet User Manual](#)

aiprotabket A30

aiprotabket A30 10.1-inch Android 15 Tablet User Manual

Model: A30

INTRODUCTION

This manual provides detailed instructions for setting up, operating, and maintaining your aiprotabket A30 10.1-inch Android 15 Tablet. Please read this manual thoroughly to ensure proper use and to maximize your device's performance and longevity.



Figure 1: aiprotab A30 Tablet and Accessories

WHAT'S IN THE BOX

Upon opening your aiprotab A30 package, you should find the following items:

- aiprotab A30 10.1-inch Android 15 Tablet
- Protective Case
- Bluetooth Keyboard
- Bluetooth Mouse
- Stylus Pen
- USB-C to USB-A Charging Cable
- Power Adapter
- Pre-installed Screen Protector (and potentially an extra one)
- Tablet User Manual

PRODUCT OVERVIEW

The aiprotablet A30 features a sleek design with essential ports and controls strategically placed for user convenience.



Figure 2: Key Features of the aiprotablet A30 Tablet

Physical Features

- **Front Camera:** Located at the top center when held horizontally.
- **Rear Camera & Flash:** Positioned on the back, typically in a corner.
- **Power On/Off Button:** Usually on the side, used to power on/off or wake/sleep the device.
- **Volume Controls:** Adjacent to the power button, for adjusting audio levels.
- **3.5mm Headphone Jack:** For connecting wired headphones.
- **MicroSD Card Slot:** Allows for storage expansion up to 2TB.

- **USB-C Port:** For charging and data transfer, supports 18W PD fast charging.
- **Speakers:** Dual speakers for stereo audio output.
- **Microphone:** For audio input during calls or recordings.

SETUP

Follow these steps to set up your aiprotab A30 Tablet for the first time.

1. Initial Device Setup

1. **Power On:** Press and hold the Power On/Off button until the screen lights up.
2. **Language Selection:** Choose your preferred language from the list.
3. **Wi-Fi Connection:** Connect to a Wi-Fi network to access the internet. This is necessary for completing the setup and downloading updates.
4. **Google Account:** Sign in with your Google account or create a new one. This allows access to the Google Play Store and other Google services.
5. **Date & Time:** Set the correct date and time, or allow the device to set it automatically via the network.
6. **Screen Lock:** Set up a screen lock method (PIN, pattern, password, or fingerprint) for security.
7. **Complete Setup:** Follow any remaining on-screen prompts to finalize the setup process.

2. Installing the Protective Case

The included protective case helps safeguard your tablet from everyday bumps and scratches. Simply align your tablet with the case and gently press it into place until all edges are secured. Ensure all ports and buttons remain accessible through the case cutouts.

3. Connecting Bluetooth Accessories (Keyboard & Mouse)

To enhance your productivity, you can connect the included Bluetooth keyboard and mouse.

1. **Enable Bluetooth on Tablet:** Swipe down from the top of the screen to open the Quick Settings panel. Tap the Bluetooth icon to turn it on. Alternatively, go to Settings > Connected devices > Bluetooth.

2. Pair Bluetooth Keyboard:

- Turn on the keyboard using its power switch (usually labeled ON/OFF).
- Press the 'Connect' button on the keyboard. The Bluetooth indicator light will start flashing.
- On your tablet, tap 'Pair new device'. The tablet will scan for available Bluetooth devices.
- Select 'Bluetooth Keyboard' from the list of available devices and confirm pairing.

3. Pair Bluetooth Mouse:

- Insert two AAA batteries into the mouse (batteries not included). There is no power button; it activates upon battery insertion.
- The mouse's indicator light will flash.
- On your tablet, tap 'Pair new device' again.
- Select 'BTS 2 Mouse' (or similar name) from the list and confirm pairing.
- For optimal mouse performance, navigate to Settings > System > Keyboard > Pointer speed and adjust it to a slightly slower speed for better control.

OPERATING YOUR TABLET

Your aiprotab A30 runs on the latest Android 15 operating system, offering a user-friendly interface and access to a wide range

of applications.

1. Basic Navigation

- **Home Screen:** The central hub for your apps and widgets. Swipe left or right to access additional home screens.
- **App Drawer:** Swipe up from the bottom of the home screen to view all installed applications.
- **Quick Settings & Notifications:** Swipe down from the top of the screen to access quick settings toggles (Wi-Fi, Bluetooth, Brightness, etc.) and view notifications.
- **Multitasking:** Tap the square navigation button (or swipe up and hold from the bottom if using gesture navigation) to see recently opened apps and switch between them.

2. Pre-installed Applications

The tablet comes with a suite of essential Google applications and other useful tools:

- Google, Meet, Assistant, Photos, Cast, Play Store, Calculator, Calendar, Camera, Chrome, Clock, Drive, Files, Find Device, FM Radio, Gmail, Google TV, Keep Notes, Kids Space, Maps, Sound Recorder, YouTube, YT Kids, YT Music.

3. FM Radio

The tablet includes an FM Radio application. To use the FM Radio, you must plug in wired headphones, which act as an antenna for signal reception.

PERFORMANCE

The aiprottablet A30 is designed for smooth and efficient operation, powered by robust internal components.

Unisoc T606 Octa-core Processor

Allow the tablet to run fast and smooth

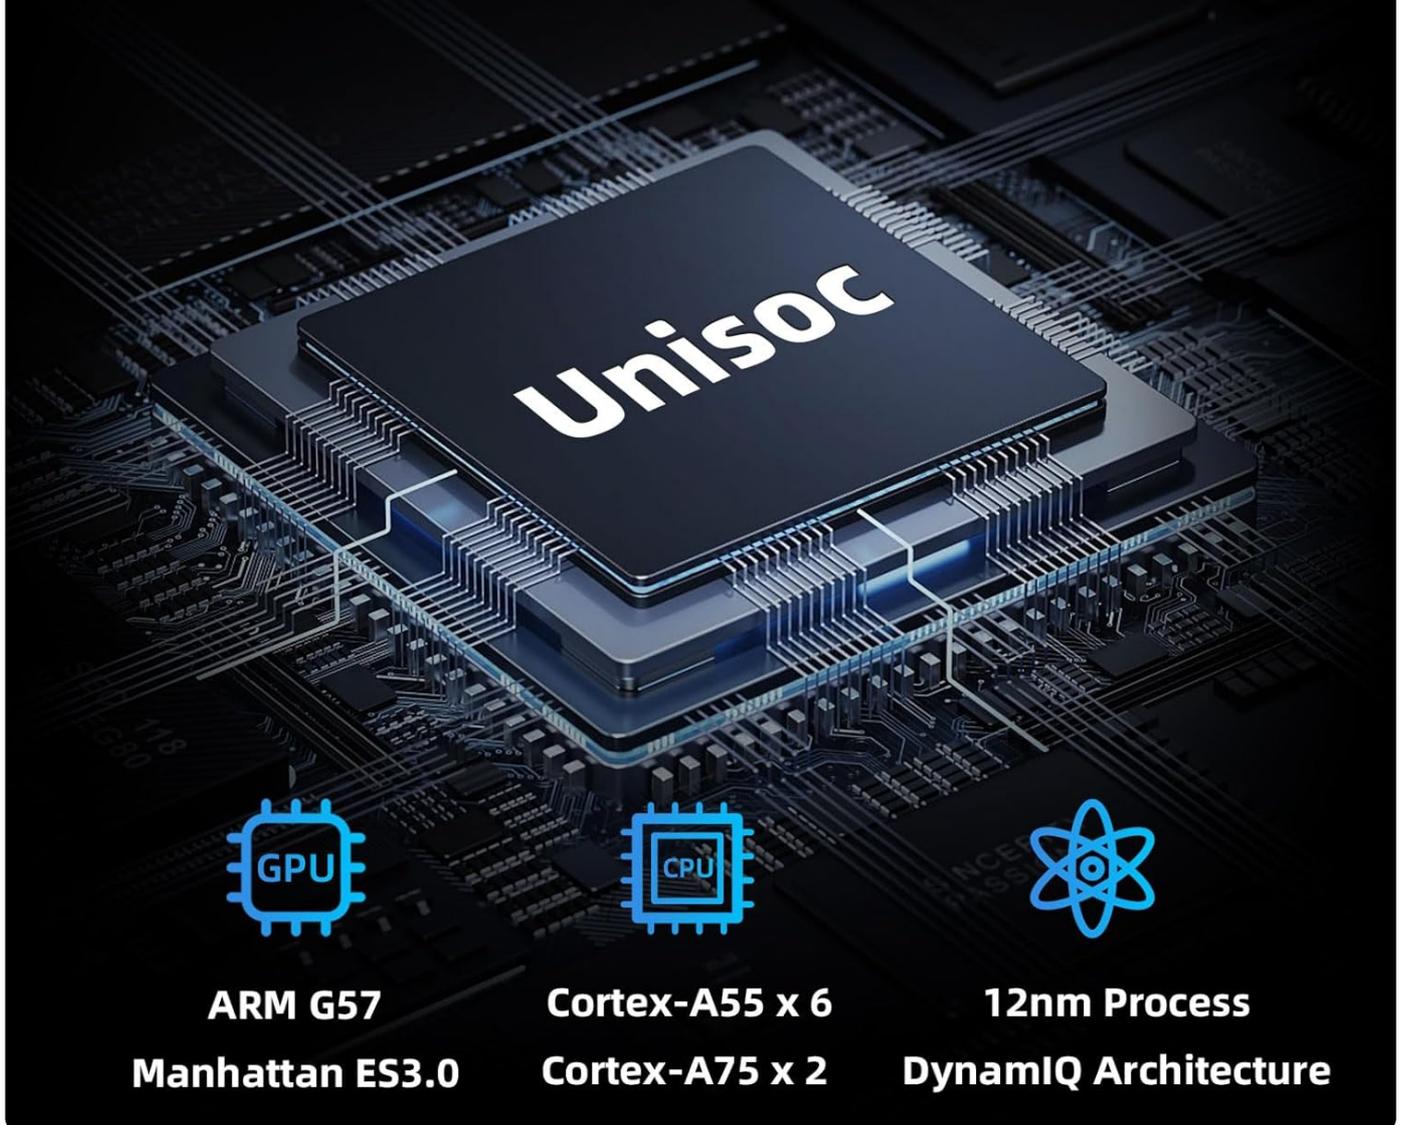


Figure 3: Unisoc T606 Octa-core Processor

- **Processor:** Equipped with a UNISOC T606 octa-core processor, featuring an ARM Cortex-A75 high-performance CPU and a Mali-G57 GPU. This configuration ensures smooth multitasking and efficient handling of most applications.
- **RAM:** The tablet boasts 12GB LPDDR4x memory, comprising 4GB of physical RAM and 8GB of virtual RAM. Virtual RAM utilizes a portion of the storage to temporarily act as additional RAM, improving performance during heavy multitasking.
- **Internal Storage:** Comes with 64GB of high-speed internal storage.
- **Expandable Storage:** Storage can be expanded significantly up to 2TB using a Micro SD card (not included), providing ample space for media, documents, and applications.

Storage for All You Like

The massive 64GB of memory stores everything you need and supports micro SD Card from 32GB to 2TB to add even more space.



**12GB
RAM**



**64GB
ROM**



**2TB
Expansion**

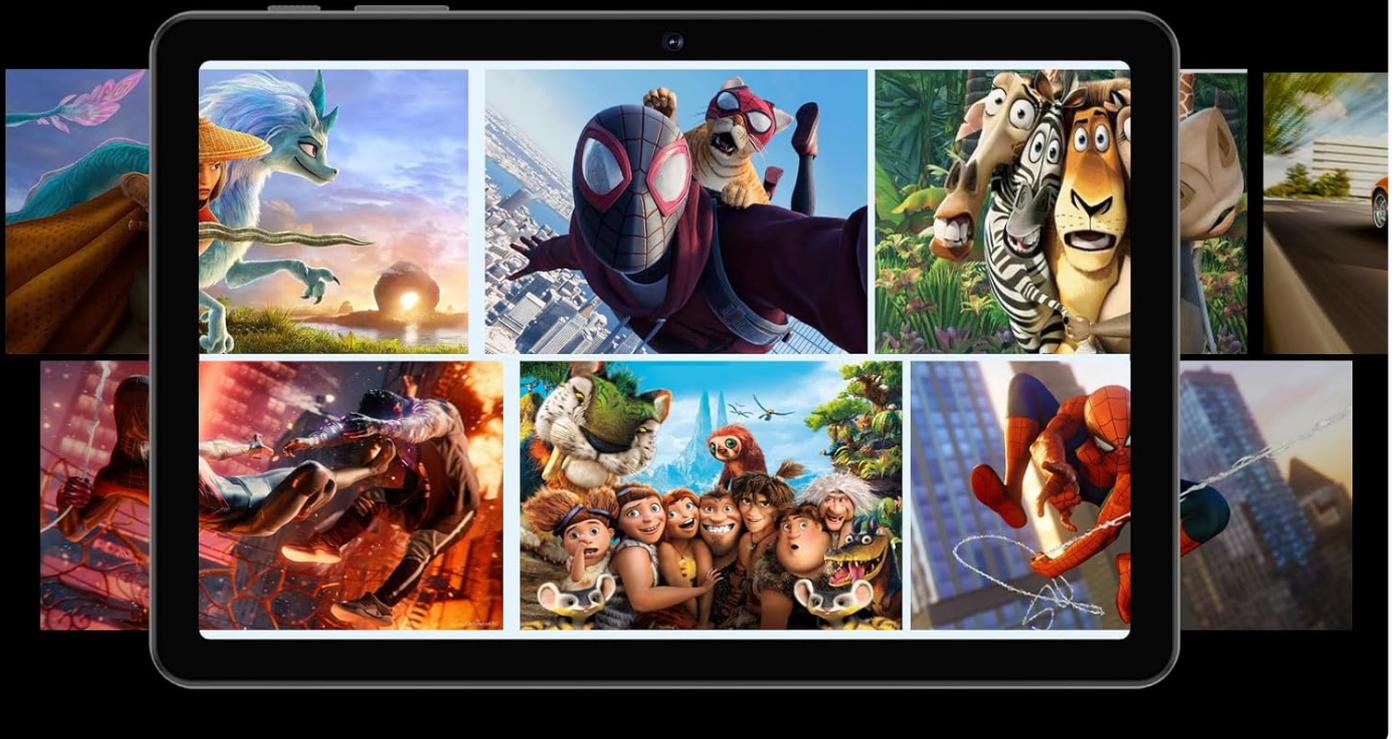


Figure 4: Ample Storage for Your Needs

Widevine L1 Support

The tablet supports Widevine L1, a digital rights management (DRM) level that allows for high-definition (1080p and above) streaming from major services like Netflix, Amazon Prime Video, Disney+, Hulu, and YouTube. This ensures a premium viewing experience for your favorite content.

DISPLAY

Experience clear and vibrant visuals on the tablet's display.

Bigger Vivid Touchscreen

10.1 inch Incell Touchscreen is Perfect for Reading, Video, Studying and Working



**10.1 inch
Display HD**



**1280-800
Resolution**



**IPS
Technologies**



**16:10
Aspect Ration**

Figure 5: Vivid HD Touchscreen

- **Screen Size:** 10.1-inch.
- **Resolution:** 1280x800 HD LCD touchscreen.
- **Technology:** IPS (In-Plane Switching) technology provides wide viewing angles and accurate color reproduction.
- **Features:** Low blue light display for comfortable reading and reduced eye strain.

CAMERAS

The tablet is equipped with dual cameras for capturing photos and engaging in video calls.

- **Front Camera:** 5 Megapixels, suitable for video conferencing and selfies.
- **Rear Camera:** 8 Megapixels, capable of capturing everyday moments.

BATTERY

The aiprotablet A30 features a long-lasting battery to keep you powered throughout the day.

Long Lasting Battery

Stay Online at All Time

6000mAh



Figure 6: Long-Lasting Battery and Fast Charging

- **Capacity:** 6000mAh.
- **Usage Time:** Provides up to 8 hours of mixed usage, including reading, video watching, and web browsing. Actual battery life may vary based on usage patterns and settings.
- **Charging:** Supports 18W Power Delivery (PD) fast charging via the USB-C port, allowing the tablet to be fully charged in approximately 2 hours.

MAINTENANCE

Proper care and maintenance will ensure the longevity and optimal performance of your tablet.

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials.
- **Software Updates:** Regularly check for and install system updates to ensure your tablet has the latest features, security

patches, and performance improvements. Go to Settings > System > System updates.

- **Battery Care:** Avoid extreme temperatures. Do not let the battery completely drain frequently. For long-term storage, charge the battery to around 50-60%.
- **Storage Management:** Periodically clear unnecessary files and uninstall unused apps to free up storage space and maintain performance.
- **Environmental Conditions:** Avoid exposing the tablet to excessive heat, cold, humidity, or direct sunlight.

TROUBLESHOOTING

If you encounter any issues with your tablet, refer to the following common solutions:

- **Device Not Turning On:** Ensure the battery is charged. Connect the tablet to the power adapter and try turning it on after a few minutes.
- **Wi-Fi Connection Issues:**
 - Ensure Wi-Fi is enabled in Quick Settings or Settings > Network & internet.
 - Restart your Wi-Fi router and the tablet.
 - Check if the tablet is within range of the Wi-Fi signal.
 - If the issue persists, try forgetting the network and reconnecting.
- **Slow Performance:**
 - Close unused applications running in the background.
 - Clear cache data for frequently used apps.
 - Ensure sufficient free storage space.
 - Restart the tablet.
- **Bluetooth Pairing Issues:**
 - Ensure Bluetooth is enabled on both the tablet and the accessory.
 - Place the accessory close to the tablet during pairing.
 - Ensure the accessory is in pairing mode.
 - If an accessory was previously paired, try unpairing and re-pairing it.
- **SD Card Not Detected:**
 - Ensure the MicroSD card is correctly inserted into the slot.
 - Try reinserting the card.
 - Test the SD card in another device to rule out card malfunction.

SPECIFICATIONS

Feature	Detail
Brand	aiprotablet
Model Name	A30
Operating System	Android 15
Screen Size	10.1 Inches

 
Feature	Detail
Screen Resolution	1280 x 800 Pixels (HD IPS)
Processor	UNISOC T606 Octa-Core (1.6 GHz)
Graphics Coprocessor	Mali-G57 1core @ 850MHz
RAM	12GB (4GB Physical + 8GB Virtual)
Internal Storage	64 GB
Expandable Storage	Up to 2TB via microSD card
Front Camera	5 Megapixels
Rear Camera	8 Megapixels
Battery Capacity	6000mAh
Average Battery Life	6-8 Hours (mixed use)
Charging	18W PD Fast Charging (USB-C)
Wireless Type	802.11ac, 802.11ad (WiFi 5)
Bluetooth	BT5.0
GPS	Yes (4-Mode Satellite Positioning, GPS Assisted Positioning)
Item Weight	1.16 pounds
Product Dimensions	9.65 x 6.02 x 0.25 inches

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the documentation included in your product packaging or visit the official aiprotablenet website. Keep your proof of purchase for warranty claims.



Related Documents - A30

 <p>alcatel A30 TABLET</p> <p>User manual</p>	<p>Alcatel A30 Tablet 8" User Manual - Setup, Features, and Safety Guide</p> <p>The official user manual for the Alcatel A30 Tablet 8". Learn how to set up, use, and troubleshoot your device, covering all features from basic operation to advanced settings. Includes safety guidelines and warranty information.</p>
 <p>VEIKK</p> <p>User Manual BATTERY-FREE PEN TABLET A30 Graphic Pen Tablet</p> <p>www.veikk.com</p>	<p>VEIKK A30 Graphic Pen Tablet User Manual</p> <p>User manual for the VEIKK A30 Battery-Free Pen Tablet, covering product overview, packing list, driver installation, tablet connection, nib replacement, specifications, driver settings, and FAQs.</p>
 <p>VEIKK</p> <p>Quick Start Guide A30 BATTERY-FREE PEN TABLET</p> <p>www.veikk.com</p>	<p>VEIKK A30 Battery-Free Pen Tablet: Quick Start Guide and Specifications</p> <p>A comprehensive guide to setting up and using the VEIKK A30 battery-free pen tablet, including product overview, packing list, driver installation, connection instructions for PC and Android, nib replacement, and technical specifications.</p>
 <p>Yealink</p> <p>Yealink MeetingBar A30 Kit</p> <p>English 简体中文 Deutsch Français Español</p> <p>Quick Start Guide 0110</p>	<p>Yealink MeetingBar A30 Kit Quick Start Guide</p> <p>Get started quickly with the Yealink MeetingBar A30 Kit. This guide provides essential setup and connection instructions for seamless video conferencing.</p>
	<p>Yealink MeetingBar A30: Quick Start and Installation Guide</p> <p>A comprehensive guide to installing, connecting, and pairing the Yealink MeetingBar A30 video conferencing endpoint with the CTP18 touch panel, including setup instructions, box contents, and regulatory information.</p>
 <p>TENMIYA A30 USER'S MANUAL 2.2 CH PORTABLE WIRELESS SPEAKER</p> <p>Read this for guidelines and avoid it! The book can be freely reproduced with credit to the author and the publisher. All rights reserved. ©2018. All rights reserved. All other patents and trademarks belong to their respective owners.</p>	<p>TENMIYA A30 Portable Wireless Speaker User Manual</p> <p>User manual for the TENMIYA A30 2.2 CH Portable Wireless Speaker, covering package contents, technical specifications, product features, safety information, operational specifications, remote control functions, and troubleshooting.</p>

