

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [LEMEGA](#) /

› [LEMEGA MS5 Premium Internet Radio with CD Player User Manual](#)

LEMEGA MS5

LEMEGA MS5 Premium Internet Radio with CD Player User Manual

Model: MS5 | Brand: LEMEGA

INTRODUCTION

Thank you for choosing the LEMEGA MS5 Premium Internet Radio. This device offers a comprehensive audio experience, combining Internet Radio, FM Radio, a CD player, Bluetooth 5.3 streaming, Spotify HiFi, and Podcast playback. It features a 2.4" full-color display, 50 presets, dual alarms, and can be controlled via the OKTIV App or the included remote control. This manual will guide you through the setup, operation, and maintenance of your MS5 unit.

SAFETY INFORMATION

- Read all instructions carefully before use.
- Keep this manual for future reference.
- Do not expose the unit to rain, moisture, or extreme temperatures.
- Ensure proper ventilation; do not block any ventilation openings.
- Use only the power adapter supplied with the unit.
- Do not attempt to disassemble or modify the unit. Refer all servicing to qualified personnel.
- Avoid placing the unit near heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

PACKAGE CONTENTS

Please check that all items listed below are present in your package:

- LEMEGA MS5 Internet Radio Unit
- Power Adapter

- Owner's Manual
- Remote Control

PRODUCT OVERVIEW

Front Panel

The front panel features the CD slot, the 2.4" full-color display, and primary control buttons.



All in one Internet Radio with CD player

Compatible with CD, CD-R, CD-RW Disc playback, Enjoy crystal-clear audio from your CD collection.

Image: Front view of the LEMEGA MS5 unit, showcasing the CD player slot, the central display, and the speaker grilles on either side. A CD is shown partially inserted.

Rear Panel

The rear panel provides various connectivity options including power input, USB port, AUX input, and the FM antenna connection.



Advanced features to elevate your experience, access more ways to play your audio with USB for MP3, AUX, Headphone Out.

Image: Rear view of the LEMEGA MS5 unit, highlighting the extendable FM antenna, DC power input, USB port, and AUX input/output jacks.

Top Controls

The top of the unit features a multi-function rotary knob for navigation and volume control.



Image: Top-down view of the LEMEGA MS5, focusing on the prominent rotary control knob located on the top surface.

SETUP

1. **Unpacking:** Carefully remove the unit and all accessories from the packaging.
2. **Placement:** Place the MS5 on a stable, flat surface away from direct sunlight, heat sources, and moisture. Ensure adequate ventilation around the unit.
3. **Connect FM Antenna:** Extend the telescopic FM antenna located on the rear of the unit for optimal FM reception.
4. **Power Connection:** Connect the supplied power adapter to the DC 12V input on the rear of the MS5, then plug the adapter into a wall outlet. The unit will power on automatically or enter standby mode.
5. **Initial Setup Wizard:** Upon first power-on, the unit will guide you through an initial setup wizard. Follow the on-screen prompts to set language, time format, and connect to your Wi-Fi network.
 - Use the rotary knob to navigate menus and adjust settings. Press the knob to confirm selections.
 - For Wi-Fi setup, select your network from the list and enter the password using the on-screen keyboard.

OPERATING INSTRUCTIONS

Power On/Off and Standby

Press the **Power** button on the unit or remote control to switch between On and Standby modes.

Mode Selection

Use the **Mode** button on the remote or navigate through the main menu on the unit to select desired audio sources: Internet Radio, FM Radio, CD, Bluetooth, USB, or AUX.

Internet Radio

1. Select **Internet Radio** mode.
2. Browse stations by location, genre, or search by name using the rotary knob and display.
3. Press the rotary knob to select a station.
4. To save a preset, press and hold the **Preset** button on the remote or the corresponding button on the unit. Follow the on-screen instructions to assign it to one of the 50 available preset slots.

FM Radio

1. Select **FM Radio** mode.
2. Use the **Tune** buttons on the remote or rotate the main knob to manually tune to a station.
3. For automatic scanning, press and hold the **Tune** button or follow the on-screen menu option.
4. Save presets as described for Internet Radio.

CD Player

1. Select **CD** mode.
2. Gently insert a CD into the CD slot on the front panel. The unit will automatically load and begin playback.
3. Use the **Play/Pause**, **Stop**, **Skip Forward**, and **Skip Backward** buttons on the unit or remote control to manage playback.
4. The MS5 supports CD, CD-R, and CD-RW discs.

Bluetooth Streaming

1. Select **Bluetooth** mode. The unit will enter pairing mode, indicated on the display.
2. On your mobile device (smartphone, tablet, laptop), enable Bluetooth and search for available devices.
3. Select "**LEMEGA MS5**" from the list to pair. Once connected, you can stream audio from your device to the MS5.

Spotify HiFi & Podcast Player

- **Spotify Connect:** Ensure your MS5 is connected to the same Wi-Fi network as your Spotify-enabled device. Open the Spotify app on your device, select a song, and then choose the MS5 from the "Devices Available" list to stream directly.
- **Podcast Player:** Access the Podcast Player through the main menu. Browse and select podcasts. The unit supports bookmarking and following features.

USB Playback

Insert a USB flash drive containing MP3 audio files into the USB port on the rear panel. Select **USB** mode to browse and play your music files.

AUX Input

Connect an external audio device (e.g., MP3 player, smartphone) to the **AUX IN** port on the rear panel using a 3.5mm audio cable. Select **AUX** mode to play audio from the connected device.

OKTIV App Control

Download the **OKTIV App** from your device's app store. Ensure your smartphone/tablet is connected to the same Wi-Fi network as your MS5. Open the app and follow the instructions to connect and control all functions of your MS5 wirelessly.

Dual Alarm & Sleep Timer

- **Setting Alarms:** Access the **Alarm** settings through the system menu. You can set two independent alarms with options for weekday/weekend modes, alarm source (FM, Internet Radio, CD, or buzzer), and volume.
- **Sleep Timer:** Access the **Sleep Timer** function through the system menu. Set a duration (e.g., 15, 30, 60 minutes) after which the unit will automatically switch to standby mode.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners, waxes, or solvents.
- **CD Player Care:** Handle CDs by their edges to avoid fingerprints and scratches. Use a clean, lint-free cloth to wipe CDs from the center outwards.
- **Storage:** If storing the unit for an extended period, disconnect it from the power outlet and store it in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected or faulty outlet.	Ensure the power adapter is securely connected to the unit and a working power outlet. Try a different outlet.
No sound	Volume too low; Mute activated; Incorrect source selected; Faulty audio cable (AUX).	Increase volume. Check if the unit is muted. Ensure the correct audio source is selected. If using AUX, check the cable connection.
Internet Radio not connecting	Incorrect Wi-Fi password; Weak Wi-Fi signal; Router issue.	Verify Wi-Fi password. Move the unit closer to the router or check router status. Re-run Wi-Fi setup.
Bluetooth pairing failed	MS5 not in pairing mode; Device too far; Bluetooth disabled on source device.	Ensure MS5 is in Bluetooth pairing mode. Keep devices within range. Enable Bluetooth on your source device and re-scan.

Problem	Possible Cause	Solution
CD not playing	CD inserted incorrectly; Disc is dirty or scratched; Unsupported disc format.	Re-insert CD correctly. Clean the disc. Ensure it is a supported format (CD, CD-R, CD-RW).
Audio fading at low volume (below 13)	Potential firmware or hardware characteristic.	This behavior has been reported by some users. If consistent, try to operate at volume levels 13 or higher. If the issue persists and affects usability, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	MS5
Product Dimensions	15 x 9 x 5.51 inches (38.1 x 22.86 x 14 cm)
Item Weight	12 pounds (5.44 kg)
Connectivity Technology	Bluetooth 5.3, USB, Wi-Fi
Tuner Technology	Internet Radio, FM Radio
Special Feature	Built-In Clock, Dual Alarm, Sleep Timer, Spotify Connect, Podcast Player, OKTIV App Control
Display	2.4" Full Colour Display
Presets	50 (for radio stations & podcast episodes)
Power Source	Power adapter
Supported Disc Formats	CD, CD-R, CD-RW

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official LEMEGA website.

If you encounter any issues or have questions regarding your LEMEGA MS5, please contact LEMEGA customer support for assistance.

- **Online Support:** Visit the LEMEGA website for FAQs and support resources.
- **Contact:** Refer to the contact information provided in your product packaging or on the LEMEGA website.

