

[Manuals.plus](#) /

> [AGXOV](#) /

> AGXOV P20 MP3 Player User Manual

AGXOV P20

AGXOV P20 MP3 Player User Manual

Comprehensive instructions for your AGXOV P20 multimedia device.

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your AGXOV P20 MP3 Player. Please read this manual thoroughly before using the device and retain it for future reference. The AGXOV P20 is a versatile multimedia player designed for music, video, and app usage, featuring a 4.02-inch HD touchscreen, Bluetooth, and Wi-Fi connectivity.



Image: Front and back view of the AGXOV P20 MP3 Player, showcasing its design and screen.

WHAT'S IN THE BOX

Verify that all items are present in the package:

- 1 x AGXOV P20 MP3 Player
- 1 x 128GB SD card
- 1 x Wired headphones
- 1 x USB-C cable
- 1 x User manual
- 1 x Screen Protector
- 1 x Protective Case

Image: The AGXOV P20 MP3 Player and its included accessories: USB-C cable, wired headphones, screen protector, protective case, and user manual.

PRODUCT OVERVIEW

The AGXOV P20 is designed for a comprehensive multimedia experience. It features a durable metal bezel and a responsive touchscreen.

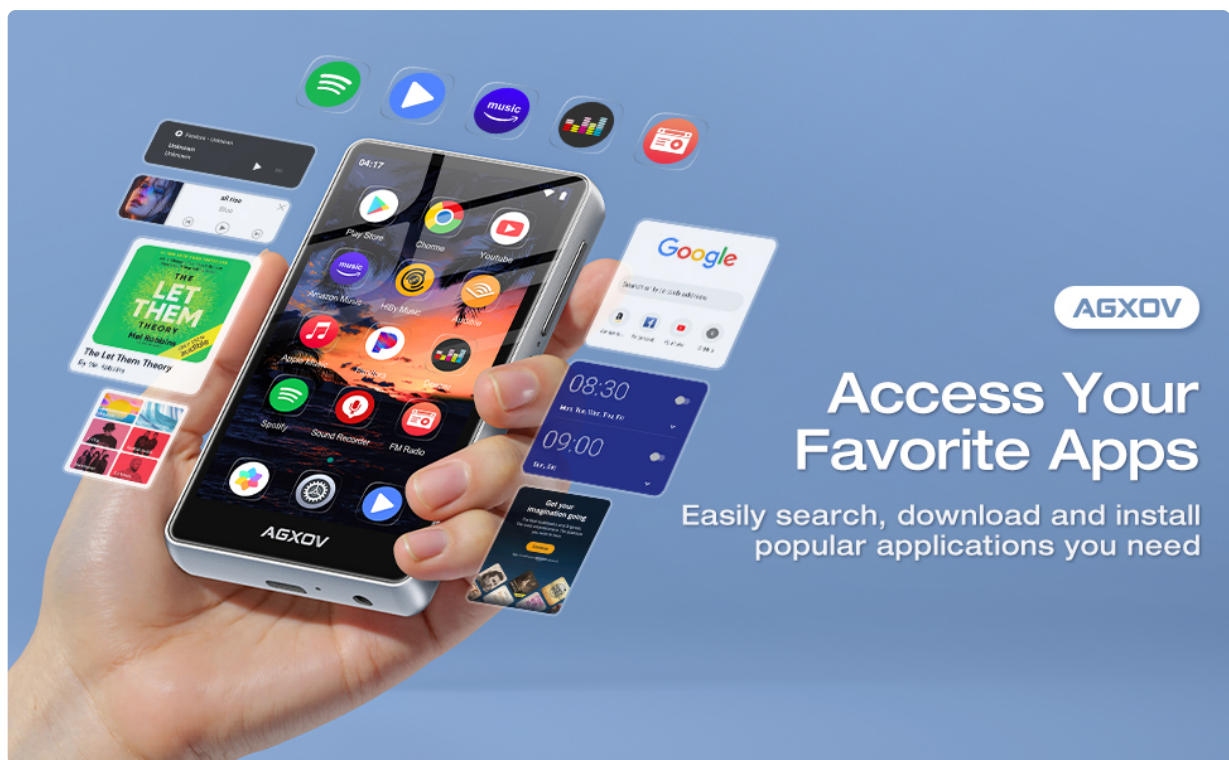


Image: Close-up of the AGXOV P20 MP3 Player highlighting its rugged metal bezel design.

Package Included

1 x P20 Music Player 1 x USB C Cable 1 x Wired Earphones
1 x Screen Protector 1 x Protective Case 1 x User Manual 1 x 128GB SD Card



Image: The AGXOV P20 MP3 Player surrounded by icons representing its all-in-one multimedia capabilities, including music, video, FM radio, and e-book functions.

SETUP

1. Charging the Device

Before first use, fully charge the AGXOV P20. Connect the provided USB-C cable to the device's USB-C port and the other end to a compatible USB power adapter (not included) or a computer's USB port. The charging indicator will show the charging status.

2. Power On/Off

- **Power On:** Press and hold the power button located on the side of the device until the screen lights up.
- **Power Off:** Press and hold the power button until a power-off menu appears. Select "Power Off" to shut down the device.

3. Initial Setup (Language, Wi-Fi)

Upon first power-on, follow the on-screen prompts to select your preferred language and connect to a Wi-Fi network. A stable Wi-Fi connection is necessary for accessing online streaming services and system updates.

4. Transferring Files

Connect the AGXOV P20 to your computer using the USB-C cable. The device will appear as a removable storage device. You can drag and drop music, video, and e-book files directly into the appropriate folders on the device or the installed 128GB SD card.

OPERATING INSTRUCTIONS

1. Navigation (Touchscreen)

The AGXOV P20 features a 4.02-inch HD touchscreen. Navigate through menus and applications by tapping, swiping, and pinching gestures, similar to a smartphone interface.

2. Music Playback

Access the music player application to browse and play your audio files. The device supports various formats including MP3, WAV, FLAC, APE, OGG, M4A, AAC, and WMA. Enjoy near-HIFI sound quality through the optimized audio circuit.

The graphic features a central tablet displaying a snowboarder in a blue and white suit performing a trick. To the left of the tablet are six icons with text labels: a resolution icon for '480*480PX Resolution', a loop icon for 'Loop and Random', an IPS icon for 'Wider viewing angle', a speedometer icon for 'Variable speed playing', a clock icon for 'Support sleep timer', and a zoom icon for 'Gesture zoom/expansion'. Below the tablet, the text reads 'Support for most video formats: RM \ RMVB \ FLV \ MP4 \ DAT / MKV \ MPG \ MOV\TS'. The background is a blurred image of a snowboarder.

Professional Video Player
Immersive visuals on a compact 4-inch HD screen

480*480PX Resolution
Loop and Random
Wider viewing angle
Variable speed playing
Support sleep timer
Gesture zoom/expansion

AGXOV

Support for most video formats: RM \ RMVB \ FLV \ MP4 \ DAT / MKV \ MPG \ MOV\TS

Image: The AGXOV P20 MP3 Player with a graphic indicating HIFI sound quality and supported music formats.

3. Video Playback

The 4.02-inch HD touchscreen supports 720p and 1080p video playback. The device is compatible with video formats such as RM, RMVB, FLV, MP4, DAT, MKV, MPG, MOV, and TS. Use the video player application for an immersive visual experience.

Your All-in-One Music Companion



Alarm Clock
Function Support



Digital Voice
Recording Support



MP3 Player
Born for Sports

Image: The AGXOV P20 MP3 Player displaying a full HD video, illustrating its cinematic experience capability.

4. Bluetooth Connection

The AGXOV P20 features Bluetooth connectivity for pairing with wireless headphones, speakers, and other Bluetooth-enabled devices. To connect:

1. Go to Settings > Bluetooth.
2. Turn on Bluetooth.
3. Select your desired device from the list of available devices to pair.

AGXOV 144GB MP3 Player

Carry your entire music world,
indulge in musical freedom



Image: The AGXOV P20 MP3 Player demonstrating universal Bluetooth compatibility with various audio

devices like headphones and speakers.

5. Wi-Fi Connection

Connect to Wi-Fi for internet access, app downloads, and streaming services.

1. Go to Settings > Network & Internet > Wi-Fi.
2. Turn on Wi-Fi.
3. Select your network and enter the password if required.

6. Using Pre-installed Apps

The device comes with popular apps like Spotify, Amazon Music, and more. Access these directly from the home screen. Additional apps can be downloaded from the Play Store.



Image: The AGXOV P20 MP3 Player showcasing its ability to access various popular applications.

7. Other Built-in Applications

The AGXOV P20 includes a voice recorder, FM radio, and e-book reader. These can be accessed from the main application menu.

MAINTENANCE

1. Cleaning

Use a soft, dry, lint-free cloth to clean the device. Avoid using abrasive cleaners or solvents that may damage the screen or casing.

2. Battery Care

To prolong battery life, avoid exposing the device to extreme temperatures. Charge the device regularly and avoid completely draining the battery frequently.



Image: The AGXOV P20 MP3 Player highlighting its 2000mAh high-capacity battery, offering extended music and video playback.

3. System Updates

The device supports manual system updates to improve compatibility and performance. Check for updates periodically via Settings > System > System Update.



Image: The AGXOV P20 MP3 Player displaying a system update interface, indicating the process for manual system updates.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery; device frozen.	Charge the device for at least 30 minutes. If still unresponsive, perform a hard reset by holding the power button for 10-15 seconds.
Cannot connect to Wi-Fi.	Incorrect password; out of range; router issue.	Verify Wi-Fi password. Move closer to the router. Restart your Wi-Fi router.
Bluetooth device not pairing.	Device not in pairing mode; too far apart; interference.	Ensure the Bluetooth accessory is in pairing mode. Keep devices within 1 meter. Turn off other Bluetooth devices nearby.
Apps not working or crashing.	Poor internet connection; app specific issue; insufficient memory.	Check Wi-Fi connection. Clear app cache/data (Settings > Apps). Restart the device. Ensure sufficient storage space.
Short battery life.	High screen brightness; many apps running in background; old battery.	Reduce screen brightness. Close unused background apps. Limit streaming. If battery life remains significantly short, contact support.

SPECIFICATIONS

Feature	Detail
Model Number	P20
Display	4.02-inch HD Touchscreen
Internal Storage	144GB (includes 128GB SD card)
Expandable Storage	Up to 1TB (via Micro SD card)
Connectivity	Dual-band Wi-Fi, Bluetooth, USB-C
Operating System	Android 9.0
Processor	MTK 8-core processor
Battery Capacity	2000mAh
Music Playback Time	Up to 45-50 hours
Video Playback Time	Up to 6-8 hours
Supported Audio Formats	MP3, WAV, FLAC, APE, OGG, M4A, AAC, WMA
Supported Video Formats	RM, RMVB, FLV, MP4, DAT, MKV, MPG, MOV, TS
Dimensions	0.5 x 2.5 x 3.5 inches
Weight	9.6 ounces



Image: Internal view of the AGXOV P20 MP3 Player, illustrating its MTK 8-core processor, 16GB ROM, 2GB RAM, and 128GB SD card, with expansion up to 512GB.

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included in your product packaging or visit the official AGXOV website. Keep your purchase receipt as proof of purchase for warranty claims.

Online Support: For frequently asked questions and further assistance, please visit the AGXOV support page at [AGXOV Store on Amazon](#).