

[manuals.plus](#) /

- › [SKMEI](#) /
- › [SKMEI Digital Watch Model SKM-1123-Black User Manual](#)

## SKMEI SKM-1123

# SKMEI Digital Watch Model SKM-1123-Black User Manual

Your guide to setting up and using your SKMEI Digital Watch.

## 1. PRODUCT OVERVIEW

The SKMEI Digital Watch Model SKM-1123-Black is a versatile timepiece designed for daily use, featuring a digital display and a durable stainless steel strap. It combines classic aesthetics with modern functionality, suitable for various occasions.



Figure 1: Front view of the SKMEI Digital Watch Model SKM-1123-Black.

## Key Features:

- **Multifunction Digital Movement:** Integrates time display, chronograph, alarm, date, and week functions.
- **Stainless Steel Metal Strap:** Polished strap for comfort and durability.
- **Square Dial with LED Backlight:** Clear digital display with illumination for low-light conditions.
- **30M Daily Waterproof:** Suitable for daily activities like handwashing and rain exposure.

# FUNCTION OVERVIEW

EACH FUNCTIONAL DESIGN, ALL FOR YOUR CARING SERVICE, RECORDING EVERY MOMENT OF LIFE.



TIME



STOPWATCH



WEEK



ALARM



DATE



LED LIGHT



WR 30M



12/24 12/24 HOUR

Figure 2: Visual representation of the watch's functions including Time, Stopwatch, Week, Alarm, Date, LED Light, WR 30M, and 12/24 Hour format.

## 2. INITIAL SETUP

Before using your watch, it is recommended to set the correct time, date, and any desired alarms.

### Button Functions:

The watch typically features four buttons: MODE, LIGHT, START/STOP, and ADJ (or SET). Refer to the watch casing for specific button labels.

- **MODE:** Cycles through different display modes (Time, Alarm, Stopwatch).
- **LIGHT:** Activates the LED backlight.
- **START/STOP:** Used for starting/stopping the stopwatch or adjusting values during setting.
- **ADJ/SET:** Enters/exits setting mode and confirms selections.

### Setting Time and Date:

1. In normal time display mode, press the **MODE** button repeatedly until you reach the time setting screen (often indicated by flashing digits).

2. Press the **ADJ/SET** button to select the value you wish to adjust (e.g., seconds, minutes, hours, 12/24-hour format, month, date, day of week).
3. Use the **START/STOP** button to increase the selected value. Hold it down for faster adjustment.
4. Continue pressing **ADJ/SET** to move to the next setting, and **START/STOP** to adjust.
5. Once all settings are complete, press **MODE** or **ADJ/SET** again to exit the setting mode.

### 3. OPERATING INSTRUCTIONS

---

#### Using the Backlight:

Press the **LIGHT** button to illuminate the digital display for a few seconds, allowing readability in dark environments.

Your browser does not support the video tag.

Video 1: Demonstration of the SKMEI watch's features, including the LED backlight and water resistance.

#### Using the Stopwatch:

1. From normal time display, press the **MODE** button until the stopwatch mode is displayed (usually indicated by "00:00:00").
2. Press the **START/STOP** button to start the stopwatch.
3. Press **START/STOP** again to pause the stopwatch.
4. To reset the stopwatch, press the **ADJ/SET** button while the stopwatch is paused.
5. Press **MODE** to return to normal time display.

#### Setting and Using the Alarm:

1. From normal time display, press the **MODE** button until the alarm setting mode is displayed (often indicated by "AL" or an alarm icon).
2. Press the **ADJ/SET** button to select the hour digits, then use **START/STOP** to adjust the hour.
3. Press **ADJ/SET** again to select the minute digits, then use **START/STOP** to adjust the minutes.
4. Press **ADJ/SET** to toggle the alarm ON/OFF. An alarm icon will appear when activated.
5. Press **MODE** to exit the alarm setting mode.
6. When the alarm sounds, press any button to stop it.

### 4. MAINTENANCE AND CARE

---

Proper care will ensure the longevity and performance of your SKMEI Digital Watch.

#### Water Resistance:

This watch is rated for 30M (3ATM) water resistance. This means it is suitable for daily use, such as handwashing, rain, and accidental splashes. It is *not* recommended for swimming, diving, or showering with hot water, as steam and pressure can compromise the seals.

#### Cleaning:

- Wipe the watch case and strap with a soft, damp cloth.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the finish.
- For stainless steel straps, a soft brush can be used to clean between links if necessary.

## Battery Replacement:

The watch uses a CR2032 battery. When the display dims or functions become erratic, the battery may need replacement. It is recommended to have battery replacement performed by a qualified watch technician to ensure proper sealing and water resistance.

## 5. TROUBLESHOOTING

---

If you encounter issues with your watch, refer to the following common problems and solutions:

- **Display is blank or dim:**

- Check battery level. Battery may need replacement.
- Ensure no buttons are stuck.

- **Time is incorrect:**

- Re-set the time and date following the instructions in Section 2.

- **Water inside the watch:**

- Immediately stop using the watch.
- This indicates a breach in water resistance. Seek professional repair. Avoid exposing the watch to water beyond its 30M rating.

- **Buttons are unresponsive:**

- Ensure the watch is not in a locked mode (if applicable, though this model typically does not have one).
- Try pressing buttons firmly. If unresponsive, the watch may require service.

## 6. SPECIFICATIONS

---

Feature	Detail
Model Number	SKM-1123-Black
Movement	Digital Quartz
Water Resistance	30M (3ATM)
Case Material	Stainless Steel
Strap Material	Stainless Steel
Clasp Type	Buckle
Item Dimensions	9.06 x 1.48 x 1.39 inches
Item Width	37.7 millimeters
Battery Code	CR2032

## 7. WARRANTY AND SUPPORT

---

For warranty information or technical support, please refer to the retailer where the product was purchased

or visit the official SKMEI website. Keep your proof of purchase for any warranty claims.

© 2026 SKMEI. All rights reserved.