

[Manuals.plus](#) /

> [Treocho](#) /

> Treocho Play Kitchen TK2401-WH Instruction Manual

Treocho TK2401-WH

Treocho Play Kitchen TK2401-WH Instruction Manual

Model: TK2401-WH

1. INTRODUCTION AND OVERVIEW

The Treocho Play Kitchen TK2401-WH is a modern, multifunctional wooden play kitchen designed to provide an immersive and engaging role-play experience for children aged 3 and up. This set features realistic appliances and accessories, encouraging imaginative play and the development of essential skills.



Image: The Treocho Play Kitchen in white, showcasing its various features including a sink, stove, microwave, and refrigerator with an ice maker.

2. SAFETY INFORMATION

WARNING: Contains small objects and is not suitable for children under 2 years of age.

- Adult supervision is recommended during play.
- Regularly inspect the play kitchen for any loose parts or damage. Tighten screws as needed.
- This product is crafted from eco-friendly, non-toxic hardwood that meets US ASTM F963 and CPSIA standards, ensuring both durability and safety.
- Ensure the play kitchen is placed on a stable, flat surface to prevent tipping.

Safe&Durable Materials

.....
Crafted from eco-friendly, non-toxic hardwood.

Faucet&Sink



Stove&Knobs

Image: Detailed view of the play kitchen's faucet, sink, stove, and control knobs, emphasizing the quality and safety of the materials used.

3. WHAT'S IN THE BOX (COMPONENTS)

The Treocho Play Kitchen set includes various components for assembly and play. Please refer to the detailed assembly instructions provided in the packaging for a complete list of parts and hardware.

- Main wooden panels for the kitchen structure
- Functional microwave unit
- Washing machine door with visual details
- Faucet and sink assembly
- Stove top with interactive knobs
- Chalkboard door for creative expression
- Icemaker dispenser with play ice cubes
- Play telephone
- Towel rack
- Dishwasher door with visual details

- Various realistic cooking accessories (e.g., pots, pans, utensils)
- Assembly hardware (screws, hinges, etc.)

4. SETUP AND ASSEMBLY

The Treocho Play Kitchen is designed for straightforward assembly. Follow the step-by-step instructions provided in the included manual. A screwdriver is typically sufficient, but a power drill can expedite the process. Ensure all parts are correctly oriented before tightening screws.

Assembly Overview Video

Video: An official seller video demonstrating the assembly process of the Treocho Play Kitchen. This video provides a visual guide to help with each step.

Detailed Assembly Steps Video

Video: A detailed video showing the step-by-step assembly of the wooden toddler kitchen set, including attaching various components and ensuring proper fit.

Visual Guide to Components



Image: An exploded view of the Treocho Play Kitchen, showing all individual parts and hardware laid out for assembly.

5. OPERATING INSTRUCTIONS

The Treocho Play Kitchen offers a variety of interactive features for imaginative play:

- **Microwave:** Open and close the microwave door. Children can pretend to heat up play food.
- **Faucet & Sink:** Turn the faucet knobs to simulate water flow. The sink basin can be used for pretend washing of dishes.
- **Stove:** Turn the stove knobs, which often produce a clicking sound for added realism. Place play pots and pans on the burners.
- **Icemaker:** Press the dispenser button on the refrigerator door to release play ice cubes, enhancing realistic play.
- **Chalkboard:** Use chalk (not included) to write menus, grocery lists, or draw pictures on the refrigerator door.
- **Washing Machine & Dishwasher:** Open and close the doors of the washing machine and dishwasher to load and unload play laundry or dishes.

- **Telephone:** Use the play telephone for pretend conversations, adding a social element to play.

Product Features Demonstration Video

Video: A video showcasing the various interactive features of the Treocho Play Kitchen, including the ice maker, stove knobs, and opening doors.

Realistic & Sturdy Design Video

Video: A video highlighting the realistic design and sturdy construction of the wooden play kitchen, demonstrating its various functional areas.

MULTIPLE PLAY AREAS

Includes a variety of realistic cooking accessories to make pretend play more lively and engaging. Sparks creativity and imagination



Image: A visual breakdown of the play kitchen's multiple interactive areas, including the microwave, ice maker, chalkboard, washing machine, telephone, and towel rack.

6. MAINTENANCE

To ensure the longevity and cleanliness of your Treocho Play Kitchen, follow these maintenance guidelines:

- **Cleaning:** Wipe down surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the wood finish.
- **Inspection:** Periodically check all screws and connections to ensure they are tight and secure. Tighten any loose hardware to maintain stability.
- **Storage:** Store the play kitchen in a dry environment away from direct sunlight or extreme temperatures to prevent warping or fading of the wood.
- **Accessories:** Keep play accessories clean and stored in the designated storage areas to prevent clutter and loss.

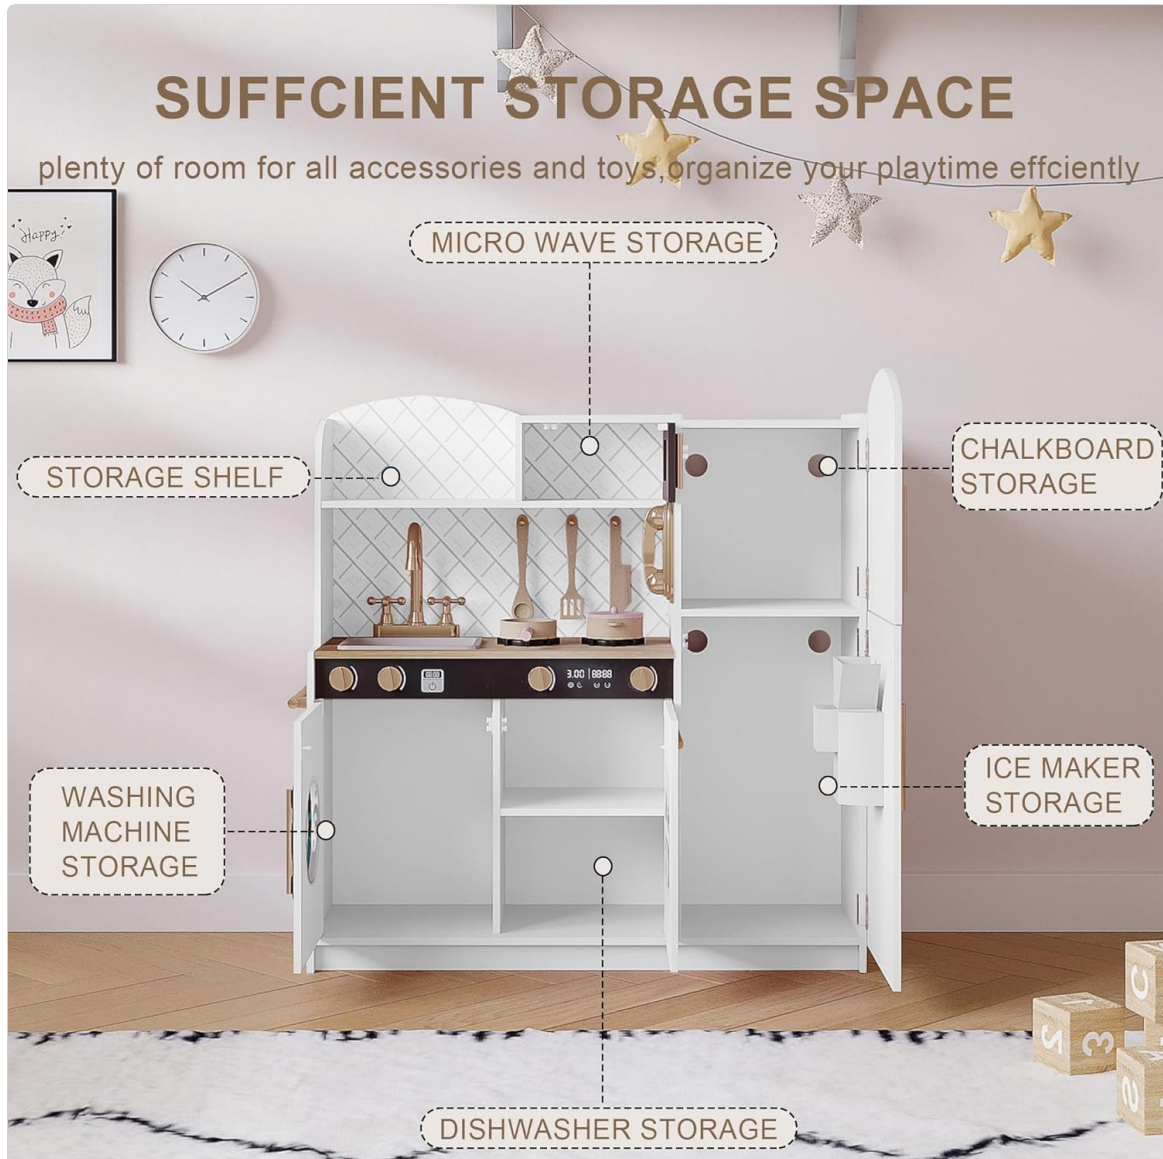


Image: A diagram highlighting the various storage compartments within the play kitchen, such as shelves, microwave space, and dedicated areas for the ice maker and appliances.

7. TROUBLESHOOTING

If you encounter any issues with your Treocho Play Kitchen, please refer to the following common troubleshooting tips:

- **Loose Parts:** If any parts feel wobbly or loose, re-check the assembly instructions and tighten the corresponding screws.
- **Doors Not Closing Properly:** Ensure hinges are correctly installed and screws are tight.

Sometimes a slight adjustment of the hinge position can resolve this.

- **Missing Parts:** If you find any parts missing upon unboxing, please contact customer support immediately.
- **General Assembly Difficulties:** Review the assembly videos and instructions carefully. If problems persist, our customer support team is ready to assist.

8. SPECIFICATIONS

Feature	Detail
Brand	Treocho
Model Number	TK2401-WH
Material Type	Engineered Wood
Item Dimensions (D x W x H)	11.81" x 31.5" x 31.5"
Age Range Description	Kid (Manufacturer Minimum Age: 36 Months, Maximum Age: 72 Months)
Included Components	Kids Kitchen Set

9. WARRANTY AND SUPPORT

Treocho is committed to providing high-quality products and excellent customer service. While specific warranty details are not provided in this manual, our customer support team is available to assist with any questions, concerns, or issues you may encounter with your play kitchen.

For assistance, please visit the [Treocho Store on Amazon](#) or contact us through the platform where you purchased the product. Please have your model number (TK2401-WH) and purchase details ready when contacting support.