

UREVO URTM025

UREVO Spacewalk E4 APP Walking Pad Instruction Manual

Model: URTM025

1. INTRODUCTION

Welcome to the UREVO Spacewalk E4 APP Walking Pad. This portable walking treadmill is designed for home and office use, offering a convenient way to integrate physical activity into your daily routine. Featuring a powerful yet quiet motor, smart app control, and a compact design, the Spacewalk E4 provides an efficient and comfortable exercise experience. Please read this manual thoroughly before initial use to ensure proper setup, operation, and maintenance.



Image 1.1: The UREVO Spacewalk E4 Walking Pad, demonstrating its use for walking and as an under-desk treadmill.

2. SAFETY INFORMATION

To ensure safe operation and prevent injury, please adhere to the following safety guidelines:

- Always place the walking pad on a flat, stable surface.
- Ensure adequate clear space around the walking pad (at least 2 feet on all sides).
- Do not allow children or pets near the walking pad during operation.
- Wear appropriate athletic footwear.
- Do not operate the walking pad if it is damaged or malfunctioning.
- Keep hands and feet clear of moving parts.
- Unplug the walking pad from the power outlet when not in use or before cleaning/maintenance.
- The maximum user weight for this device is 242 pounds (110 kg).
- Consult a physician before starting any new exercise program.

3. PACKAGE CONTENTS

Carefully unpack the box and ensure all items are present. If any items are missing or damaged, please

contact customer support.

- UREVO Spacewalk E4 Walking Pad
- Power Cord
- User Manual
- APP Installation Instruction Card
- Lubricant (2 bottles)
- Wrench
- Hexagonal Screwdriver
- Remote Control (with battery)

Your browser does not support the video tag.

Video 3.1: Unboxing and initial setup of the UREVO Spacewalk E4 Walking Pad, showing all included accessories.

4. SETUP INSTRUCTIONS

1. **Placement:** Place the walking pad on a level, hard surface. Ensure there is sufficient space around the unit for safe operation.
2. **Power Connection:** Connect the power cord to the walking pad's power inlet and then plug it into a standard electrical outlet. Turn on the main power switch, usually located near the power inlet. The LED display should illuminate.
3. **Remote Control Battery:** Insert the provided battery into the remote control.
4. **App Download:** Locate the QR code on the walking pad's display panel or on the APP installation instruction card. Scan the QR code with your smartphone to download the UREVO APP.

Plug & Play Convenience

Easy setup, simple to use and store.



Image 4.1: Demonstrating the ease of moving and storing the UREVO Spacewalk E4 Walking Pad.

5. OPERATING INSTRUCTIONS

5.1. Using the Remote Control

- **On/Off/Pause Button (Play/Pause icon):**
 - Short press to turn the walking pad On or Pause/Resume operation.
 - Long press to turn the walking pad Off.
- **Speed Adjustment (+/- Buttons):**
 - Short press '+' or '-' to increase or decrease speed incrementally.

- Long press '+' or '-' for continuous speed adjustment.
- **Mode Button:** Press to cycle through different display modes (Time, Distance, Calories).
- **Mute Button:** Press to mute or unmute buzzer voices.

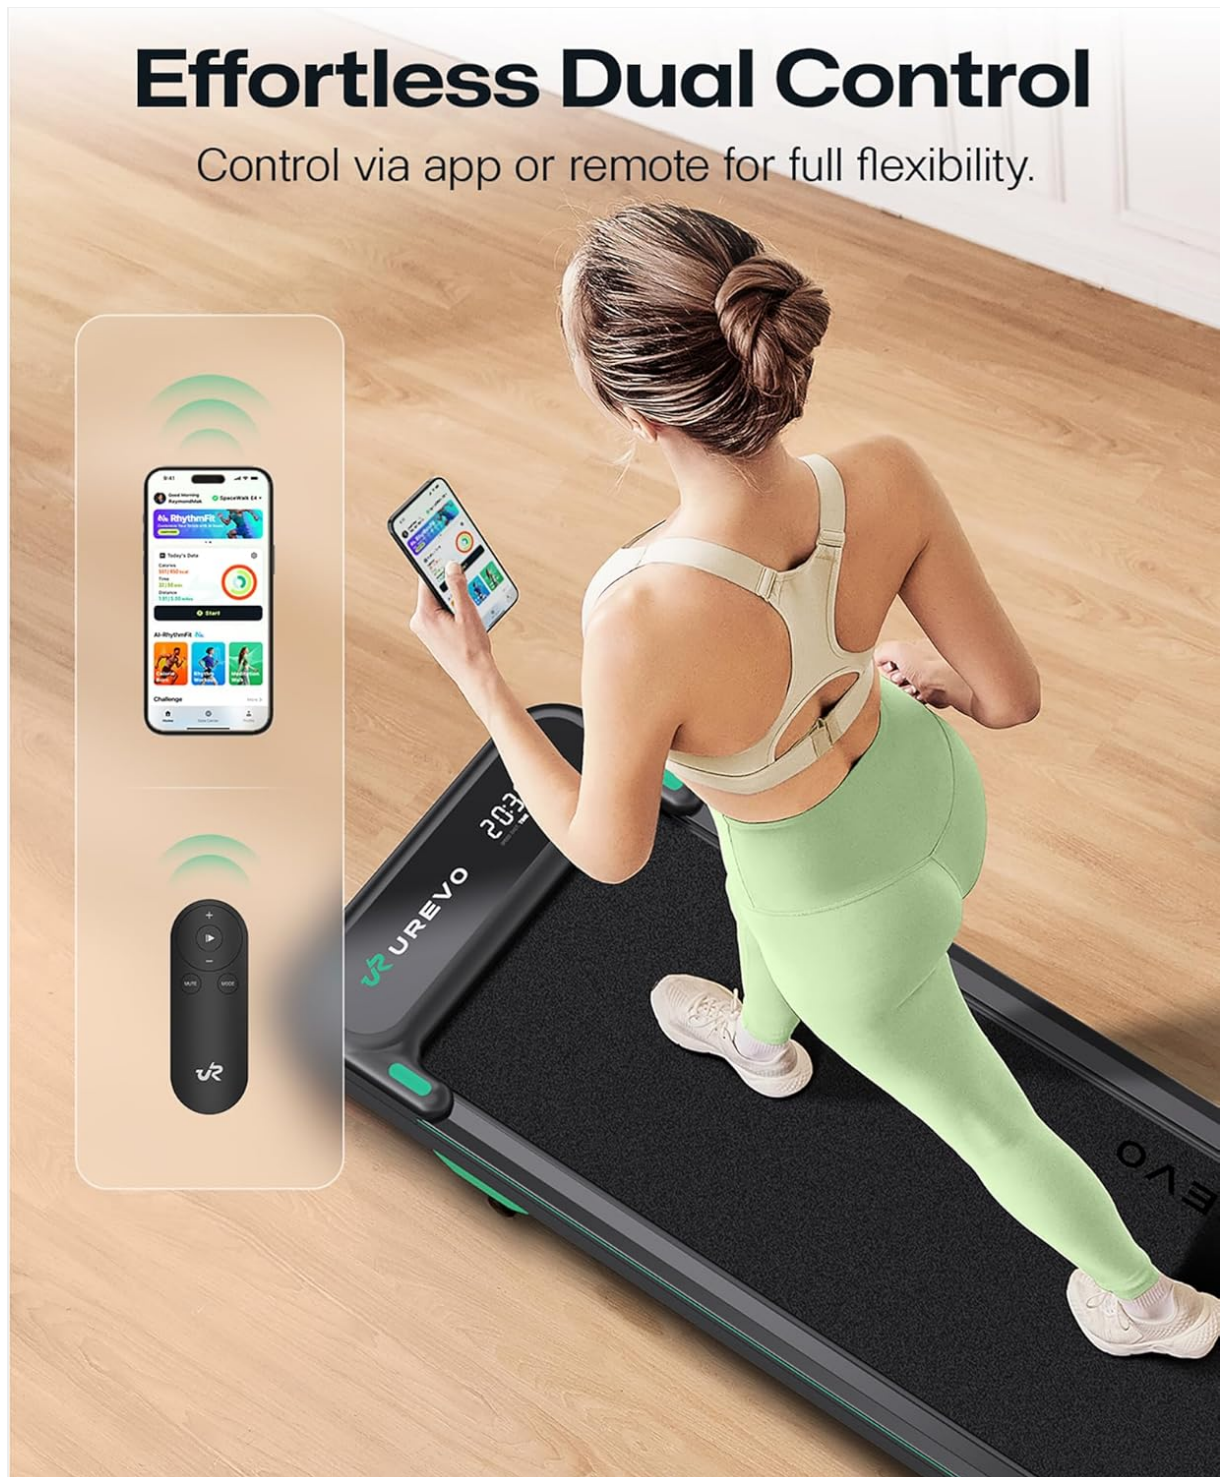


Image 5.1: The UREVO Spacewalk E4 Walking Pad, highlighting its dual control options via remote and smartphone app.

5.2. Starting a Workout

1. Ensure the walking pad is plugged in and the main power switch is on.
2. Short press the On/Off button on the remote control. The display will show a countdown (e.g., "3-2-1") and then start at a low speed (e.g., 0.5 MPH).
3. Use the '+' and '-' buttons to adjust your desired walking speed. The maximum speed is 4 MPH.
4. To pause, short press the On/Off button. To resume, short press it again.

5. To end your workout, long press the On/Off button to turn off the walking pad.

5.3. Preset Modes

The walking pad offers preset countdown modes for your workouts:

- **Mode 1:** 30-minute countdown.
- **Mode 2:** 3-mile countdown.
- **Mode 3:** 300-calorie countdown.

To select a mode, press the 'Mode' button on the remote control until your desired mode is displayed. The walking pad will automatically count down from the preset value.

6. UREVO FITNESS APP INTEGRATION

The UREVO Spacewalk E4 can be connected to the UREVO Fitness App via Bluetooth for enhanced control and tracking features.

6.1. Connecting to the App

1. Download the UREVO Fitness App from your device's app store (scan the QR code on the treadmill or instruction card).
2. Ensure Bluetooth is enabled on your smartphone.
3. Open the UREVO Fitness App and follow the on-screen instructions to pair with your Spacewalk E4.

6.2. App Features

- **Workout Customization:** Easily customize your walking pad workout settings.
- **Progress Tracking:** Monitor your time, distance, calories burned, and steps.
- **Smart Sports Assistant:** Access data-driven insights to optimize your workouts and track fitness goals.
- **Outdoor Scene Mode:** Experience virtual outdoor environments during your workout.
- **Competitive Mode:** Engage in virtual races and challenges.

Smart Sports Assistant

Easily create and stick to your routine.



Image 6.1: The UREVO Fitness App displaying workout data and connectivity options.

7. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your UREVO Spacewalk E4 Walking Pad.

- **Cleaning:** Wipe down the walking pad with a damp cloth after each use. Avoid using abrasive cleaners or solvents.
- **Lubrication:** The walking belt requires periodic lubrication to reduce friction and extend its lifespan. Use the provided lubricant or a high-quality treadmill lubricant. Refer to the detailed instructions in the included User Manual for proper application frequency and method.
- **Belt Adjustment:** If the walking belt becomes misaligned or too loose/tight, use the hexagonal

screwdriver to adjust the tension. Consult the full User Manual for specific instructions on belt alignment and tensioning.

- **Storage:** When not in use, store the walking pad in a dry, cool place. Its compact design allows for easy storage under furniture.

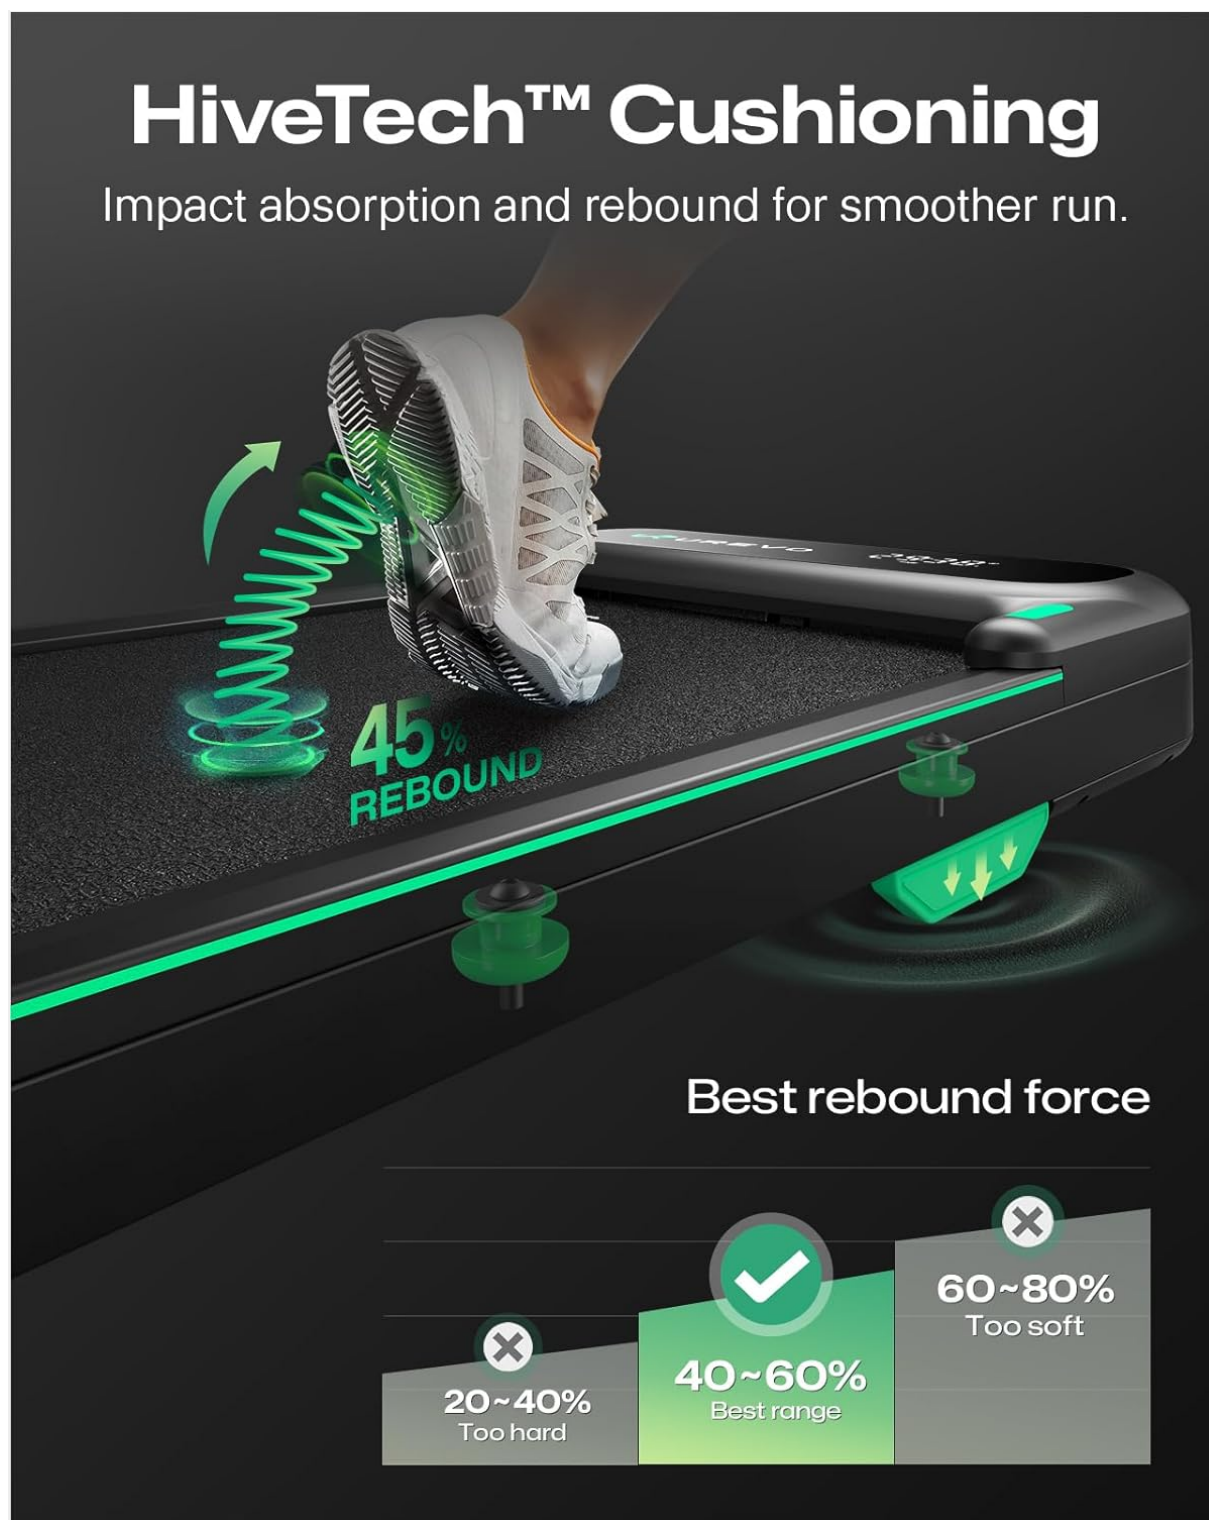


Image 7.1: Illustration of the HiveTech Cushioning system, designed for joint protection and comfort.

8. TROUBLESHOOTING

If you encounter issues with your UREVO Spacewalk E4, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Walking pad does not power on.	Power cord not connected, main switch off, power outlet issue.	Ensure power cord is securely connected. Turn on the main power switch. Test the outlet with another device.
Remote control not responding.	Dead battery, remote not paired.	Replace the remote control battery. Ensure the remote is pointed towards the walking pad's sensor.
Walking belt slips or hesitates.	Belt too loose, insufficient lubrication.	Adjust belt tension using the hexagonal screwdriver. Apply lubricant as per maintenance instructions.
Unusual noise during operation.	Loose components, belt misalignment, motor issue.	Check for any loose screws. Adjust belt alignment. If noise persists, contact customer support.
App connection issues.	Bluetooth off, app not updated, pairing error.	Ensure Bluetooth is on. Restart the app and walking pad. Re-attempt pairing. Update the app to the latest version.

9. SPECIFICATIONS

Feature	Detail
Brand	UREVO
Model Name	URTM025
Product Dimensions	46.8"D x 19.3"W x 4.8"H
Item Weight	37.5 Pounds
Material	Alloy Steel
Maximum Speed	4 Miles per Hour
Minimum Speed	0.5 Miles per Hour
Maximum Horsepower	2 Horsepower
Maximum Weight Recommendation	242 Pounds
Display Type	LED Display
Connectivity Technology	Bluetooth
Control Program Name	Urevo Fitness App
Assembly Required	No
Color	Red

Powerful & Quiet Performance

Experience unmatched strength and serenity in workouts.



2.5 HP Motor



< 45dB







Image 9.1: Illustration of the powerful and quiet 2.5 HP motor of the UREVO Spacewalk E4.

10. WARRANTY AND SUPPORT

The UREVO Spacewalk E4 APP Walking Pad comes with a **1-year warranty** from the date of purchase. For technical support, warranty claims, or any inquiries regarding your product, please contact UREVO customer service. You can find more information and contact details on the official UREVO store page: [UREVO Official Store](#).

Ensure to register your product via the UREVO APP for potential extended warranty benefits and access to smart features.

	<p>UREVO SpaceWalk 5L Auto Incline Smart Walking Pad Treadmill User Guide</p> <p>User guide for the UREVO SpaceWalk 5L Auto Incline Smart Walking Pad Treadmill (Model URTM054), covering safety instructions, app connection, remote control operation, and specifications. Features 24-month warranty and lifetime customer service.</p>
	<p>UREVO SpaceWalk 5L Auto Incline Smart Walking Pad Treadmill User Guide</p> <p>Comprehensive user guide for the UREVO SpaceWalk 5L Auto Incline Smart Walking Pad Treadmill. Includes safety instructions, UREVO app integration, remote control operation, and LED display information for optimal use.</p>
	<p>UREVO Spacewalk E2 Walking Treadmill User Manual</p> <p>Comprehensive user manual for the UREVO Spacewalk E2 Walking Treadmill (Model URTM027), detailing safety instructions, specifications, operation, troubleshooting, maintenance, and warranty information.</p>
	<p>UREVO Spacewalk 3S Walking Treadmill User Manual</p> <p>Discover how to safely operate and maintain your UREVO Spacewalk 3S Walking Treadmill with this comprehensive user manual. Includes setup, features, troubleshooting, and specifications.</p>