

[Manuals.plus](#) /

> [Doloowee](#) /

> Doloowee Train Set Instruction Manual - Model DB816A

Doloowee DB816A

Doloowee Train Set Instruction Manual

MODEL: DB816A

Introduction

Thank you for choosing the Doloowee Train Set. This manual provides detailed instructions for the safe assembly, operation, and maintenance of your electric train set, which features realistic smoke, lights, and sound effects. Please read this manual thoroughly before use and retain it for future reference.

Safety Information

WARNING: CHOKING HAZARD - Small parts. Not for children under 3 years.

- Always supervise children during play.
- Keep small parts away from young children to prevent choking.
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Ensure batteries are inserted with correct polarity.
- Remove batteries if the toy will not be used for an extended period.
- Do not operate the train near water or in wet conditions.
- Use only clean water for the smoke function.

What's in the Box

Your Doloowee Train Set package should contain the following items:

- Locomotive (with smoke, light, and sound functions)
- Various train cars (e.g., passenger car, cargo car)
- Track pieces (curved and straight)
- Water bottle for smoke function

- Instruction Manual (this document)
- 1 Lithium Ion battery (included)



Image: The product packaging for the Doloowee Train Set, illustrating the main locomotive, several train cars, and track components. The box highlights features like "Steam Retro Train" and "Sound and Light Spray Electric Train."

Setup

1. Track Assembly:

Carefully connect the track pieces on a flat, stable surface. Ensure all connectors are securely fastened to create a continuous loop or desired layout. Refer to the diagrams on the packaging for suggested track configurations.

2. Battery Installation:

Locate the battery compartment on the underside of the locomotive. Using a screwdriver (not included), open the compartment. Insert the included Lithium Ion battery, ensuring correct polarity (+/-). Close the compartment securely.

3. Water Filling for Smoke Function:

Remove the cap on the top of the locomotive's water tank. Using the provided water bottle, carefully add a small amount of clean water into the tank. Do not overfill. Replace the cap securely. This water will be used to generate realistic smoke.

4. Connecting Train Cars:

Attach the train cars to the locomotive and to each other using the hooks and loops provided. Ensure all connections are secure before placing the train on the tracks.

Operating Instructions

1. Power On/Off:

Locate the power switch on the locomotive (usually on the side or bottom). Flip the switch to the "ON" position to start the train. Flip to "OFF" to stop.

2. Lights and Sound:

Upon activation, the train's LED lights will illuminate, and realistic train sounds will begin. These functions are typically integrated with the power switch.

3. Smoke Function:

Once the train is powered on and water has been added, the locomotive will begin to emit realistic smoke from its chimney after a short warm-up period. If smoke is not immediately visible, ensure sufficient water has been added and the train has been running for a moment.

4. Placement on Tracks:

Carefully place the assembled train onto the tracks, ensuring all wheels are properly seated on the rails. The train will then move along the track.

Maintenance

- **Cleaning:**

Wipe the train and tracks with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners. Avoid getting water into electronic components.

- **Storage:**

When not in use, store the train set in a dry, cool place, away from direct sunlight. Remove batteries if storing for extended periods.

- **Water Tank:**

Empty any remaining water from the smoke tank before storing to prevent residue buildup.

Troubleshooting

- **Train Not Moving:**

Check if the power switch is in the "ON" position. Ensure batteries are correctly installed and not depleted. Verify that all train cars are properly connected and wheels are on the tracks.

- **No Lights/Sound:**

Confirm battery charge and installation. If issues persist, contact customer support.

- **No Smoke:**

Ensure the water tank is filled with clean water. Allow a few moments for the heating element to warm up. If the issue persists, check for blockages in the smoke outlet.

- **Train Derails:**

Ensure tracks are securely connected and laid on a flat surface. Check that train cars are properly coupled and wheels are clean.

Specifications

Model Number:	DB816A
Product Dimensions:	15.75 x 7.09 x 10.04 inches
Item Weight:	5 pounds
Recommended Age:	36 months - 12 years

Batteries:	1 Lithium Ion battery (included)
Manufacturer:	Doloowee

Warranty and Support

Doloowee stands behind the quality of its products. For any questions, concerns, or warranty inquiries, please contact Doloowee customer support through the retailer's platform or the official Doloowee website. Please have your model number (DB816A) and purchase information ready when contacting support.

For more information, visit the [Doloowee Store on Amazon](#).