

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Skechers](#) /

› Skechers GALLOWAY SR5243 Men's Digital Pedometer Watch Instruction Manual

Skechers SR5243

Skechers GALLOWAY SR5243 Men's Digital Pedometer Watch

INSTRUCTION MANUAL

Model: SR5243 | Brand: Skechers

Introduction

This manual provides essential instructions for the setup, operation, maintenance, and troubleshooting of your Skechers GALLOWAY SR5243 Digital Pedometer Watch. Please read this manual thoroughly to ensure proper use and longevity of your device.

The Skechers GALLOWAY SR5243 is a 47mm digital pedometer watch designed for active individuals. It features a sleek black strap, a negative display dial, and a durable mineral crystal. The watch is water-resistant up to 100 meters, making it suitable for various activities.

Product Overview

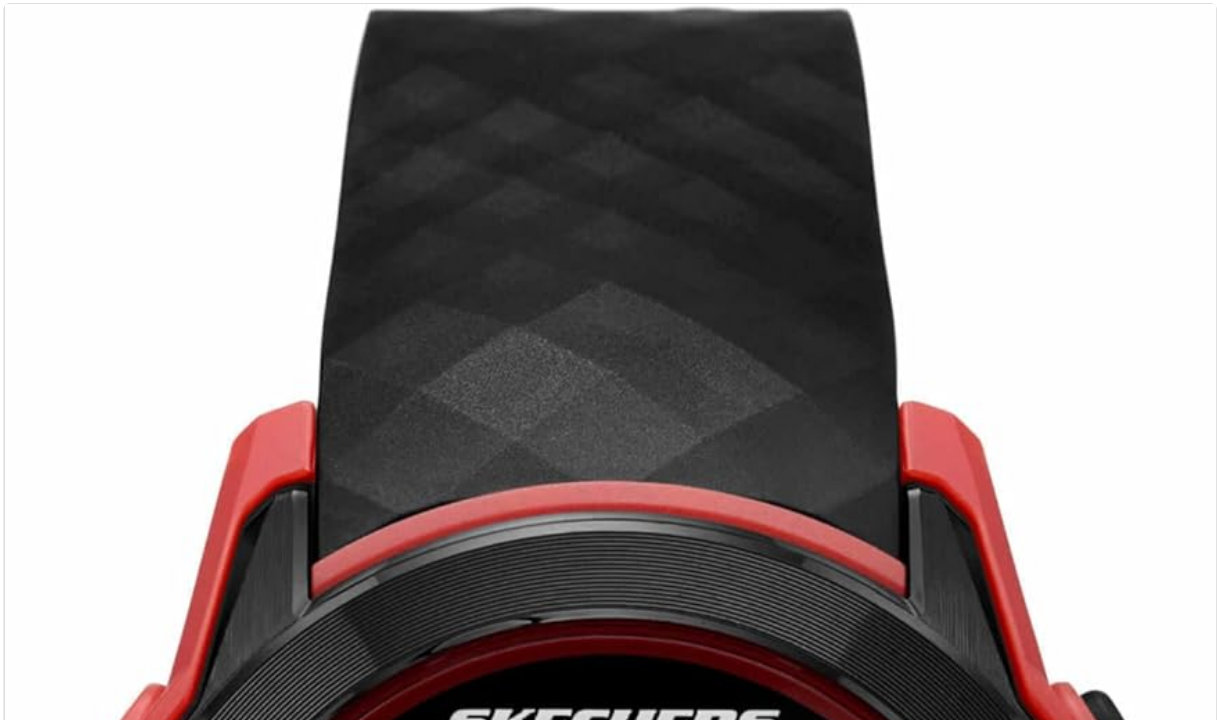




Figure 1: Front view of the Skechers GALLOWAY SR5243 Digital Pedometer Watch, displaying the time, pedometer icon, and control buttons.



Figure 2: The Skechers GALLOWAY SR5243 Digital Pedometer Watch worn on a wrist, illustrating its size and fit.





Figure 3: Side view of the watch, showing the profile of the case and the control buttons.



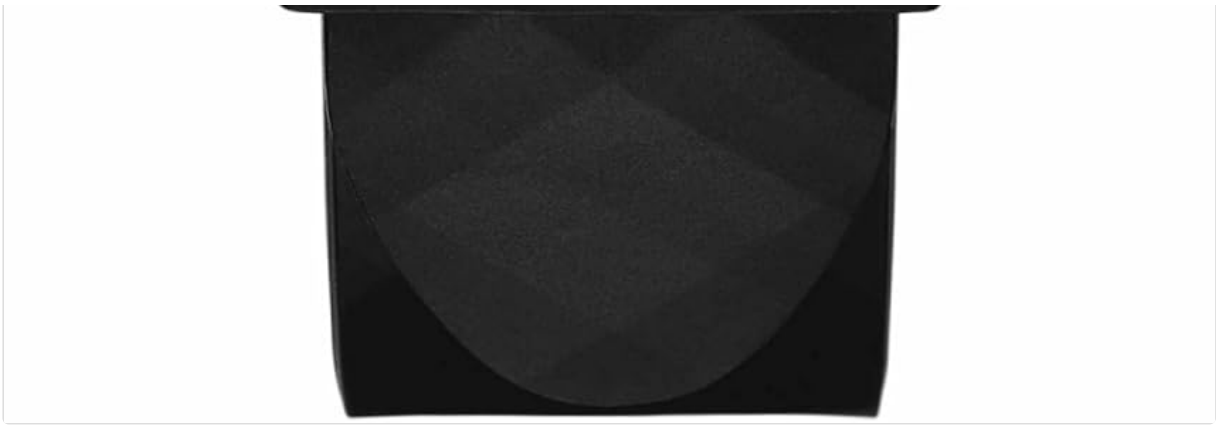


Figure 4: Back view of the watch, highlighting the strap texture and the Skechers-branded buckle clasp.



Figure 5: The product packaging box for the Skechers GALLOWAY SR5243 Watch.

Setup

Initial Battery Information

The watch includes a monitor battery for initial operation checks. This battery may have a limited lifespan and could run out during storage or shortly after purchase. Battery depletion is not covered under warranty.

Wearing the Watch

Adjust the black PU band to fit comfortably on your wrist. Ensure it is snug enough for the pedometer function to accurately track steps, but not so tight as to restrict circulation.

Basic Time Setting

1. Press the **SET** button to enter time setting mode.
2. Use the **ADJ** button to adjust the flashing digit (hours, minutes, etc.).
3. Press **SET** again to move to the next setting.
4. Once all settings are complete, press **SET** to exit the setting mode.

Operating Instructions

Button Functions

- **LIGHT:** Activates the backlight for visibility in low-light conditions.
- **SET:** Used to change modes or confirm settings.
- **ADJ:** Used to adjust values or scroll through options during setting.

Time Display

The watch primarily displays the current time in a digital format. The negative display dial provides clear readability.

Pedometer Function

The integrated pedometer tracks your steps. Ensure the watch is worn securely on your wrist for accurate step counting. Specific instructions for activating or resetting the pedometer may vary; refer to the on-screen prompts or cycle through modes using the **SET** button to access pedometer features.

Water Resistance

The watch is water-resistant to 10 ATM (100 meters). This means it is suitable for bathing, swimming, snorkeling, and diving. However, avoid pressing buttons while submerged to prevent water ingress.

Maintenance

Cleaning

Wipe the watch case and strap with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials, which can damage the finish or crystal.

Battery Replacement

When the display dims or functions become erratic, the battery may need replacement. Battery replacement should ideally be performed by a qualified technician to ensure water resistance is maintained. Please note that battery replacement is not covered under the product warranty.

Storage

Store the watch in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

Troubleshooting

- **Display is blank or dim:** Check the battery. If the battery is low, replace it.
- **Time is incorrect:** Re-enter the time setting mode and adjust the time as described in the Setup section.
- **Pedometer not counting steps:** Ensure the watch is worn securely on your wrist. If the issue persists, try resetting the watch (if a reset function is available, typically by holding down a combination of buttons or removing/reinserting the battery).
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode. If submerged, avoid pressing buttons. If the issue continues, a professional inspection may be required.

Specifications

Feature	Detail
Model Number	SR5243
Case Size	47 mm
Lug Width	22 mm
Movement	Digital
Display	Digital, Negative Display Dial
Crystal	Mineral Crystal
Case Material	PC (Polycarbonate)
Band Material	PU (Polyurethane)
Water Resistance	10 ATM (100 meters)
Weight	120 g

Warranty and Support

Warranty Information

This Skechers GALLOWAY SR5243 watch comes with a **2-year warranty**. Please retain your delivery data as it serves as proof of warranty. The warranty covers manufacturing defects but does not cover normal wear and tear, accidental damage, or battery depletion.

Customer Support

For further assistance, technical support, or warranty claims, please contact your retailer or the official Skechers customer service department. Refer to the packaging or the Skechers official website for contact details.

