

KENNEAS Wireless Controller

KENNEAS Wireless Controller User Manual

Compatible with Nintendo Switch, Switch OLED, and Switch Lite

1. OVERVIEW

The KENNEAS Wireless Controller is designed to enhance your gaming experience on Nintendo Switch, Switch OLED, and Switch Lite consoles. It features advanced functionalities such as customizable LED lighting, programmable back buttons, turbo function, 6-axis gyroscope, and immersive vibration feedback. This manual provides detailed instructions for setup, operation, and maintenance.



Image: Overview of controller features including HD Vibration, LED Light, 15-hour Playtime, Turbo, Precise Sticks, and 6-Axis Gyro.

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- 1 x KENNEAS Wireless Controller
- 2 x Magnetic Replaceable Faceplates (one Fashionable Color Gradient, one Frosted Transparent)
- 1 x USB-C Charging Cable
- 1 x User Manual

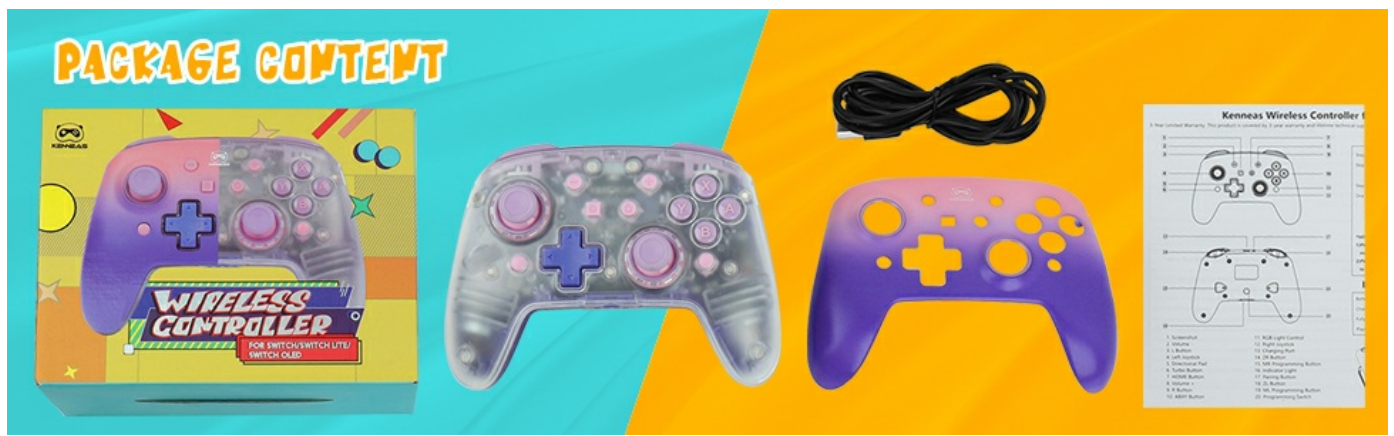


Image: Contents of the KENNEAS Wireless Controller package.

3. PRODUCT FEATURES

3.1 Customizable Faceplates

The controller comes with two magnetic faceplates, allowing you to switch between a fashionable color gradient and a frosted transparent shell. These panels attach magnetically for quick and secure swapping.

MAGNETIC REPLACABLE FACEPLATE



Image: Comparison of the controller with two different magnetic faceplates.

3.2 Vibrant LED Lighting

Personalize your gaming setup with 8 LED colors and three dynamic lighting modes: Monochrome Breathing, Monochrome Solid, and RGB Breathing.

8 COLORS LED LIGHT, 3 LIGHT MODE



Image: Controller showcasing its 8-color LED lighting with a color selection graphic.

3.3 Long-Lasting Battery

Equipped with a built-in 850 mAh Li-Ion battery, the controller provides up to 15 hours of continuous gameplay on a single charge.

**850mAh BIG BATTERY,
15 HOURS PLAYTIME**



Image: Rear view of the controller, emphasizing the 850mAh battery, programmable buttons, and non-slip grip.

3.4 Pro-Level Controls

The controller includes two programmable back buttons, manual/auto turbo modes, motion control via a 6-axis gyroscope, and a one-touch wake-up feature for the console. Low-friction analog sticks ensure precise control.

DESIGN FOR ENHANCED GAMING EXPERIENCE

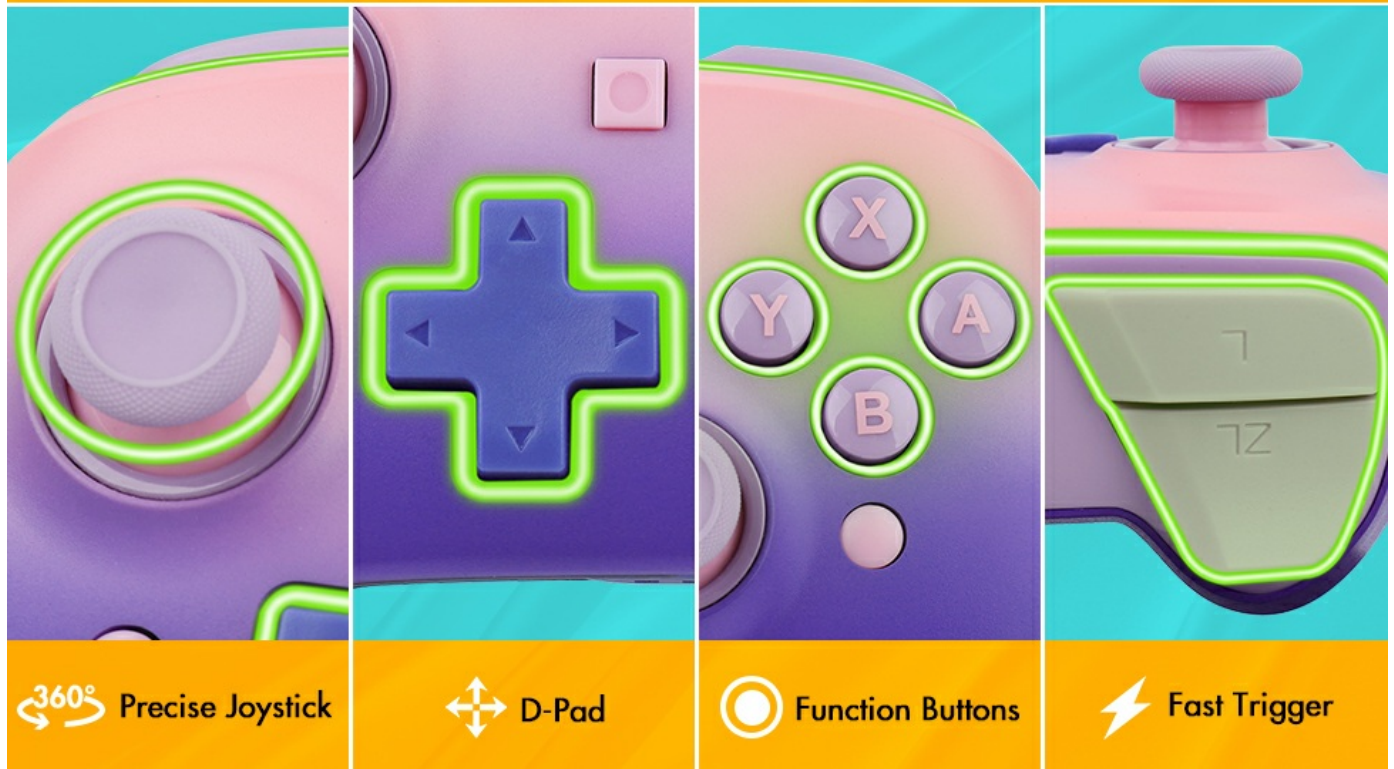


Image: Detailed view of the controller's precise joysticks, D-Pad, function buttons, and fast triggers.

3.5 Immersive Vibration

A dual vibration motor provides rich, immersive feedback, enhancing your gaming experience. The vibration intensity can be adjusted.

3-LEVEL HD VIBRATION & PRECISE STICKS



Image: Controller highlighting the 3-level HD vibration and precise analog sticks.

3.6 Ergonomic Design

The diamond-textured grip and ergonomic design offer secure and comfortable handling for extended gaming sessions.

FOR SWITCH/SWITCH LITE/SWITCH OLED



Image: The controller held in hands, demonstrating its comfortable and ergonomic design.

4. SETUP INSTRUCTIONS

4.1 Initial Charging

Before first use, fully charge the controller using the provided USB-C cable. Connect the USB-C end to the controller and the USB-A end to a power source (e.g., console dock, USB wall adapter).

4.2 Pairing with Nintendo Switch

1. Turn on your Nintendo Switch console.
2. From the HOME Menu, select **Controllers**, then **Change Grip/Order**.
3. On the KENNEAS controller, press and hold the **Pairing Button** (located on the back of the controller, usually a small circular button) for a few seconds until the LED indicators start flashing rapidly.
4. Once the controller is successfully paired, the player LED(s) on the controller will light up solid.
5. Press the **Home button** on the controller to return to the HOME Menu and begin playing.

For a visual guide on the controller's features and pairing process, please refer to the official product video:

Your browser does not support the video tag.

Video: Official product video demonstrating the KENNEAS Wireless Controller's features and compatibility with Nintendo Switch/OLED/Lite.

5. OPERATING INSTRUCTIONS

5.1 Turbo Function

The controller supports both manual and auto turbo modes. This allows for rapid, repeated input of a button press without continuously pressing it.

- **To activate Turbo:** Press and hold the **Turbo button**, then press the desired action button (A/B/X/Y/L/R/ZL/ZR). The button will now continuously input as long as you hold it.
- **To activate Auto-Turbo:** With Turbo active, press the **Turbo button** again while holding the action button. The button will now continuously input without you holding it.
- **To deactivate Turbo:** Press the **Turbo button** a third time while holding the action button, or press and hold the **Turbo button** for 5 seconds to clear all turbo settings.



Image: Diagram illustrating the Turbo Function button.

5.2 Programmable Back Buttons

The controller features two programmable back buttons (MR/ML) for custom key mapping, allowing you to assign complex commands or frequently used actions.

- **To program:** Press the **Program button** (usually a small button near the back paddles), then press the back button (MR or ML) you wish to program, then press the button(s) you want to map. Press the **Program button** again to save.
- Refer to the detailed instructions in the included manual for specific programming sequences.



Image: Close-up of a programmable back button (ML) on the controller.

5.3 Motion Control (6-Axis Gyroscope)

The integrated 6-axis gyroscope provides precise motion control for compatible games. No special setup is required; it activates automatically when supported by the game.



Image: Diagram illustrating the 6-Axis Sensor for motion control.

5.4 Adjusting Vibration Intensity

The controller features 3 levels of adjustable vibration. Consult the included manual for the specific button combination to cycle through vibration intensities.

5.5 Changing LED Colors and Modes

To cycle through the 8 LED colors and 3 lighting modes (Monochrome Breathing, Monochrome Solid, RGB Breathing), use the dedicated LED button or a specific button combination as detailed in the full manual.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the controller. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Charging:** Always use the provided USB-C cable for charging. Do not use damaged cables or chargers.
- **Battery Care:** To prolong battery life, avoid fully discharging the controller frequently. Charge it regularly, even if not in use for extended periods.

7. TROUBLESHOOTING

- **Controller not pairing:** Ensure the controller is charged. Repeat the pairing steps (Section 4.2). Make sure no other wireless devices are causing interference.
- **Input lag or disconnection:** Ensure the controller is within range of the console. Check for potential wireless interference from other devices.
- **Buttons not responding:** Check if the controller is properly paired. If a specific button is sticking, gently clean around it. If the issue persists, contact customer support.
- **Vibration not working:** Ensure vibration is enabled in the game settings and on the console. Check the controller's vibration intensity settings.
- **Controller not charging:** Verify the USB-C cable is securely connected to both the controller and the power source. Try a different USB port or power adapter.

8. SPECIFICATIONS

- **Model:** Wireless Controller
- **Compatibility:** Nintendo Switch, Switch OLED, Switch Lite
- **Battery:** 850 mAh Li-Ion (up to 15 hours playtime)
- **Connectivity:** Wireless
- **Charging Port:** USB-C
- **Dimensions:** 3.15 x 2.36 x 1.57 inches (approximate)
- **Weight:** 12 ounces (approximate)
- **Special Features:** 6-Axis Gyroscope, Dual Vibration Motors, Turbo Function, Programmable Back Buttons, 8-Color LED with 3 Modes, Magnetic Replaceable Faceplates

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your product or visit the official KENNEAS website. Keep your purchase receipt for warranty claims.

© 2025 KENNEAS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question