

Sweetcrispy AH-NFJ1F01-24BK

Sweetcrispy 24-Inch Portable Space Heater User Manual

Model: AH-NFJ1F01-24BK

1. INTRODUCTION

This manual provides instructions for the safe and efficient operation of your Sweetcrispy 24-inch Portable Space Heater. This appliance is designed to provide supplemental heat for indoor spaces, featuring adjustable temperature control, multiple light modes, oscillation, and a timer function. Please read this manual thoroughly before use and retain it for future reference.

2. IMPORTANT SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, observe the following:

- Keep combustible materials—such as furniture, pillows, bedding, paper, clothing, and curtains—at least 3 feet (0.9 m) away from the front of the heater, and clear of the sides, top, and rear.
- Do not place towels or other objects on the heater.
- Always ensure the heater is placed on a stable, level surface.
- Do not use the heater in wet or moist locations.
- Unplug the heater when not in use.
- Do not operate any heater with a damaged cord or plug, or after the heater malfunctions or has been dropped or damaged in any manner.

3. PACKAGE CONTENTS

- Sweetcrispy Space Heater Unit
- Remote Control
- User Manual
- Base Assembly Components (if applicable)

4. SETUP AND ASSEMBLY

The Sweetcrispy Space Heater requires minimal assembly, primarily attaching the base for stability. Follow these steps:

1. Carefully remove all packaging materials from the heater and its components.
2. Place the heater unit upside down on a soft, flat surface to avoid scratching.
3. Align the two halves of the base assembly.
4. Thread the power cord through the designated channel in the base.
5. Attach the base to the bottom of the heater unit using the provided screws. Ensure it is securely fastened.
6. Place the heater upright on a firm, level surface, ensuring it is at least 3 feet (0.9 m) away from any walls or combustible materials.

Your browser does not support the video tag.

Video: Assembly of the Sweetcrispy Space Heater base. This video demonstrates how to securely attach the base to the heater unit, ensuring proper setup before operation.



Image: Front view of the Sweetcrispy 24-inch portable space heater, showcasing its sleek design and digital display.

5. OPERATING INSTRUCTIONS

Your Sweetcrispy Space Heater can be operated using the control panel on top of the unit or the included remote control.

Control Panel Overview



Image: A detailed view of the Sweetcrispy space heater's all-in-one control panel, showing various function buttons and the digital display.

Basic Operation

1. **Power On/Off:** Press the power button () on the control panel or remote to turn the heater on or off.
2. **Temperature Adjustment:** Use the '+' and '-' buttons to set your desired temperature between 60°F and 99°F. The heater will automatically maintain this temperature.
3. **Heat Modes:** The heater offers multiple heat settings (e.g., Low, High, ECO mode). Press the mode button to cycle through available heating modes.
4. **Oscillation:** Press the oscillation button () to activate or deactivate the 60° oscillation function, distributing heat evenly across the room.
5. **Timer:** Press the timer button () to set an automatic shut-off time, from 1 to 12 hours. Each press increases the timer by one hour.
6. **Light Modes:** Press the light mode button () to cycle through 3 customizable lighting options for the simulated flame effect at the base.

7. **Child Lock:** Press and hold the child lock button () for 3-5 seconds to activate or deactivate the child lock, preventing accidental changes to settings.



Image: The Sweetcrispy space heater demonstrating its three distinct light modes, offering varied ambiance options.

Easy to Take



Image: The Sweetcrispy space heater operating with 60° oscillation in a bedroom, illustrating its ability to distribute warmth across a wider area.

6. FEATURES

- **3 Soothing Light Modes:** Customize the ambiance with three distinct lighting options for the simulated flame effect.
- **Powerful 1500W Heating:** Provides rapid and effective warmth for medium to large indoor rooms.
- **60° Oscillation:** Ensures even heat distribution throughout the space.
- **Adjustable Thermostat:** Allows precise temperature control from 60°F to 99°F.
- **Tip-Over Protection:** Automatically shuts off the heater if it is accidentally knocked over, enhancing safety.
- **Quiet Operation:** Designed for minimal noise, suitable for bedrooms, offices, and living areas.
- **12-Hour Timer:** Program the heater to automatically turn off after a set period, up to 12 hours.
- **Child Lock:** Prevents unintended operation by children.

Sweetcrispy All-in-One Panel



4 Heater Mode



60°F-99°F



12H Timer



Swing Mode



3 flame colors



Child Lock



Image: A visual representation highlighting the larger heating element within the Sweetcrispy space heater, indicating efficient heat generation.

Gently Warm Your Room

!!3 FEET AWAY from combustible materials. DO NOT place objects on the heater.



Image: The Sweetcrispy space heater displaying its adjustable thermostat, allowing users to set temperatures between 60°F and 99°F.

7. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your heater.

- **Cleaning:** Always unplug the heater before cleaning. Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or allow water to drip into the heater.
- **Dust Removal:** Use a vacuum cleaner with a brush attachment to gently remove dust from the air intake and exhaust grilles.
- **Storage:** When not in use, store the heater in a cool, dry place. It is recommended to store it in its original packaging to protect it from dust and damage.

8. TROUBLESHOOTING

If you experience issues with your heater, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Heater does not turn on.	No power, power switch off, or tip-over switch activated.	Ensure the power cord is securely plugged into a working outlet. Check the power switch. If the heater was tipped, place it upright on a flat surface.
Heater is on but not producing heat.	Temperature setting is too low, or ECO mode is active.	Increase the temperature setting. If in ECO mode, the heater may only activate when the room temperature drops below the set point.
Oscillation is not working.	Oscillation function is deactivated.	Press the oscillation button on the control panel or remote to activate it.
Heater shuts off unexpectedly.	Overheating protection or tip-over protection activated.	Unplug the heater, allow it to cool down for 10-15 minutes. Check for obstructions around the air intake/exhaust. Ensure the heater is upright on a stable surface.

9. SPECIFICATIONS

Feature	Detail
Brand	Sweetcrispy
Model Number	AH-NFJ1F01-24BK
Special Features	Adjustable Speed, Adjustable Temperature, Child Lock, Oscillating, Overheat Protection
Color	Black
Form Factor	Tower
Indoor/Outdoor Usage	Indoor
Product Dimensions	25"D x 6.8"W x 7.8"H
Recommended Uses	Home, Office
Mounting Type	Floor Mount
Fuel Type	Electric
Number of Speeds	3
Voltage	120 Volts
Amperage	12.5 Amps
Min Temperature Setting	60 Degrees Fahrenheit
Max Temperature Setting	99 Degrees Fahrenheit

Feature	Detail
Item Weight	4.6 pounds
Assembly Required	No (Base assembly is minimal and typically not considered full assembly)
Batteries Required	No (for heater unit, remote may require batteries)
Included Components	Space Heater

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact Sweetcrispy customer service. Keep your purchase receipt as proof of purchase.