



Manuals.plus /

› Music Sound /

› Music Sound MAXI3 Wireless Over-Ear Headphones User Manual

Music Sound MAXI3

Music Sound MAXI3 Wireless Over-Ear Headphones User Manual

Model: MAXI3 (BTHEADBMSMAXI3B)

1. INTRODUCTION

Thank you for choosing the Music Sound MAXI3 Wireless Over-Ear Headphones. These headphones are designed to provide an immersive audio experience with advanced features such as Active Noise Cancelling (ANC) and extended battery life. This manual will guide you through the setup, operation, and maintenance of your new headphones.



Image 1.1: The Music Sound MAXI3 Wireless Over-Ear Headphones in blue, showcasing their sleek design.

2. PACKAGE CONTENTS

Please ensure all items are present in your package:

- Music Sound MAXI3 Wireless Over-Ear Headphones
- USB-C Charging Cable
- 3.5mm Audio Cable
- User Manual (this document)

3. PRODUCT OVERVIEW

Familiarize yourself with the various components and controls of your MAXI3 headphones.



Image 3.1: Detailed diagram showing the soft leather-padded headband, soft leather-padded ear cushions, ANC button, Volume control buttons, Power button, USB-C port, and AUX 3.5mm port on the MAXI3 Over-ear headphones.

- **Soft Leather-Padded Headband:** Provides comfort during extended wear.
- **Soft Leather-Padded Ear Cushions:** Designed for superior comfort and sound isolation.
- **ANC Button:** Activates or deactivates Active Noise Cancelling.
- **Volume Control Buttons (+/-):** Adjusts audio volume.
- **Power Button:** Powers the headphones on/off and manages playback/calls.
- **USB-C Port:** For charging the headphones.
- **AUX 3.5mm Port:** For wired audio connection.



Image 3.2: The MAXI3 headphones showcasing their metal-like finish, minimal design, and modern shape with high-quality fabric details.

4. SETUP AND CONNECTION

4.1 Charging the Headphones

Before first use, fully charge your headphones. Connect the supplied USB-C cable to the USB-C port on the headphones and the other end to a USB power adapter (not included) or a computer's USB port.

- A charging indicator light will typically illuminate during charging and turn off or change color when fully charged.
- A full charge provides up to 35 hours of music playback.



up to
35h
OF MUSIC

Image 4.1: The MAXI3 headphones emphasizing their extended battery life of up to 35 hours of music playback.

4.2 Bluetooth Pairing

1. Ensure the headphones are charged and powered off.
2. Press and hold the Power button until the indicator light flashes, indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "MAXI3" from the list of found devices.
5. Once paired, the indicator light will stop flashing or change to a solid color.
6. The headphones can be paired with two devices simultaneously.

4.3 Wired Connection (AUX)

For a wired connection, use the supplied 3.5mm audio cable. Plug one end into the AUX 3.5mm port on the headphones and the other end into your audio source's 3.5mm jack. The headphones can be used passively in wired mode, even if the battery is depleted.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **Power On:** Press and hold the Power button for approximately 3 seconds.
- **Power Off:** Press and hold the Power button for approximately 3 seconds.

5.2 Music Playback


- **Play/Pause:** Press the Power button once.
- **Volume Up:** Press the "+" button.
- **Volume Down:** Press the "-" button.
- **Next Track:** Press and hold the "+" button.
- **Previous Track:** Press and hold the "-" button.

5.3 Call Management

- **Answer/End Call:** Press the Power button once.
- **Reject Call:** Press and hold the Power button for 2 seconds.
- **Voice Assistant:** Double-press the Power button (if supported by your device).

5.4 Active Noise Cancelling (ANC)

The MAXI3 headphones feature Active Noise Cancelling technology to reduce ambient noise, providing a more immersive listening experience.

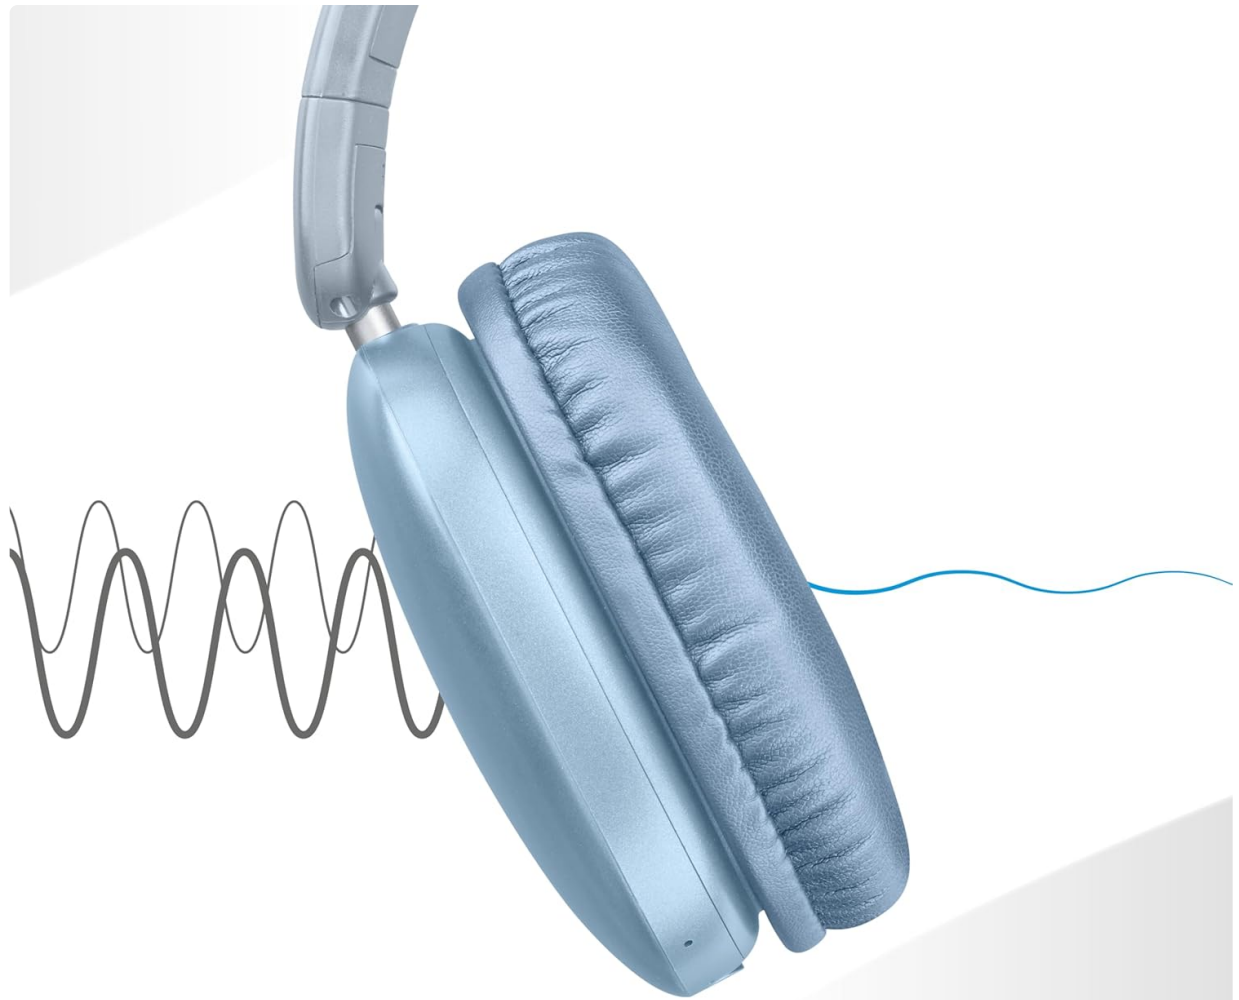

ELIMINATES EXTERNAL NOISE for background noise-free sound

Image 5.1: The MAXI3 headphones illustrating how they eliminate external noise for a background noise-free sound experience.

- **Activate/Deactivate ANC:** Press the dedicated ANC button. An indicator light will show when ANC is active.
- ANC works best for low-frequency, constant noises (e.g., engine hum, air conditioning).

5.5 Foldable and Rotatable Earcups

The earcups of the MAXI3 headphones are designed to be foldable and rotatable for easy storage and portability.



FOLDABLE & ROTABLE earcups

Image 5.2: The MAXI3 headphones demonstrating their foldable and rotatable earcups for compact storage.

6. MAINTENANCE AND CARE

- **Cleaning:** Wipe the headphones with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the headphones in a cool, dry place, away from direct sunlight and extreme temperatures. Utilize the foldable design for compact storage.
- **Water Exposure:** These headphones are not waterproof. Avoid exposure to liquids.
- **Battery Care:** To prolong battery life, avoid fully discharging the headphones frequently. Charge them regularly.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones do not power on.	Battery is depleted.	Charge the headphones using the USB-C cable.
Cannot pair via Bluetooth.	Headphones not in pairing mode; Bluetooth off on device; interference.	Ensure headphones are in pairing mode (flashing light). Turn Bluetooth off and on again on your device. Move closer to the device.
No sound.	Volume too low; incorrect audio source; headphones not connected.	Increase volume on headphones and device. Check Bluetooth connection or 3.5mm cable. Ensure correct audio output is selected on your device.
ANC not working effectively.	ANC is designed for specific noise types; improper fit.	Ensure earcups form a good seal around your ears. ANC is most effective against low-frequency, constant sounds.

8. SPECIFICATIONS

- **Model Name:** MAXI3
- **Model Number:** BTHEADBMSMAXI3B
- **Brand:** Music Sound
- **Connectivity:** Wireless (Bluetooth), Wired (3.5mm Jack)
- **Special Features:** Active Noise Cancelling (ANC), Rechargeable Battery
- **Battery Life:** Up to 35 hours (music playback)
- **Control Method:** Tactile buttons
- **Ear Placement:** Over-Ear (Circum-Aural)
- **Material:** Metal (details), High-quality fabric (earpads)
- **Compatible Devices:** All Bluetooth-enabled devices
- **Included Components:** Headphones, USB-C Cable, 3.5mm Audio Cable

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact Music Sound directly through their official website or customer service channels. Information regarding spare parts availability and software updates is not provided in this manual.