

Silver Crest BC-7822

Silver Crest Portable Infrared Electric Cooker

MODEL: BC-7822

Introduction

Thank you for choosing the Silver Crest Portable Infrared Electric Cooker, Model BC-7822. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliance. Please read it thoroughly before first use and keep it for future reference.

Important Safety Instructions

- **Electrical Safety:** Ensure the voltage rating on the appliance matches your local power supply before plugging in. Do not use if the power cord or plug is damaged.
- **Hot Surfaces:** The cooking surface and surrounding areas become very hot during and after operation. Use the anti-scald handles and always use oven mitts or pot holders when handling hot cookware.
- **Ventilation:** Place the cooker on a stable, heat-resistant surface with adequate ventilation around it. Do not block any ventilation openings.
- **Water and Liquids:** Do not immerse the cooker, cord, or plug in water or any other liquid. Avoid spilling liquids onto the control panel or heating element.
- **Supervision:** This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their

safety. Children should be supervised to ensure that they do not play with the appliance.

- **Overheat Protection:** The cooker is equipped with an automatic shut-off feature that activates if the internal temperature becomes excessively high.
- **Cookware:** Use only appropriate cookware as described in the operating instructions.
- **Storage:** Allow the appliance to cool completely before cleaning or storing.

Product Overview

The Silver Crest Portable Infrared Electric Cooker is a versatile and powerful cooking appliance designed for convenience and efficiency. It features a single radiant heating element, a touch-sensitive LED display, and a digital timer.



Image: The Silver Crest Portable Infrared Electric Cooker, Model BC-7822, shown with its packaging. The cooker features a black circular heating surface, a touch control panel with an LED display, and gold-colored anti-scald handles on the sides. The packaging indicates 'Silver Crest Ceramic Cooker' and 'MODEL: BC-7822'.

Key Features:

- **Portable Design:** Equipped with widened and thickened anti-scald handles for safe and easy transport.
- **High Power Output:** 3500 Watts for rapid heating and efficient cooking.
- **Infrared Heating:** Utilizes radiant heating technology.
- **LED Touch Screen:** Intuitive touch controls for easy operation.
- **Digital Timer:** Allows for precise cooking time settings.
- **Overheat Protection:** Automatic shut-off feature for enhanced safety.
- **Universal Cookware Compatibility:** Suitable for various types of cookware, including iron,

aluminum, ceramic, stainless steel, copper, and heat-resistant glass.

Setup

1. **Unpack:** Carefully remove the cooker and all packaging materials. Retain packaging for future storage or transport.
2. **Placement:** Place the cooker on a flat, stable, heat-resistant surface. Ensure there is at least 10-15 cm of clear space around all sides for proper ventilation.
3. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the outlet meets the power requirements of the cooker (3500W).
4. **Initial Cleaning:** Before first use, wipe the cooking surface and exterior with a damp cloth to remove any dust or residue from manufacturing. Ensure the unit is completely dry before plugging in.

Operating Instructions

1. Powering On/Off

- Ensure the cooker is plugged in.
- Place appropriate cookware with food on the center of the heating surface.
- Press the **ON/OFF** button on the touch control panel to turn the unit on. The LED display will illuminate.
- To turn off, press the **ON/OFF** button again. The unit will enter standby mode.

2. Adjusting Heat/Temperature

- After powering on, use the **+** and **-** buttons on the touch panel to increase or decrease the heating level or temperature.
- The LED display will show the current power level or temperature setting.

3. Using the Digital Timer

- Press the **TIMER** button on the touch panel.
- Use the **+** and **-** buttons to set the desired cooking time.
- The timer will count down, and the cooker will automatically shut off once the set time has elapsed.

4. Compatible Cookware

This infrared electric cooker is compatible with a wide range of cookware materials, including:

- Iron
- Aluminum
- Ceramic

- Stainless Steel
- Copper
- Heat-resistant Glass

Ensure the bottom of the cookware is flat and makes good contact with the heating surface for optimal performance.

Maintenance and Cleaning

- **Always unplug the cooker** and allow it to cool completely before cleaning.
- **Cleaning the Surface:** Wipe the ceramic cooking surface with a damp cloth and mild detergent. For stubborn stains, use a non-abrasive cleaner specifically designed for ceramic cooktops. Rinse with a clean damp cloth and dry thoroughly.
- **Cleaning the Body:** Wipe the exterior body and control panel with a soft, damp cloth. Do not use abrasive cleaners, scouring pads, or harsh chemicals.
- **Do Not Immerse:** Never immerse the cooker in water or place it under running water.
- **Storage:** Store the cooker in a dry place when not in use.

Troubleshooting

Problem	Possible Cause	Solution
Cooker does not turn on.	Not plugged in; power outage; faulty outlet.	Check power cord connection; verify power supply; try a different outlet.
Cooker stops heating during operation.	Overheat protection activated.	Turn off the cooker, unplug it, and allow it to cool down for at least 30 minutes before restarting. Ensure proper ventilation.
Cookware not heating efficiently.	Cookware not suitable; uneven bottom; incorrect placement.	Ensure cookware is compatible and has a flat bottom. Center the cookware on the heating surface.
Control panel unresponsive.	Temporary electronic glitch; surface is wet.	Unplug the unit for a few minutes, then plug it back in. Ensure the control panel is dry and clean.

Specifications

Feature	Detail
Brand	Silver Crest
Model Number	BC-7822
Color	Gold
Materials	Stainless Steel
Special Features	Automatic Shut-off
Number of Heating Elements	1
Electrical Power	3500 Watts
Control Type	Touch
Heating Element Type	Radiant
Power Source	Electric
Included Components	Electric Cooker
Recommended Uses	Electric Cooker

Warranty and Support

This Silver Crest Portable Infrared Electric Cooker comes with a **1-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical support, service, or warranty inquiries, please contact your retailer or the authorized service center. Refer to the product packaging or retailer's website for specific contact details.