

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [YITAHOME](#) /

› [YITAHOME Electric Fireplace Suite 38" with Remote Control User Manual](#)

YITAHOME AEYIHVGYgp

YITAHOME Electric Fireplace Suite 38" User Manual

Model: AEYIHVGYgp

INTRODUCTION

Thank you for purchasing the YITAHOME Electric Fireplace Suite 38". This manual provides essential information for the safe and efficient operation, installation, and maintenance of your electric fireplace. Please read this manual thoroughly before assembly and use, and retain it for future reference.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using this fireplace.
- Do not operate any fireplace with a damaged cord or plug, or if the heater has malfunctioned, been dropped, or damaged in any manner.
- Do not use outdoors.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect fireplace, turn controls to off, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the fireplace.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A fireplace has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Use this fireplace only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always plug fireplaces directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).

PACKAGE CONTENTS

Please check to ensure all components are present and undamaged before assembly.

- Electric Fireplace Insert
- Fireplace Mantel/Surround Components
- Remote Control
- Assembly Hardware
- Instruction Manual

SETUP AND ASSEMBLY

The YITAHOME Electric Fireplace Suite requires assembly. It is recommended to have two people for assembly due to the weight and size of the components. Ensure you have adequate space and the necessary tools (e.g., screwdriver) before beginning.

1. **Unpack Components:** Carefully remove all parts from the packaging. Lay them out on a soft, clean surface to prevent scratches. Verify all parts against the package contents list.
2. **Assemble Mantel Structure:** Follow the detailed diagrams provided in the separate assembly guide (if included) to construct the fireplace mantel. Pay close attention to the orientation of each panel.
3. **Install Electric Fireplace Insert:** Once the mantel structure is complete, carefully slide the electric fireplace insert into the designated opening. Ensure it fits securely and is flush with the mantel.
4. **Secure Components:** Use the provided hardware to secure all parts of the mantel and the fireplace insert. Ensure all screws are tightened, but do not overtighten.
5. **Attach Handles:** Install the European-style handles to the storage compartment doors as indicated in the assembly instructions.
6. **Placement:** Position the assembled fireplace on a flat, stable surface, away from drapes, furniture, and high-traffic areas. Ensure there is sufficient clearance around the unit for proper ventilation.



Image: The fully assembled YITAHOME Electric Fireplace Suite, showcasing its white finish, dark wood top, and realistic flame effect.

PRODUCT SIZE



Image: Diagram illustrating the product dimensions: 97cm (38.2") width, 26cm (10.2") depth, and 86cm (33.9") height, with internal storage measurements.



Image: The electric fireplace with its top storage compartments open, demonstrating the available space for books or decorative items.

OPERATING INSTRUCTIONS

Your YITAHOME Electric Fireplace can be operated using the control panel on the unit or the included remote control.

Control Panel and Remote Control Overview

CONTROL PANEL AND REMOTE CONTROL

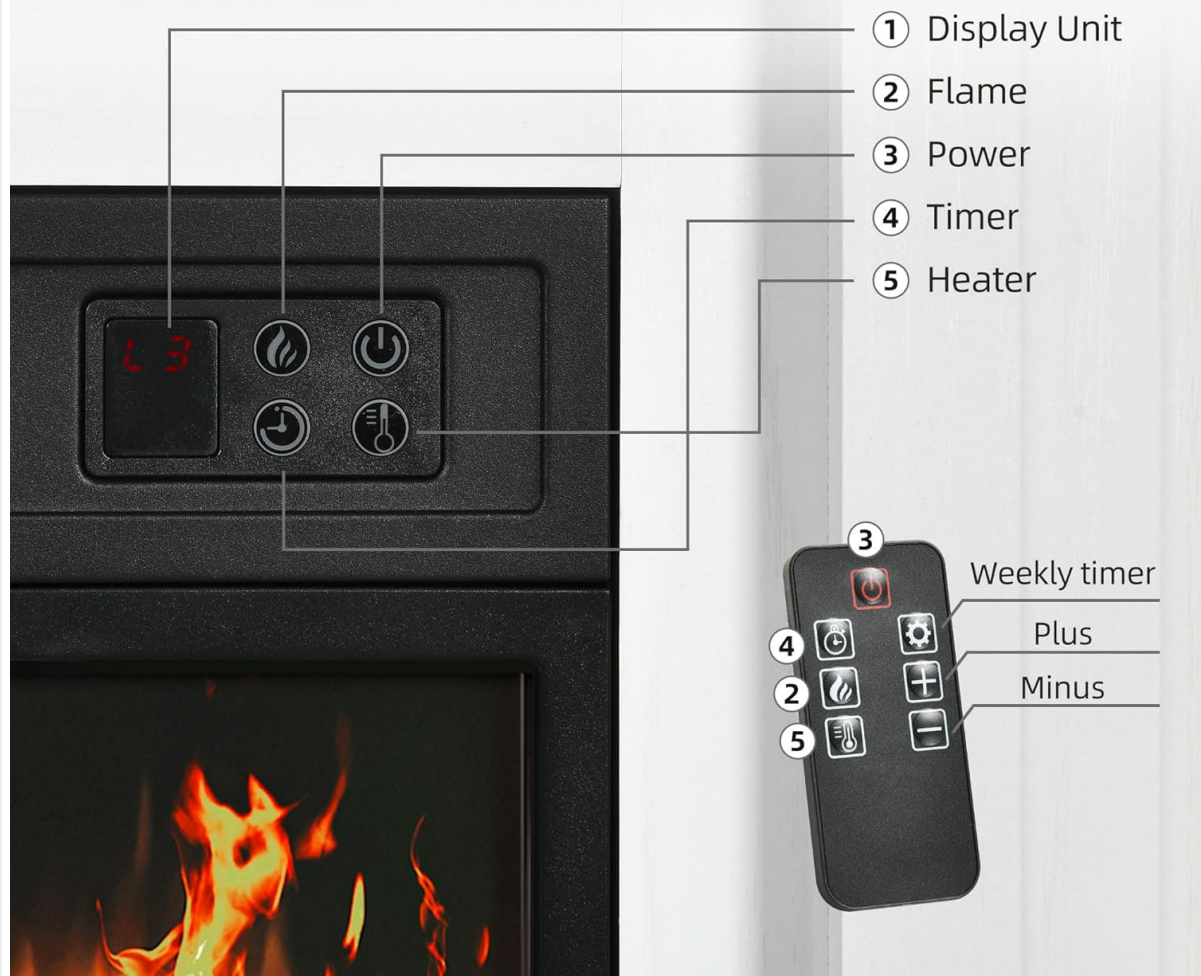


Image: Diagram showing the control panel buttons (Display Unit, Flame, Power, Timer, Heater) and the corresponding functions on the remote control (Weekly timer, Plus, Minus, Power, Flame, Heater).

- **Display Unit:** Shows current settings.
- **Flame Button:** Adjusts flame brightness.
- **Power Button:** Turns the unit on or off.
- **Timer Button:** Activates and sets the timer function.
- **Heater Button:** Turns the heating function on or off and adjusts temperature.
- **Plus/Minus Buttons (Remote):** Used for adjusting settings like temperature, timer duration, or brightness.
- **Weekly Timer (Remote):** For programmable heating schedules.

Basic Operation

1. **Power On/Off:** Press the **Power** button on the control panel or remote control to turn the fireplace on or off.
2. **Flame Effect:** The realistic LED flame effect will activate upon power-on. Press the **Flame** button to cycle through different flame brightness levels.

REALISTIC LED FLAME EFFECT

Create a visual feature in your living room that feels instantly calming with the realistic flickering flames.



Image: Visual representation of adjustable flame brightness, showing three different intensity levels of the realistic LED flame effect.

3. **Heating Function:** Press the **Heater** button to activate the heating element. Press again to adjust the temperature setting (17°C to 27°C). The heater can warm up to a 30m² space.

30^{m²} HEATING SPACE

Heating time is around 15-20 minutes



17°C to 27°C



Timer
0.5-6H



Overheat
Protection



1830W~2000W



Image: Infographic detailing heating features including temperature range (17°C to 27°C), timer (0.5-6H), overheat protection, and power output (1830W-2000W) for a 30m² heating space.

4. **LED Light Strip:** The fireplace features a 16-color LED light strip. Use the remote control to select different colors and modes. The LED strip operates independently of the heater.



Image: The electric fireplace illuminated by its RGB LED light strip, demonstrating multiple color options. A remote control is shown with buttons for brightness adjustment, music sync, and timing function.

5. **Timer Function:** Press the **Timer** button to set an automatic shut-off time (e.g., 0.5 to 6 hours). Use the Plus/Minus buttons on the remote to adjust the duration.
6. **Programmable 7-Day Remote Control:** Utilize the remote control's "Weekly timer" function for advanced scheduling of heating operation. Refer to the remote control's specific instructions for detailed programming steps.

MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your electric fireplace.

- **Cleaning:**
 - Always disconnect power before cleaning.
 - Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or sprays.
 - Gently clean the glass panel with a soft cloth. Avoid harsh chemicals that may damage the finish.
 - Periodically vacuum the air intake and exhaust vents to prevent dust buildup, which can affect heating efficiency.
- **Storage:** If storing the fireplace for an extended period, ensure it is clean and dry. Store in a cool, dry place, protected from dust and moisture.
- **Cord Inspection:** Regularly inspect the power cord for any signs of damage, fraying, or overheating. If

damage is found, discontinue use and contact customer support.

TROUBLESHOOTING

If you encounter issues with your electric fireplace, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power, power cord not plugged in, circuit breaker tripped, unit's main power switch off.	Ensure the power cord is securely plugged into a working outlet. Check your household circuit breaker. Ensure the main power switch on the unit (if present) is in the "ON" position.
No heat output.	Heater function not activated, temperature setting too low, overheat protection activated.	Press the Heater button to activate. Increase the temperature setting. If the unit overheated, unplug it, wait 10-15 minutes for it to cool down, then plug it back in. Ensure vents are not blocked.
Flame effect not working.	Flame effect turned off, LED bulb issue.	Press the Flame button to activate or adjust brightness. If the issue persists, contact customer support.
Remote control not working.	Dead batteries, remote out of range, obstruction.	Replace batteries in the remote control. Ensure you are within range and pointing the remote directly at the fireplace sensor. Remove any obstructions between the remote and the unit.

SPECIFICATIONS

Feature	Detail
Brand	YITAHOME
Model Number	AEYIHVGYgp
Color	White
Product Dimensions (D x W x H)	26 cm x 97 cm x 86 cm (10.2" x 38.2" x 33.9")
Item Weight	25.3 kg
Power Source	Corded Electric
Heating Area	Up to 30 m ²
Temperature Range	17°C to 27°C
Timer Function	0.5 - 6 hours, 7-day programmable
LED Flame Effect	Realistic, adjustable brightness
LED Light Strip	16-color, independent operation
Installation Type	Built-in (into mantel)
Included Components	Handles, Remote Control

WARRANTY AND SUPPORT

For warranty information or technical support, please contact YITAHOME customer service. Keep your purchase receipt and model number (AEYIHVGYgp) readily available when contacting support.

Contact details can typically be found on the manufacturer's official website or on the product packaging.