

[Manuals.plus](#) /

› [OUKITEL](#) /

› OUKITEL C2 Unlocked Cell Phone User Manual

OUKITEL C2

OUKITEL C2 Unlocked Cell Phone User Manual

Model: C2

1. INTRODUCTION

Welcome to the user manual for your OUKITEL C2 Unlocked Cell Phone. This guide provides essential information on setting up, operating, maintaining, and troubleshooting your device to ensure optimal performance and user experience. Please read this manual thoroughly before using your phone.

1.1 Package Contents

Upon opening your OUKITEL C2 package, please verify that all items listed below are present:

- 1 x OUKITEL C2 Phone
- 1 x Charger
- 1 x SIM Card Ejector Pin
- 1 x User Manual (this document)
- 1 x Phone Case



Figure 1.1: OUKITEL C2 Unlocked Cell Phone. This image displays the front and back of the OUKITEL C2 smartphone, highlighting its sleek design and camera module.

2. INITIAL SETUP

2.1 SIM Card and TF Card Installation

To use cellular services and expand storage, install your Nano-SIM cards and a TF (microSD) card as follows:

1. Locate the SIM card tray on the side of your phone.
2. Insert the provided SIM ejector pin into the small hole next to the tray and press gently until the tray pops out.
3. Place your Nano-SIM card(s) into the designated slots with the gold contacts facing down. If using a TF card, place it in its dedicated slot.
4. Carefully push the tray back into the phone until it is flush with the device body.



Figure 2.1: SIM Card and TF Card Installation. This image illustrates the SIM card tray, showing how to correctly insert two Nano-SIM cards and one TF (microSD) card for expanded storage and dual SIM functionality.

2.2 Powering On/Off

- **To Power On:** Press and hold the Power button (usually on the right side) until the OUKITEL logo appears.
- **To Power Off:** Press and hold the Power button until the power options menu appears, then select 'Power off'.
- **To Restart:** Press and hold the Power button until the power options menu appears, then select 'Restart'.

2.3 Charging the Device

Before first use, it is recommended to fully charge your OUKITEL C2. Use the provided charger and USB cable.

- Connect the USB cable to the charger and plug it into a power outlet.
- Connect the other end of the USB cable to the charging port on your phone.
- The charging indicator will appear on the screen.

The OUKITEL C2 features a 5000mAh battery, providing extended usage times. It also supports OTG reverse charging, allowing you to use your phone to charge other compatible devices.



Figure 2.2: Charging the OUKITEL C2. This image shows the OUKITEL C2 phone connected to a charger, illustrating the charging process and highlighting its 5000mAh battery capacity.

3. OPERATING YOUR DEVICE

3.1 Display and Visuals

The OUKITEL C2 features a 6.52-inch HD waterdrop display, offering clear and vibrant visuals. Key display specifications include:

- **Screen Size:** 6.52 inches
- **Resolution:** HD+ (540x1200 pixels)
- **Brightness:** 450 nits
- **Refresh Rate:** 60Hz for smooth scrolling and video playback



Figure 3.1: OUKITEL C2 HD Display. This image highlights the phone's 6.52-inch HD display, showcasing its resolution, aspect ratio, brightness, and 60Hz refresh rate for clear and smooth visuals.

3.2 Performance and Storage

The OUKITEL C2 is designed for efficient multitasking and ample storage:

- **RAM:** 16GB (4GB physical RAM + 12GB virtual expansion) for smooth app switching and performance.
- **Internal Storage:** 128GB, capable of storing a large number of photos, videos, and applications.
- **Expandable Storage:** Supports up to 1TB via TF card, providing extensive space for media and files.



Figure 3.2: OUKITEL C2 Performance and Storage. This image illustrates the phone's memory capabilities, featuring 16GB (4+12) RAM and 128GB ROM, emphasizing its capacity for smooth operation and data storage.

3.3 Camera Functions

Capture moments with the OUKITEL C2's integrated cameras:

- **Main Camera:** 13MP for clear and detailed photos.
- **Front Camera:** 5MP for selfies and video calls.

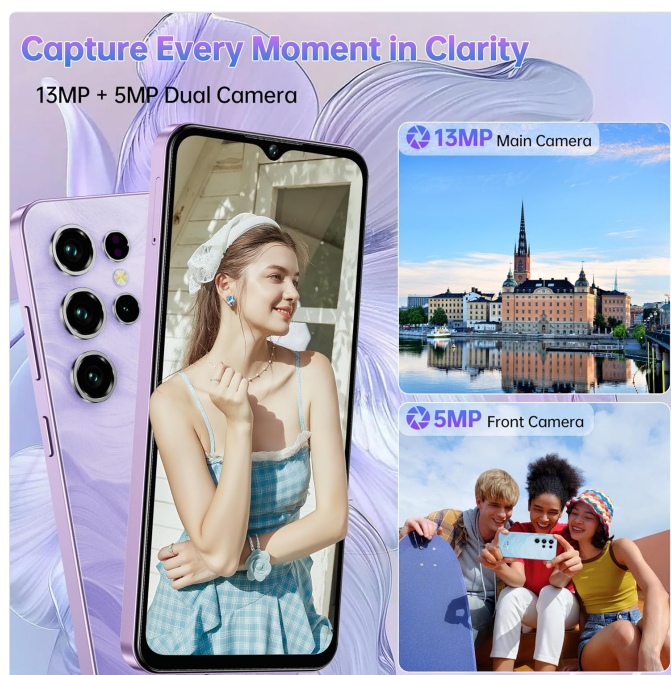


Figure 3.3: OUKITEL C2 Camera System. This image showcases the phone's 13MP main camera and 5MP front camera,

demonstrating their ability to capture clear images.

3.4 Operating System

The OUKITEL C2 runs on Android 14, offering an enhanced user experience with improved security, smarter AI features, and faster performance.



Figure 3.4: Android 14 on OUKITEL C2. This image illustrates the Android 14 operating system interface on the OUKITEL C2, highlighting its modern design and features.

3.5 Connectivity and Other Features

The OUKITEL C2 includes a range of connectivity options and practical features:

- **Bluetooth 5.0:** For stable and low-power wireless connections with accessories.
- **4G Dual SIM Dual Standby:** Allows use of two SIM cards simultaneously for flexible network management.
- **Face Unlock:** Secure and convenient biometric authentication.
- **GPS:** Built-in high-precision GPS module for reliable navigation (supports GPS, GLONASS, Beidou, Galileo).
- **3.5mm Audio Jack:** For traditional wired headphones and audio accessories.
- **95dB Speaker:** Delivers clear call audio and powerful sound playback.
- **Wi-Fi:** Supports Wi-Fi 5 (2.4GHz/5GHz) for fast internet access.



Figure 3.5: Connectivity Features. This image illustrates the OUKITEL C2's support for dual Nano-SIM/TF cards, Face ID for unlocking, and Wi-Fi 5 (2.4GHz/5GHz) capabilities.



Figure 3.6: Additional Practical Features. This image highlights the OUKITEL C2's OTG reverse charging capability, multi-system GPS support (GPS, GLONASS, Galileo, Beidou), and the inclusion of a 3.5mm headphone jack.

4. MAINTENANCE

4.1 Battery Care

To prolong the life and performance of your OUKITEL C2's battery:

- Avoid extreme temperatures, as they can degrade battery performance.
- Do not let the battery completely drain frequently. Charge it before it reaches very low levels.
- Use only the original charger and cable provided with your device.
- If the phone will be stored for an extended period, charge it to about 50% before storing.

4.2 Cleaning Your Device

Keep your OUKITEL C2 clean to maintain its appearance and functionality:

- Use a soft, lint-free cloth to wipe the screen and body.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner.
- Avoid using harsh chemicals, abrasive materials, or aerosol sprays.
- Ensure no moisture enters ports or openings.

4.3 Software Updates

Regularly check for and install software updates to ensure your device has the latest features, security patches, and performance improvements. You can usually find update options in the phone's Settings menu under 'System' or 'About phone'.

5. TROUBLESHOOTING

If you encounter issues with your OUKITEL C2, try the following solutions before seeking professional assistance:

Problem	Solution
Device does not power on	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again. If unresponsive, press and hold the Power button for 10-15 seconds to force a restart.
Poor battery life	Close unused applications running in the background. Reduce screen brightness. Disable Wi-Fi, Bluetooth, or GPS when not in use. Check battery usage in Settings to identify power-hungry apps.

Problem	Solution
Cannot connect to Wi-Fi/Bluetooth	Toggle Wi-Fi/Bluetooth off and on. Restart your phone. Ensure you are within range of the network/device. Forget the network/device and reconnect.
Apps are slow or freezing	Close background apps. Clear app cache (Settings > Apps > [App Name] > Storage > Clear cache). Restart the phone. Ensure sufficient storage space is available.
Phone is unresponsive	Press and hold the Power button for approximately 10-15 seconds to force a restart.

5.1 Factory Reset

If issues persist, a factory reset may resolve them. **Warning:** A factory reset will erase all data on your phone. Back up important data before proceeding.

1. Go to **Settings**.
2. Select **System > Reset options**.
3. Choose **Erase all data (factory reset)**.
4. Confirm your decision and enter your PIN/password if prompted.

6. SPECIFICATIONS

Below are the technical specifications for the OUKITEL C2 Unlocked Cell Phone:

Feature	Detail
Model Name	C2
Operating System	Android 14
Screen Size	6.52 Inches
Resolution	540x1200 (HD+)
Refresh Rate	60 Hz
RAM Memory Installed Size	16 GB (4GB physical + 12GB virtual)
Memory Storage Capacity	128 GB
Expandable Memory	Up to 1TB via TF card
Battery Power Rating	5000 mAh
Phone Talk Time	35 Hours
Main Camera	13 MP

Feature	Detail
Front Camera	5 MP
Cellular Technology	4G
Connectivity Technologies	Bluetooth 5.0, Wi-Fi (2.4GHz/5GHz)
GPS	True (GPS, GLONASS, Galileo, Beidou)
Audio Jack	3.5 mm
Special Features	Built-In GPS, Dual SIM, Expandable Memory, Stereo Speakers, Face Unlock, OTG Reverse Charging
Item Weight	15.2 ounces
Package Dimensions	9.29 x 6.73 x 2.8 inches

7. WARRANTY AND SUPPORT

7.1 Product Warranty

Your OUKITEL C2 device is covered by a standard manufacturer's warranty. Please refer to the warranty card included in your package or visit the official OUKITEL website for detailed terms and conditions regarding warranty coverage, duration, and claims procedures.

7.2 Customer Support

For further assistance, technical support, or inquiries not covered in this manual, please contact OUKITEL customer support through their official website or the contact information provided in your warranty documentation. When contacting support, please have your device model (C2) and purchase details readily available.