

IBELL 2288DVD

IBELL 2288 DVD Player Instruction Manual

Model: 2288DVD

1. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before operating this device. Keep this manual for future reference.

- **Power Source:** Ensure the power supply matches the requirements specified on the device.
- **Ventilation:** Do not block ventilation openings. Allow adequate space around the unit for proper airflow.
- **Water and Moisture:** Do not expose the unit to rain, moisture, or dripping/splashing liquids. Do not place objects filled with liquids on the unit.
- **Heat:** Keep the unit away from heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Laser Product:** This product utilizes a Class 1 Laser. Avoid direct exposure to the laser beam.

2. PRODUCT OVERVIEW

The IBELL 2288 DVD Player is a compact, multi-format entertainment device designed for home use. It supports various media types including DVD, MPEG4, MP3, JPEG, DivX, and HDCD. Key features include 5.1 surround sound output, USB playback, karaoke mic support, and a clear LED display.



Image 2.1: IBELL 2288 DVD Player with its remote control and highlighted features.

Package Contents:

Upon unpacking, ensure all items are present:

- IBELL 2288 DVD Player Unit
- Remote Control
- Audio/Video RCA Cable
- Instruction Manual (this document)

3. SETUP INSTRUCTIONS

3.1 Connecting to a Television

The IBELL 2288 DVD Player offers multiple connectivity options for video and audio output.



Image 3.1: Rear panel connections of the IBELL 2288 DVD Player.

HDMI Connection (Recommended for Smart TVs)

For the best video and audio quality, connect the DVD player to your Smart TV using an HDMI cable (not included).

1. Connect one end of the HDMI cable to the HDMI OUT port on the DVD player.
2. Connect the other end of the HDMI cable to an HDMI IN port on your television.
3. Select the corresponding HDMI input on your TV using its remote control.

RCA (Composite Video & Stereo Audio) Connection

Use the provided RCA cable for standard definition video and stereo audio.

1. Connect the yellow plug of the RCA cable to the VIDEO OUT (yellow) port on the DVD player.
2. Connect the red and white plugs to the AUDIO OUT (red for right, white for left) ports on the DVD player.
3. Connect the other ends of the RCA cable to the corresponding IN ports on your television.
4. Select the corresponding AV input on your TV.

5.1 Surround Sound Audio Output

For immersive audio, connect to a compatible 5.1 channel amplifier or home theater system using the dedicated 5.1 audio output ports (Front L/R, Rear L/R, Center, Subwoofer) or digital outputs.

- **Fiber Optical/Coaxial:** Connect a digital audio cable from the OPTICAL or COAXIAL OUT port on the DVD player to the corresponding input on your amplifier.
- **Analog 5.1:** Connect RCA cables from the 5.1 CH OUT ports on the DVD player to the 5.1 CH IN ports on your amplifier.

3.2 Power Connection

1. Ensure all audio and video connections are secure.
2. Plug the power cord of the DVD player into a suitable electrical outlet.
3. Press the POWER button on the front panel or the remote control to turn on the unit. The LED display will illuminate.



Image 3.2: The IBELL 2288 DVD Player integrated into a home entertainment system.

4. OPERATING INSTRUCTIONS

4.1 Basic Disc Playback

1. Press the OPEN/CLOSE button on the front panel or remote control to open the disc tray.
2. Place a DVD or compatible disc (label side up) onto the disc tray.
3. Press the OPEN/CLOSE button again to close the tray. The player will automatically begin reading the disc.
4. Use the PLAY/PAUSE, STOP, FORWARD, REWIND, NEXT, and PREV buttons on the remote control to manage playback.



Image 4.1: Inserting a disc into the IBELL 2288 DVD Player.

4.2 USB Playback and Copy Function

The IBELL 2288 DVD Player supports playback of media files directly from a USB drive.

1. Insert a USB flash drive into the USB port on the front panel of the player.
2. The player should automatically detect the USB drive and display its contents. If not, press the USB button on the remote control or the SOURCE button on the front panel to switch to USB mode.
3. Navigate through your files using the arrow keys and ENTER button on the remote control.

4. To use the copy function, select the desired file on a disc or another USB device and follow the on-screen prompts or refer to the remote control's 'USB COPY' button.

4.3 Remote Control Functions

The full-function remote control allows convenient operation from a distance. Familiarize yourself with the buttons for power, playback controls, menu navigation, volume, audio/subtitle selection, and special features like karaoke and child lock.

4.4 Karaoke Function

The player features dual microphone sockets for karaoke. Connect microphones (not included) to the MIC1 and MIC2 ports on the front panel. Adjust microphone volume and echo effects using the remote control or on-screen menu.

4.5 Child Lock Feature

To prevent accidental operation or access to certain content, activate the child lock feature through the system setup menu. Consult the on-screen menu for specific steps to set and disable the child lock password.

4.6 LED Display

The 4-digit LED screen on the front panel displays essential information such as track number, elapsed time, and current mode (e.g., DVD, USB, Standby).

5. MAINTENANCE

5.1 Cleaning the Unit

- Wipe the exterior of the player with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Ensure the unit is unplugged before cleaning.

5.2 Disc Care

- Handle discs by their edges to avoid fingerprints.
- Keep discs clean and free from scratches. Wipe discs gently from the center outwards with a soft, lint-free cloth if cleaning is necessary.
- Store discs in their cases when not in use.

6. TROUBLESHOOTING

If you encounter issues with your IBELL 2288 DVD Player, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Power cord not connected; Power outlet faulty	Check power cord connection; Try a different outlet; Ensure power switch is ON.

Problem	Possible Cause	Solution
No picture	Video cable loose/incorrect; Incorrect TV input selected	Check video cable connections (HDMI/RCA); Select correct input on TV.
No sound	Audio cable loose/incorrect; TV/Amplifier volume low/muted; Incorrect audio output selected	Check audio cable connections; Increase volume/unmute TV/amplifier; Select correct audio output mode on player.
Disc not playing/reading	Disc dirty/scratched; Disc inserted incorrectly; Incompatible disc format	Clean disc; Insert disc label-side up; Ensure disc format is supported (DVD, MPEG4, MP3, JPEG, DivX, HDCD).
USB device not detected	USB device not properly inserted; Incompatible USB format; USB device faulty	Re-insert USB device; Ensure USB is FAT32 formatted; Try a different USB device.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Below are the technical specifications for the IBELL 2288 DVD Player:

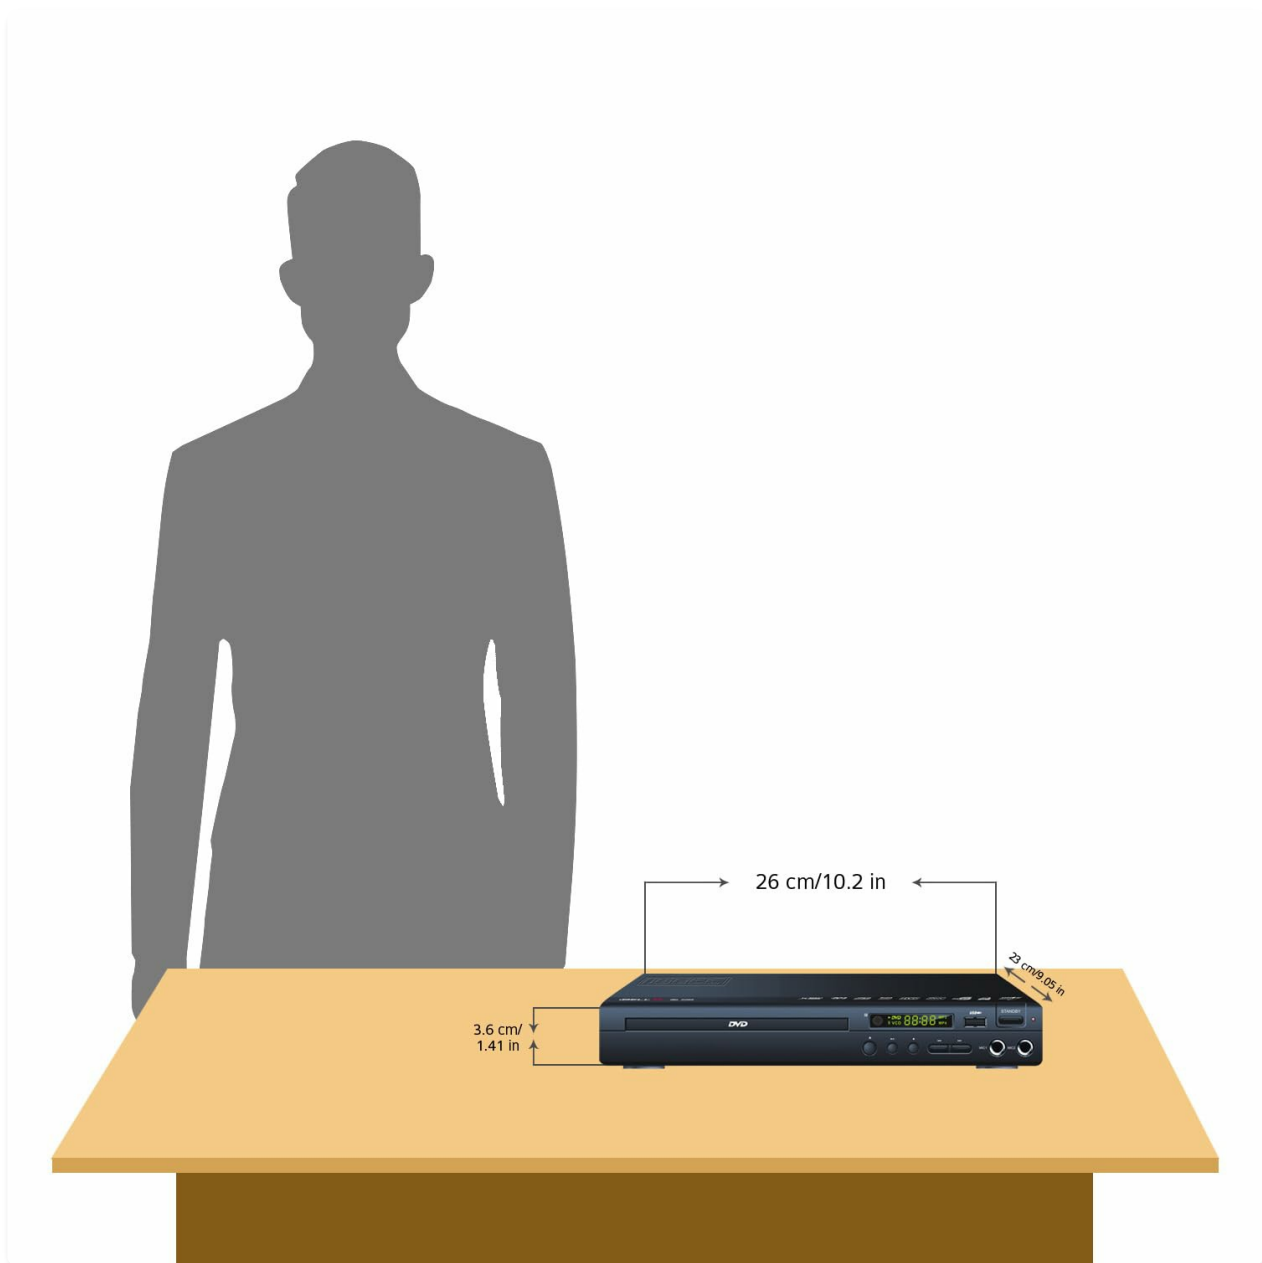


Image 7.1: Dimensions of the IBELL 2288 DVD Player.

Feature	Detail
Brand	IBELL
Model Name	2288DVD
Media Type	DVD
Special Features	Compact, Multi-Format Playback, Karaoke Mic Support, Child Lock, Built-in Amplifier
Resolution	1024 × 600
Connector Type	HDMI, USB, RCA (Audio/Video), Coaxial, Optical, 5.1 Channel Audio Out
Connectivity Technology	USB
Colour	Black

Feature	Detail
Item Weight	1.15 Kilograms
Audio Output Mode	Surround
Supported Audio Formats	MP3, MPEG4
Surround Sound Channel Configuration	5.1
Compatible Devices	Television
Supported File Formats	MPEG4, MP3, JPEG, DivX, HDCD, Kodak Picture CD, Video CD
Item Dimensions (L x W x H)	26L x 23W x 3.6H Centimeters
Display	4-digit LED screen

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The IBELL 2288 DVD Player comes with a **1 Year Standard Warranty**. An additional **6 Month Warranty** can be obtained upon free registration. Registration should be completed within 30 days from the date of purchase.



**1 Year Standard Warranty +
6 Months Additional Warranty
On Free Registration**

Image 8.1: Warranty details for the IBELL 2288 DVD Player.

8.2 Manufacturer and Importer Information

Manufacturer/Importer: Innovative Technologies, iBELL Fida's Building, Thottumugham P.O, Aluva, Kerala - 683105

8.3 Customer Support

For warranty claims, technical assistance, or any other inquiries, please contact IBELL customer support. Refer to the contact information provided with your purchase documentation or visit the official IBELL website for the most up-to-date support details.

