

NOBXBON W4-DC

NOBXBON Wireless Battery W4-DC for Cat Fountain

User Manual

1. INTRODUCTION

Thank you for choosing the NOBXBON Wireless Battery W4-DC. This battery is designed to provide a reliable and convenient power source for your NOBXBON cat water fountain, offering cordless operation and extended usage. Please read this manual carefully before use to ensure proper installation, operation, and maintenance.

This wireless battery features a 2200mAh capacity, providing up to 30 days of operation in sensor mode on a single charge. It supports Type-C flash charging, allowing for a full charge in approximately 3 hours.

2. SAFETY INFORMATION

- **Important:** The sensor component of the battery unit cannot be submerged in water. Ensure it remains dry during cleaning or operation.
- Do not attempt to disassemble or repair the battery unit yourself. Contact customer support if service is required.
- Use only the provided or recommended charging cable and adapter to charge the battery.
- Keep the battery away from extreme temperatures, direct sunlight, and open flames.

3. SETUP AND INSTALLATION

3.1 Initial Charging

1. Before first use, fully charge the wireless battery. Connect the Type-C charging cable to the battery unit and a suitable USB power adapter.
2. The power indicator light will flash during charging. It will turn solid blue when charging is complete.
3. A full charge typically takes approximately 3 hours.

3.2 Installing the Battery into the Fountain

The NOBXBON Wireless Battery is designed for quick and easy installation into compatible NOBXBON cat water fountains.

1. Ensure the cat fountain is clean and dry before installation.
2. Align the wireless battery unit with the designated slot in the fountain's base or pump assembly.
3. Gently push the battery unit into place until it is securely seated. No tools are required for installation or removal.

Step-by-Step Pump Cleaning

01



(1) Remove the pump cover and the impeller cap.

02



(2) Remove the impeller.

03



(3) Clean the components with the cleaning brush.



Image: The NOBxBON wireless cat water fountain with the battery unit installed, demonstrating its cordless operation.

4. OPERATION

4.1 Powering the Fountain

Once the wireless battery is installed and charged, it will power the cat fountain according to its operational modes (e.g., sensor mode, timed mode, continuous mode). Refer to your specific cat fountain's manual for detailed mode instructions.

In sensor mode, the 2200mAh battery can last for approximately 30 days, providing water flow only when your pet approaches.

4.2 Battery Status Indicators

The battery unit features a power indicator light to communicate its status:

- **Red Light:** Indicates low battery. Recharge the unit promptly.
- **Flashing Light:** Indicates the battery is currently charging.
- **Blue Light:** Indicates charging is complete. The battery is fully charged.



Image: The NOBxBON wireless battery unit, highlighting its Type-C charging port and power indicator lights for battery status.

5. MAINTENANCE

5.1 Battery Replacement

The battery unit is designed for quick replacement. When the battery is low, simply remove the unit from the fountain and replace it with a fully charged spare (if available) to ensure uninterrupted operation. The replacement process takes approximately 1 second and requires no tools.

5.2 Cleaning the Fountain Pump (General Maintenance)

Regular cleaning of the fountain pump is essential for optimal performance and longevity. While the battery unit itself should not be submerged, the pump components can be cleaned.

1. Separate the battery from the fountain.
2. Remove the water tray from the water tank.
3. Rotate the pump locking ring counter-clockwise to unlock.
4. Expand the jaws and remove the motor.
5. Disassemble the pump by removing the pump cover and impeller cap.
6. Remove the impeller.
7. Clean all components with a cleaning brush and rinse thoroughly. Ensure all parts are dry before reassembly.



Image: Visual guide showing the disassembly steps for cleaning the NOBxBON cat fountain pump, starting with separating the battery unit.

6. TROUBLESHOOTING

6.1 Battery Unit Not Charging

- **Check USB Cable:** Try using a different, known-good USB Type-C cable.
- **Poor Connection:** Unplug and re-plug the charging cable firmly into both the battery unit and the power adapter.
- **Charging Plug:** Attempt to use a different USB wall adapter or power source.

6.2 Cat Fountain Not Working (Battery Related)

- **Check Battery Charge:** Ensure the wireless battery is fully charged (blue indicator light).
- **Battery Installation:** Verify the battery unit is correctly and securely installed in the fountain.
- **Pump Cleanliness:** If the fountain is not dispensing water, the pump may be clogged. Refer to Section 5.2 for pump

cleaning instructions.

- **Sensor Obstruction:** Ensure the sensor on the battery unit is clean and unobstructed if using sensor mode.
- If the issue persists after checking these points, please contact customer support.

7. SPECIFICATIONS

Model Number	W4-DC
Battery Capacity	2200mAh
Charging Port	Type-C
Charging Time	Approx. 3 hours
Battery Life (Sensor Mode)	Up to 30 days
Power Source	Battery Powered
Item Weight	0.15 kg (5.29 ounces)
Package Dimensions	3.9 x 2.91 x 2.83 inches
Included Components	NOBXBON Wireless Battery for Cat Fountain

8. WARRANTY

The NOBXBON Wireless Battery W4-DC comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or failure to follow the instructions in this manual.

Please retain your proof of purchase for warranty claims.

9. CUSTOMER SUPPORT

If you encounter any issues or have questions regarding your NOBXBON Wireless Battery W4-DC that are not addressed in this manual, please contact our customer support team. Our representatives are available to assist you with troubleshooting, warranty claims, and general inquiries.

For the most up-to-date contact information, please visit the official NOBXBON website or refer to the contact details provided with your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question