

[manuals.plus](#) /

› [PRIXTON](#) /

› [PRIXTON Napoli Espresso Machine with Integrated Grinder - User Manual](#)

**PRIXTON 10006208**

# PRIXTON Napoli Espresso Machine with Integrated Grinder - User Manual

Model: 10006208

Brand: PRIXTON

## 1. SETUP

Before first use, ensure all packaging materials are removed and the machine is placed on a stable, flat surface.

### 1.1 Water Tank Installation and Filling

Locate the removable water tank at the back of the machine. Lift it out, fill it with fresh, cold water up to the MAX line, and securely place it back into position.



Image: Rear view of the espresso machine with the transparent 1.8-liter water tank visible.



Image: A hand pouring water into the machine's water reservoir.

## 1.2 Coffee Bean Hopper

Open the lid of the integrated coffee bean hopper located on top of the machine. Pour fresh whole coffee beans into the hopper. Ensure the lid is closed properly after filling.



Image: A hand pouring whole coffee beans into the transparent hopper of the integrated grinder.

## 1.3 Portafilter and Filters

Select the appropriate filter (single or double shot) and place it into the portafilter. For ground coffee, fill the filter and tamp it evenly. Attach the portafilter to the brewing head by aligning it and twisting it firmly to the right until it locks.



Image: A person's hands attaching the portafilter to the espresso machine's brewing group.

## 2. OPERATING INSTRUCTIONS

The PRIXTON Napoli Espresso Machine offers versatile brewing options for various coffee preferences.

### 2.1 Powering On and Preheating

Press the power button on the touch control panel. The machine will begin preheating. Wait until the indicator lights stabilize, typically around 92°C, before brewing for optimal results.



Image: A hand touching the illuminated control panel of the espresso machine, showing temperature and brewing options.

## 2.2 Grinding Coffee Beans

Use the grinder adjustment knob to select one of the 22 grind levels. For espresso, a finer grind is generally preferred. Press the 'Grind' button on the touch panel to start grinding the desired amount of coffee directly into the portafilter.

## 2.3 Brewing Espresso

Place your cup(s) on the drip tray. Select either 1 or 2 cups on the touch control panel. The machine will automatically brew your espresso with 20 bars of pressure for a rich extraction.

## 2.4 Using Ground Coffee or Capsules

For pre-ground coffee, fill the appropriate filter in the portafilter and tamp. For capsules, use the included adapter. Insert the capsule into the adapter, then place it into the portafilter. Follow the brewing steps as for whole beans.

## 2.5 Steaming Milk

Fill a milk frothing pitcher with cold milk. Position the adjustable steam wand into the milk. Activate the steam function using the touch control panel. Rotate the steam knob to control steam intensity and froth milk to your desired consistency for cappuccinos or lattes.



Image: A detailed view of the steam wand, ready for frothing milk.

## 3. MAINTENANCE

Regular cleaning and maintenance ensure optimal performance and longevity of your espresso machine.

### 3.1 Cleaning Removable Accessories

The portafilter, filters, drip tray, and water tank are all removable for easy cleaning. Wash them with warm, soapy water after each use and rinse thoroughly. The included measuring spoon and cleaning brushes can assist in this process.



Image: Various cleaning tools and accessories provided with the espresso machine.

### 3.2 Grinder Cleaning

The coffee bean hopper can be removed by twisting. Use the provided brush to clean any residual coffee grounds from the grinder burrs and the hopper itself. Regular cleaning prevents blockages and ensures consistent grind quality.

### 3.3 Descaling

Depending on water hardness, descaling should be performed periodically (e.g., every 2-3 months) to remove mineral buildup. Follow the instructions provided with a suitable descaling solution for espresso machines. Always rinse the machine thoroughly with clean water after descaling.

## 4. TROUBLESHOOTING

If you encounter issues with your PRIXTON Napoli Espresso Machine, refer to the following common solutions:

- **No Power:** Ensure the machine is properly plugged into a working electrical outlet. Check the power switch.
- **Coffee Not Brewing:** Verify the water tank is filled and correctly seated. Ensure the portafilter is securely locked in place. Check if the coffee beans are loaded or if ground coffee/capsule is inserted.
- **Weak Coffee:** Adjust the grinder to a finer setting. Ensure enough coffee is used and tamped correctly.

- **No Steam from Wand:** Allow the machine to fully preheat to steam temperature. Ensure the steam knob is fully open. Clean any blockages in the steam wand.
- **Leaking:** Check that the water tank and drip tray are correctly positioned. Ensure the portafilter is tightly secured.

If problems persist, contact customer support.

## 5. SPECIFICATIONS

Feature	Specification
Brand	PRIXTON
Model Number	10006208
Power	1350W
Pressure	20 Bars
Water Tank Capacity	1.8 Liters
Grinder Power	150W
Grind Levels	22
Dimensions (L x W x H)	22.5 x 39.5 x 39.5 cm
Weight	5.8 kg
Material	Stainless Steel
Compatibility	Whole beans, ground coffee, capsules

## 6. WARRANTY INFORMATION

This PRIXTON product is covered by a standard manufacturer's warranty. Please refer to the warranty card included with your purchase or visit the official PRIXTON website for detailed terms and conditions.

## 7. SUPPORT

For further assistance, technical support, or spare parts, please contact PRIXTON customer service. Contact details can be found on the official PRIXTON website or in the product packaging.