



[Manuals.plus](#) /

> [TOKIT](#) /

> TOKIT TK-US-RC-PPB-G Mini Rice Cooker Instruction Manual

TOKIT TK-US-RC-PPB-G

TOKIT TK-US-RC-PPB-G Mini Rice Cooker Instruction Manual

Model: TK-US-RC-PPB-G | Brand: TOKIT

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your TOKIT TK-US-RC-PPB-G Mini Rice Cooker. Designed for convenience and versatility, this appliance features a sleek touch-button interface, 8 cooking functions, a 24-hour timer, and a ceramic-coated non-stick pot. Please read all instructions carefully before first use.



Image: The TOKIT Mini Rice Cooker in Avocado Green, showcasing its compact and modern design on a kitchen counter.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.

- Do not let cord hang over edge of table or counter, or touch hot surfaces.
 - Do not place on or near a hot gas or electric burner, or in a heated oven.
 - Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
 - Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
 - Do not use appliance for other than intended use.
 - This appliance is for household use only.
 - **Caution:** Hot steam will be released from the steam vent during operation. Keep hands and face clear.
-

PACKAGE CONTENTS

Your TOKIT Mini Rice Cooker package includes the following items:

- TOKIT Mini Rice Cooker Unit
- Removable Ceramic-Coated Non-Stick Inner Pot
- Rice Spoon
- Measuring Cup
- Power Cord
- Instruction Manual (this document)

Tiny Powerhouse, Big Convenience



Included Accessories



Rice Paddle



Measuring Cup



Inner Pot

Image: TOKIT Mini Rice Cooker with its included accessories: a rice paddle, a measuring cup, and the ceramic-coated inner pot.

PRODUCT FEATURES

- **Unique Design:** Features a sleek touch button and display. Simply press the lid to start cooking.
- **Versatile Cooking Options:** Offers 8 cooking functions: White Rice, Quick Cook, Brown Rice, Congee, Stew Soup, Hot Pot, Steaming, and Keep Warm.
- **Keep Warm Function:** Automatically switches to a gentle warming mode after cooking. Includes Anti-Burn Dry Technology to prevent overheating if no water is detected.
- **Easy to Clean:** The removable top lid and ceramic-coated non-stick inner pot simplify cleanup.
- **Efficient & User-Friendly:** Intuitive digital interface with clearly labeled buttons. The inner pot can also double as a serving bowl.

One tap to cook & Pop-up automatically

Perfect Fluffy Food & Beyond, Effortlessly!



Image: The TOKIT Mini Rice Cooker with its lid automatically opening, revealing a meal inside. This highlights the "one tap to cook & pop-up automatically" feature.

One Cooker, Countless Dishes

Multiple cooking options to suit different needs



Image: A collage showcasing the versatility of the TOKIT Mini Rice Cooker, displaying various dishes like white rice, quinoa rice, oatmeal, gumbo, and jambalaya that can be prepared using its multiple cooking options.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Before first use, wash the inner pot, rice spoon, and measuring cup with warm, soapy water. Wipe the exterior of the main unit with a damp cloth. Ensure all parts are dry before assembly.
3. **Placement:** Place the rice cooker on a stable, flat, heat-resistant surface, away from direct sunlight and heat sources. Ensure adequate ventilation around the unit.
4. **Insert Inner Pot:** Place the ceramic-coated non-stick inner pot securely into the main unit.
5. **Connect Power:** Plug the power cord into the designated port on the rice cooker, then into a standard electrical outlet.

Your browser does not support the video tag.

Video: An official TOKIT video demonstrating the unboxing and initial setup of the mini rice cooker, including placing the inner pot and connecting the power cord.

OPERATING INSTRUCTIONS

Basic Operation for Rice Cooking

1. **Measure Ingredients:** Use the provided measuring cup to add the desired amount of rice to the inner pot. Rinse the rice if necessary.
2. **Add Water:** Add the appropriate amount of water according to the rice type and quantity. Refer to the water level markings inside the inner pot for guidance.
3. **Close Lid:** Place the lid securely on the rice cooker.
4. **Start Cooking:** After plugging in the device and placing the inner pot, wait approximately 7 seconds. Then, gently press down on the central surface of the lid (not the edge) to initiate the cooking cycle. The display will illuminate, and the cooking process will begin.
5. **Automatic Keep Warm:** Once cooking is complete, the rice cooker will automatically switch to the "Keep Warm" function.

Selecting Cooking Functions

Your TOKIT Mini Rice Cooker offers 8 preset cooking functions:

- **White Rice:** Standard cooking for white rice.
- **Quick Cook:** For faster cooking of white rice, typically for smaller portions.
- **Brown Rice:** Optimized for cooking brown rice.
- **Congee:** For preparing congee or porridge.
- **Stew Soup:** Ideal for stews and soups.
- **Hot Pot:** For hot pot preparations.
- **Steaming:** Use with a steaming rack (not included) for steaming vegetables or other foods.
- **Keep Warm:** Maintains food at a warm temperature after cooking.

To select a function, use the "Select/Cancel" button on the control panel to cycle through the options. The display will show the selected function and estimated cooking time. Once your desired function is selected, press the lid to start.

Using the 24-Hour Timer

The 24-hour timer allows you to set a delayed start for your cooking. Prepare your ingredients, select your desired cooking function, and then use the "Timer" button to adjust the delay time. The cooker will automatically start cooking after the set delay, ensuring your meal is ready when you need it.

Set It & Savor – Smart Tech Does the Work

From undercooked to overachiever:
Perfect rice, zero effort



Image: A detailed view of the TOKIT Mini Rice Cooker's control panel, illustrating the simple workflow: Select function, Tap to get cooking, Continue monitoring, and Finish with automatic lid pop-up.

Your browser does not support the video tag.

Video: An official TOKIT video demonstrating the various cooking functions and the ease of use of the control panel on the mini rice cooker.

CLEANING & MAINTENANCE

Proper cleaning and maintenance will ensure the longevity and optimal performance of your TOKIT Mini Rice Cooker.

- **Unplug:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- **Inner Pot:** The ceramic-coated non-stick inner pot is removable and dishwasher safe. For best results and to preserve the non-stick coating, hand wash with warm, soapy water and a soft sponge.
- **Top Lid:** The top lid is removable for easy cleaning. Wash with warm, soapy water. Note: The seal ring on the lid is not removable.
- **Exterior:** Wipe the exterior of the main unit with a damp cloth. Do not immerse the main unit in

water or any other liquid.

- **Steam Vent:** Ensure the steam vent is clear of any food debris after each use.
- **Storage:** Store the cleaned and dried rice cooker in a cool, dry place.



Image: The removable lid and ceramic-coated inner pot of the TOKIT Mini Rice Cooker being washed, demonstrating the ease of cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not properly plugged in.	Ensure the power cord is securely plugged into both the appliance and a working electrical outlet.
Rice is undercooked or overcooked.	Incorrect water-to-rice ratio or incorrect cooking function selected.	Adjust water levels according to the inner pot markings and rice type. Ensure the correct cooking function (e.g., White Rice, Brown Rice) is selected.

Problem	Possible Cause	Solution
Lid does not stay closed or opens prematurely.	Lid not pressed correctly or pressed too soon after plugging in.	Wait approximately 7 seconds after plugging in before pressing the lid. Ensure you press on the central surface of the lid firmly.
Steam or water leaks from the lid.	Lid not properly sealed or steam vent is blocked.	Ensure the lid is closed correctly and the seal ring is clean. Check if the steam vent is clear of any obstructions.

SPECIFICATIONS

Brand: TOKIT

Model Name: 1.5 L Small Rice Cooker

Item Model Number: TK-US-RC-PPB-G

Capacity: 1.5 Liters (3 cups uncooked / 6 cups cooked)

Product Dimensions: 8.4"D x 8.4"W x 7.7"H

Item Weight: 4.8 Pounds

Color: Avocado Green

Material: Plastic, Stainless Steel (Lid Material: Stainless Steel)

Special Feature: Non-Stick (Ceramic-Coated Inner Pot)

Power Source: Corded Electric

Wattage: 400 watts

Voltage: 120 Volts

Product Care Instructions: Dishwasher Safe (Inner Pot)

WARRANTY & SUPPORT

TOKIT is committed to providing reliable after-sales service. If you have any questions, concerns, or require assistance with your TOKIT Mini Rice Cooker, please contact our customer support team. Refer to your purchase documentation for specific warranty details and contact information.

Your browser does not support the video tag.

Video: An official TOKIT video highlighting the compact size and ease of use of the mini rice cooker, reinforcing its user-friendly design.