

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [EUREKA](#) /

› [Eureka FloorShine 460 Cordless Vacuum and Floor Cleaner User Manual](#)

EUREKA FloorShine 460

Eureka FloorShine 460 Cordless Vacuum and Floor Cleaner User Manual

Model: FloorShine 460

INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation, maintenance, and care of your Eureka FloorShine 460 Cordless Vacuum and Floor Cleaner. Please read this manual thoroughly before first use and retain it for future reference.



Image: The Eureka FloorShine 460 unit shown with its charging base, cleaning solution, and roller brush. This illustrates the complete product package.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Main Unit
- Handle
- Charging Base
- Clean Water Tank (600 ml)
- Dirty Water Tank (600 ml)

- Cleaning Solution
- Roller Brush
- Filter
- Power Adapter
- User Manual



Contenuto della Confezione

Image: A visual representation of the Eureka FloorShine 460's package contents, including the main unit, handle, base, tanks, solution, brush, filter, adapter, and manual.

SETUP

1. Assembly

1. Insert the handle into the main unit until it clicks into place.
2. Ensure the clean water tank and dirty water tank are correctly installed.
3. Place the charging base on a flat, dry surface near a power outlet.
4. Connect the power adapter to the charging base and plug it into the outlet.

2. Initial Charging

Before first use, fully charge the device. Place the main unit onto the charging base. The display will indicate charging status. A full charge typically takes approximately 6 hours.

3. Filling the Clean Water Tank

1. Remove the clean water tank from the main unit.
2. Open the tank cap and fill with clean water up to the MAX line. For enhanced cleaning, add the recommended amount of Eureka cleaning solution.
3. Close the cap securely and reinsert the tank into the main unit.



Image: A hand demonstrates adding cleaning solution to the clean water tank, illustrating the preparation step before operation.

OPERATING INSTRUCTIONS

1. Power On/Off

Press the power button on the handle to turn the device on or off.

2. Cleaning Modes

The FloorShine 460 features dual cleaning modes:

- **Normal Mode:** For daily cleaning and general spills.
- **Dry Mode:** Designed for rapidly absorbing large quantities of liquid without spraying, ideal for bathrooms or wet areas.

Switch between modes using the mode selection button on the handle.



Image: Illustrates the two cleaning modes: Normal Mode for everyday cleaning with visible moisture, and Dry Mode for absorbing significant

liquid spills, showing the versatility of the device.

3. 4-in-1 Cleaning Process

The device performs four actions simultaneously:

1. **Spray:** Uniform water spray for effective cleaning.
2. **Wash:** High-speed roller brush (495 rpm) scrubs the floor.
3. **Scrape:** Efficient scraping removes dirty water.
4. **Suction:** Powerful 17,000 Pa suction recovers up to 90% of the dirty water, leaving floors dry.



Image: A visual breakdown of the "Spray - Wash - Scrape - Suction" cleaning cycle, showing how the device applies water, scrubs, removes dirty water, and vacuums simultaneously.

4. Maneuverability and Design

- **Ultra-Flat 180° Inclination:** The device can lay almost flat (8.8 cm height in resting position) to clean under low furniture like sofas and beds.

- **Automatic Propulsion:** Reduces user effort during operation.
- **Pause Function:** Tilting the device activates a pause mode.



Copertura Adagiata a 180°

Pulizia senza sforzo sotto i mobili

Image: A user demonstrates the 180-degree flat design of the FloorShine 460, allowing it to easily clean under low furniture, highlighting its maneuverability.



Design Innovativo della Spazzola per la Pulizia dei Bordi

Pulizia a fondo ogni angolo, senza tralasciare nulla.

Image: The innovative brush design for edge cleaning is shown, demonstrating the device's ability to clean close to walls and corners.

MAINTENANCE

1. Auto-Cleaning and Auto-Drying

After each use, place the device on its charging base. Press and hold the self-cleaning button (usually indicated by a water drop icon) for 1 second to activate the auto-cleaning cycle. The hot air auto-drying system will then dry the roller brush, preventing mold and odors.



Tecnologia di Autoasciugatura

Mantenere la spazzola a rullo asciutta e fresca con l'essiccazione automatica ad aria calda. Il flusso d'aria ad alta velocità e la rapida rotazione garantiscono risultati rapidi e igienici.

Image: The auto-drying technology is depicted, showing air circulation around the roller brush on the charging base to ensure it remains dry and hygienic.

2. Emptying the Dirty Water Tank

Regularly empty the dirty water tank after each cleaning session. Remove the tank, open the lid, and dispose of the contents. Rinse the tank with clean water.

3. Cleaning the Roller Brush

While the auto-cleaning function is effective, periodically inspect the roller brush for tangled hair or debris. The anti-tangle pro design helps minimize tangles, but manual removal may be necessary for optimal performance.



Design Anti-Groviglio Pro

Un pettine integrato all'interno della spazzola riduce al minimo l'attorcigliamento dei capelli, per una pulizia senza pensieri.

Image: A detailed view of the anti-tangle pro design, showing an integrated comb that helps prevent hair from wrapping around the roller brush.

4. Filter Maintenance

The foam filter should be cleaned regularly and replaced as needed to maintain suction performance. Refer to the manual for specific cleaning and replacement intervals.

TROUBLESHOOTING

If you encounter issues with your Eureka FloorShine 460, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not turn on	Low battery; improper assembly	Charge the device fully; ensure handle is securely attached.

Problem	Possible Cause	Solution
Poor suction	Dirty water tank full; clogged filter; roller brush obstructed	Empty dirty water tank; clean or replace filter; clear any obstructions from roller brush.
Water not dispensing	Clean water tank empty; tank not properly installed	Refill clean water tank; ensure tank is securely in place.
Unpleasant odor	Dirty water tank not emptied; roller brush not dried	Empty and rinse dirty water tank; run auto-drying cycle.

If the problem persists, please contact customer support.

SPECIFICATIONS

- **Brand:** EUREKA
- **Model:** NEW460 (FloorShine 460)
- **Color:** Black
- **Product Dimensions:** 21.78 x 110.15 x 20.04 cm
- **Item Weight:** 7.07 Kilograms
- **Battery Runtime:** Up to 30 minutes
- **Charging Time:** Approximately 6 hours
- **Special Features:** High power, Lightweight, Portable, Wet/Dry cleaning, 180° flat inclination, Auto-drying, Anti-tangle brush, 4-in-1 cleaning
- **Filter Type:** Foam
- **Clean Water Tank Capacity:** 600 ml
- **Dirty Water Tank Capacity:** 600 ml
- **Suction Power:** 17,000 Pa
- **Roller Brush Speed:** 495 rpm

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official Eureka website. For technical support, spare parts, or service inquiries, please contact Eureka customer service. You can find more information and contact details on the official Eureka brand store: [Eureka Brand Store](#)

