

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [FUNYET](#) /

> [FUNYET 16-inch Laptop Computer User Manual \(Model NY-03\)](#)

## FUNYET NY-03

# FUNYET 16-inch Laptop Computer User Manual

Model: NY-03

## 1. INTRODUCTION

This manual provides essential instructions for the setup, operation, and maintenance of your FUNYET 16-inch Laptop Computer (Model NY-03). Please read this manual thoroughly before using your device to ensure proper functionality and longevity.

## 2. WHAT'S IN THE BOX

Verify that all items are present in the package:

- FUNYET 16-inch Laptop Computer
- Power Adapter
- Power Cord
- User Manual (this document)

## 3. PRODUCT OVERVIEW

The FUNYET NY-03 laptop is designed for versatile use, featuring a 16-inch FHD IPS display and powered by an Intel 12th Gen N100 Processor. It comes with Windows 11 Pro pre-installed.

### 3.1. Key Features

- **Processor:** Intel 12th Gen N100 (up to 3.4GHz)
- **Display:** 16.0" FHD IPS (1920x1200) with micro-bezel
- **Memory:** 16GB DDR4 RAM
- **Storage:** 1TB SSD
- **Operating System:** Windows 11 Pro
- **Connectivity:** Wi-Fi (802.11a/b/g/n/ac), Bluetooth
- **Ports:** USB 3.0, USB 2.0, Mini HDMI, Audio Jack, DC-in
- **Additional Features:** Backlit Keyboard, Fingerprint Reader, Large Touchpad

### 3.2. Laptop Components



Image: The FUNYET 16-inch Laptop Computer, showcasing its sleek design.

### Processor



Image: Diagram illustrating the Intel 12th Gen N100 Processor with 4 cores and 3.4 GHz turbo frequency.

The laptop is equipped with an Intel 12th Generation N100 processor, providing efficient performance for daily tasks and multitasking.

### Display



Image: The 16-inch FHD IPS display with 1920x1200 resolution, highlighting its bright view and eye protection features.

Experience clear visuals on the 16-inch Full HD IPS display with a resolution of 1920x1200 pixels. The narrow bezels enhance the viewing experience.

### Memory and Storage



Image: Visual representation of 16GB DDR4 RAM and 1TB SSD, indicating fast performance and ample storage.

The laptop is equipped with 16GB of DDR4 RAM for smooth multitasking and a 1TB SSD for fast boot times and ample storage capacity.

### Ports and Connectivity



Image: Detailed view of the laptop's ports, including USB 3.0, USB 2.0, DC-in, Mini HDMI, and Audio Jack.

The laptop features various ports for connectivity, including USB 3.0, USB 2.0, Mini HDMI for external displays, an Audio Jack for headphones, and a DC-in port for power. Wireless connectivity includes Wi-Fi and Bluetooth.

### Input Devices

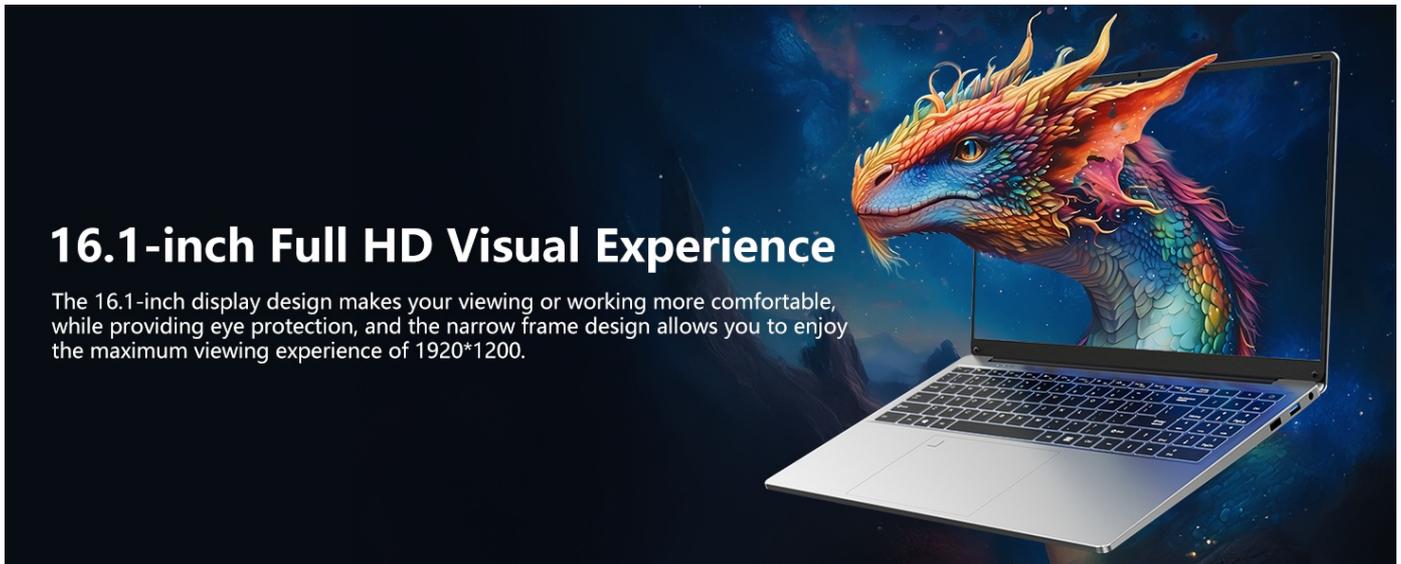


Image: The laptop's backlit keyboard, fingerprint reader, numeric keypad, and large touchpad.

The laptop includes a backlit keyboard for comfortable typing in various lighting conditions, a fingerprint reader for secure login, a numeric keypad, and a large, responsive touchpad.

### Battery

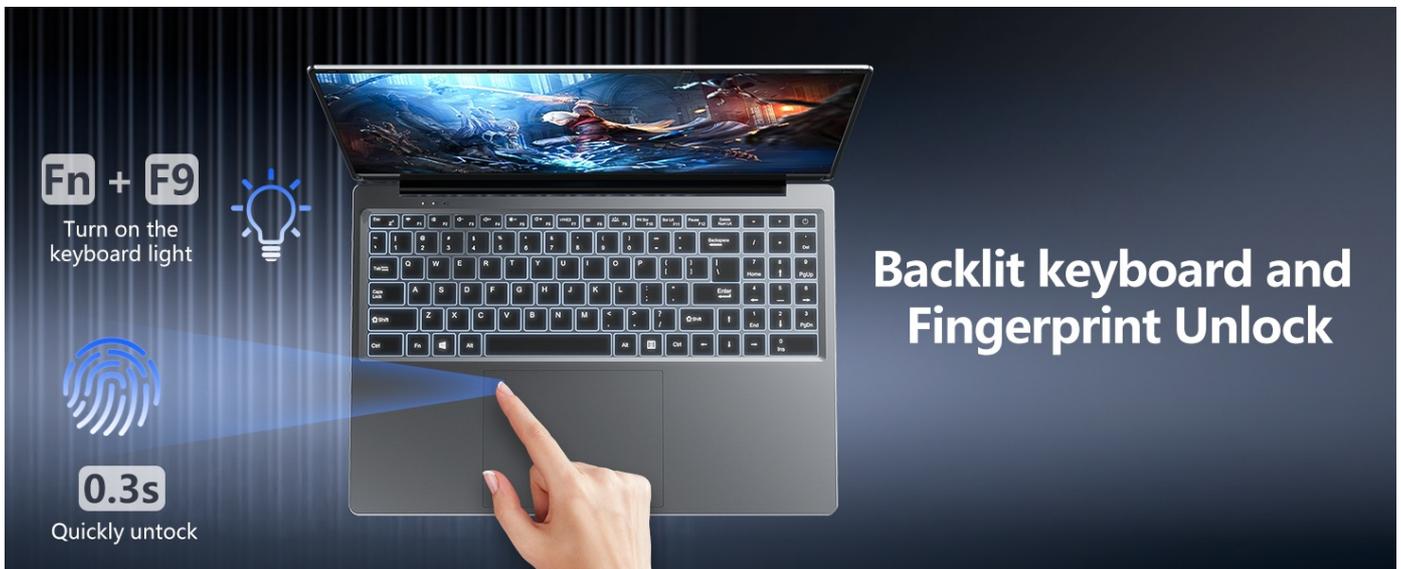


Image: Illustration showing the laptop's 6000mAH battery capacity, providing up to 6 hours of usage.

The integrated 6000mAH battery offers up to 6 hours of usage on a single charge, providing portability and convenience.

## Operating System

**24/7- online instant response**

—

 **2-year warranty**

 **6-month free exchange/return**

 **per business day phone support (4AM-10PM PT)**

 **TEL: +1 800-986-9631**

 **Email: funyetstore@outlook.com**

Image: A visual of the Windows 11 Pro desktop interface.

Your laptop comes with Windows 11 Pro pre-installed, offering enhanced security, productivity features, and a modern user interface.

## 4. SETUP

### 4.1. Initial Power On

1. Unpack the laptop and all accessories from the box.
2. Connect the power adapter to the DC-in port on the laptop and plug the power cord into an electrical outlet.
3. Open the laptop lid. The laptop may power on automatically, or you may need to press the power button.
4. Follow the on-screen instructions to complete the Windows 11 Pro initial setup, including language selection, network connection, and user account creation.

## 4.2. Connecting to Wi-Fi

1. During the initial Windows setup, you will be prompted to connect to a Wi-Fi network. Select your network from the list and enter the password.
2. If setting up later, click the Wi-Fi icon in the taskbar, select your network, and click "Connect". Enter the password if required.

## 4.3. Fingerprint Reader Setup

To set up the fingerprint reader for secure login:

1. Go to **Settings > Accounts > Sign-in options**.
2. Under "Ways to sign in", select **Fingerprint recognition (Windows Hello)** and follow the on-screen instructions to register your fingerprint.

# 5. OPERATING INSTRUCTIONS

---

## 5.1. Basic Navigation

- **Touchpad:** Use the touchpad for cursor control. Tap to click, two-finger tap for right-click, and pinch-to-zoom.
- **Keyboard:** The full-size keyboard includes a numeric keypad.
- **Backlit Keyboard:** Press **Fn + F9** to toggle the keyboard backlight on/off or adjust brightness.



Image: Demonstrates the Fn + F9 key combination for keyboard backlight and the fingerprint unlock feature.

## 5.2. Connecting External Devices

Use the available ports to connect peripherals:

- **USB Devices:** Plug USB drives, mice, or keyboards into the USB 2.0 or USB 3.0 ports.
- **External Display:** Connect an external monitor or TV using a Mini HDMI to HDMI cable (adapter may be required).
- **Audio:** Plug headphones or external speakers into the 3.5mm Audio Jack.

## 5.3. Using Windows 11 Pro

Familiarize yourself with the Windows 11 Pro interface for optimal use:

- **Start Menu:** Access applications, settings, and power options.
- **Taskbar:** Pin frequently used apps and manage open windows.
- **Settings:** Customize your laptop's behavior, network, and security.

- **Microsoft Office 365:** The laptop comes with a pre-installed Office 365 license for productivity applications like Word, Excel, and PowerPoint.

## 6. MAINTENANCE

---

### 6.1. Cleaning Your Laptop

- Use a soft, lint-free cloth to clean the screen and exterior.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner.
- Avoid harsh chemicals or abrasive materials.

### 6.2. Battery Care

- To prolong battery life, avoid fully discharging the battery frequently.
- Store the laptop in a cool, dry place when not in use for extended periods.
- Use only the provided power adapter.

### 6.3. Software Updates

Regularly update Windows and drivers to ensure optimal performance and security:

1. Go to **Settings > Windows Update**.
2. Click "Check for updates" and install any available updates.

## 7. TROUBLESHOOTING

---

Problem	Possible Solution
Laptop does not power on.	Ensure the power adapter is securely connected and the outlet is working. Try charging for at least 30 minutes before attempting to power on again.
Wi-Fi connection issues.	Check if Wi-Fi is enabled in Windows settings. Restart your router and the laptop. Ensure you are within range of the Wi-Fi signal.
Slow performance.	Close unnecessary applications. Check for Windows updates. Run a disk cleanup. Ensure sufficient free space on the SSD.
Keyboard backlight not working.	Press <b>Fn + F9</b> to toggle the backlight. Check keyboard settings in Windows.
External display not detected.	Ensure the Mini HDMI cable is securely connected to both the laptop and the display. Check the input source on your external display. Press <b>Windows key + P</b> to adjust display settings.

## 8. SPECIFICATIONS

---

Feature	Detail
Brand	FUNYET
Model Name	NY-03

Feature	Detail
Screen Size	16 Inches
Screen Resolution	1920 x 1200 pixels (FHD IPS)
Processor	Intel 12th Gen N100 (up to 3.4GHz)
RAM	16GB DDR4
Hard Drive	1TB SSD
Graphics Coprocessor	Integrated Celeron Graphics
Operating System	Windows 11 Pro
Wireless Type	802.11a/b/g/n/ac, Bluetooth
USB 2.0 Ports	1
USB 3.0 Ports	2
Other Ports	Mini HDMI, Audio Jack, DC-in
Battery	6000mAH (up to 6 hours)
Item Weight	3 pounds
Product Dimensions	14 x 9 x 0.8 inches
Color	Gray

## 9. WARRANTY AND SUPPORT

---

FUNYET offers comprehensive support for your laptop:

- **Warranty:** Enjoy a 2-year warranty from the date of purchase.
- **Returns/Exchanges:** 6-month free exchange/return policy.
- **Customer Service:** Round-the-clock customer service is available.

For assistance, please contact FUNYET support:

- **Phone:** +1 800-986-9631 (4 AM - 10 PM PT, per business day)
- **Email:** [funyetstore@outlook.com](mailto:funyetstore@outlook.com)



*Image: The FUNYET brand logo.*

Your browser does not support the video tag.

*Video: An official product video showcasing the FUNYET 16-inch laptop. This video highlights various features and usage scenarios of the laptop.*

