

## Frigidaire EFRF2006COMAMZ

# Frigidaire 2.0 Cu. Ft. Chest Deep Freezer Instruction Manual

Model: EFRF2006COMAMZ

## 1. PRODUCT OVERVIEW

The Frigidaire 2.0 Cu. Ft. Chest Deep Freezer (Model EFRF2006COMAMZ) is designed to provide convenient and efficient frozen food storage. Its compact design makes it ideal for various spaces, including garages and basements. Key features include an adjustable thermostat, a removable vinyl-coated wire basket, and an easy-access defrost drain.

# FRIGIDAIRE CHEST FREEZER

2.1 CU. FT. / 67 Liter Capacity



Image 1: Front view of the Frigidaire 2.0 Cu. Ft. Chest Deep Freezer in Pearl White, showcasing its compact design and top-opening lid.

## 2. SAFETY INFORMATION

Before operating your new freezer, please read all safety instructions carefully to prevent personal injury or property damage. Always ensure the freezer is placed on a stable, level surface and is properly grounded. Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance. This appliance is intended for household use only.



Image 2: Frigidaire branding with a banner indicating 'Garage Ready' and safety information regarding temperature stability.

## 3. SETUP AND INSTALLATION

### 3.1 Unpacking

- Remove all packaging materials, including foam and adhesive tape.
- Inspect the freezer for any shipping damage. Report any damage to the retailer immediately.

### 3.2 Placement

- Place the freezer on a firm, level floor that is strong enough to support the unit when fully loaded.
- Ensure adequate air circulation around the freezer. Allow at least 4 inches (10 cm) of space on the sides and back, and 12 inches (30 cm) at the top.
- This model is 'Garage Ready', designed to operate effectively in extreme ambient temperatures from 0°F to 110°F (-17°C to 43°C).

# Garage Ready

Designed to operate effectively in extreme ambient temperatures



Image 3: The Frigidaire Chest Deep Freezer positioned in a garage, highlighting its 'Garage Ready' feature for effective operation in varied temperatures.

## 3.3 Electrical Connection

- Plug the freezer into a dedicated, grounded 120V, 60Hz electrical outlet. Do not use extension cords or adapter plugs.
- Allow the freezer to stand upright for at least 2-4 hours before plugging it in to allow the refrigerant to settle.

## 4. OPERATING INSTRUCTIONS

### 4.1 Initial Power-On

- Once plugged in, the 'Power' indicator light (red) will illuminate, and the 'Operation' indicator light (green) will turn on when the compressor is running.
- Allow the freezer to cool for approximately 4 hours before placing food inside.

## 4.2 Adjusting Temperature

- The adjustable thermostat is located on the front of the unit.
- Turn the dial to your desired setting. '1' is the warmest setting, and '7' is the coldest. For general use, a setting between '3' and '5' is recommended.



Image 4: Close-up of the freezer's front control panel, showing the adjustable thermostat dial, green 'Operation' light, and red 'Power' light.

## 4.3 Interior Basket

- The freezer includes a removable vinyl-coated wire basket for organized storage of smaller or frequently accessed items.
- To remove, simply lift the basket upwards.



Image 5: Top-down view of the freezer's interior, showing the spacious compartment and the removable wire basket for convenient organization.

Video 1: A short video demonstrating the interior capacity and features of a small chest freezer, including the removable basket.

---

## 5. MAINTENANCE

### 5.1 Defrosting

- Manual defrosting is required when frost accumulation reaches approximately 0.25 inches (6 mm).
- To defrost, unplug the unit, remove all food, and open the lid. Place a shallow pan under the defrost drain plug located on the side of the unit to collect water.
- Once defrosted, clean and dry the interior thoroughly before plugging the unit back in and returning food.



Image 6: Side view of the freezer, highlighting the external defrost drain plug for easy water removal during manual defrosting.

## 5.2 Cleaning

- Clean the exterior with a mild detergent and a soft cloth. The vinyl-coated exterior is easy to wipe down.
- For the interior, use a solution of two tablespoons of baking soda to one quart of warm water. Rinse and dry thoroughly.

## 6. TROUBLESHOOTING

If your freezer is not operating correctly, check the following common issues before contacting customer support:

- **Freezer not running:** Check if the power cord is securely plugged into a live outlet. Ensure the circuit breaker has not tripped.
- **Temperature is not cold enough:** Verify the thermostat setting is appropriate. Avoid frequent door openings. Ensure the freezer is not overloaded.
- **Excessive noise:** Check if the freezer is level. Ensure there is enough space around the unit for proper air circulation.

For more detailed troubleshooting or persistent issues, please refer to the complete owner's manual or contact Frigidaire customer support.

## 7. SPECIFICATIONS

Feature	Specification
Model Number	EFRF2006COMAMZ
Capacity	2.0 Cu. Ft.
Dimensions (D x W x H)	18.3" x 20.9" x 23.6"
Item Weight	40 pounds
Color	Pearl White
Voltage	120 Volts
Wattage	300 watts
Installation Method	Freestanding
Included Components	FREEZER, Basket, Shelf, Owners Manual





Frigidaire is a pending or registered trademark of Electrolux Home Products and used under license from Electrolux Home Products, Inc.

Image 7: Diagram showing the dimensions of the Frigidaire 2.0 Cu. Ft. Chest Deep Freezer: 18.3 inches deep, 20.9 inches wide, and 23.6 inches high.

## 8. WARRANTY AND SUPPORT

### 8.1 Warranty Information

This Frigidaire Chest Deep Freezer comes with a 1-year parts and labor warranty. Please retain your proof of purchase for warranty claims.

### 8.2 Customer Support

For assistance, product registration, or to purchase accessories, please refer to the contact information provided in your owner's manual or visit the official Frigidaire website.



Image 8: Icon representing customer support services.

© 2025 Frigidaire. All rights reserved.