

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Ninja](#) /
- › [Ninja Crispi Pro 6-in-1 Glass Air Fryer AS101DG Instruction Manual](#)

Ninja AS101DG

Ninja Crispi Pro 6-in-1 Glass Air Fryer

Model: AS101DG

Brand: Ninja

INTRODUCTION

The Ninja Crispi Pro 6-in-1 Glass Air Fryer is a versatile 1800-watt countertop appliance designed for efficient and healthy cooking. Featuring CleanCrisp Glassware, this system allows for non-toxic cooking, serving, and storing. With multiple functions and precise temperature control, it simplifies meal preparation for individuals and families.



Image: The Ninja Crispi Pro 6-in-1 Glass Air Fryer shown with its main unit and two glass containers, one holding cooked food and the other empty with a crisper plate.

WHAT'S IN THE BOX

Your Ninja Crispi Pro package includes the following components:

- Ninja Crispi Pro Glass Countertop Air Fryer (Main Unit)
- 6-quart CleanCrisp Glassware
- 2.5-quart CleanCrisp Glassware
- Removable Modular Base
- 2 Crisper Plates
- 2 Leakproof Storage Lids
- Chef-Inspired Recipe Book



Image: An overview of the Ninja Crispi Pro components, including the main unit, two glass containers, crisper plates, and storage lids, laid out on a kitchen countertop.

PRODUCT FEATURES

Family-Sized Cooking System

Includes 6-quart and 2.5-quart glassware, storage lids, crisper plates, and a modular base to accommodate various meal sizes.



Image: The 6-quart CleanCrisp Glassware is shown with a whole roasted chicken and vegetables, demonstrating its family-sized capacity.

Powerful 1800-Watt Air Fryer

Capable of cooking a 7.5-lb chicken, serving up to 10 people, with efficient 1800-watt power.

Versatile Capacity with Modular Base

The modular base adjusts to fit 2.5-quart, 4-quart (sold separately), and 6-quart CleanCrisp Glassware for everyday meals or larger gatherings.



Meet the Ninja CRISPi® PRO

A countertop glass air fryer
that unlocks faster, crispier results*.

Image: A user demonstrates adjusting the modular base to accommodate various CleanCrisp Glassware sizes.

Nontoxic & Durable CleanCrisp Glassware

Designed for non-toxic cooking and storing, the glassware is thermal shock resistant, allowing it to go from frozen to crispy in minutes. It is also free from PFAS and PTFE.



Image: Three different sizes of CleanCrisp Glassware are displayed with various meals, emphasizing their non-toxic properties.

Customizable 6-in-1 Functions

Choose from Max Crisp, Air Fry, Bake/Proof, Roast, Recrisp, and Dehydrate for diverse cooking needs.

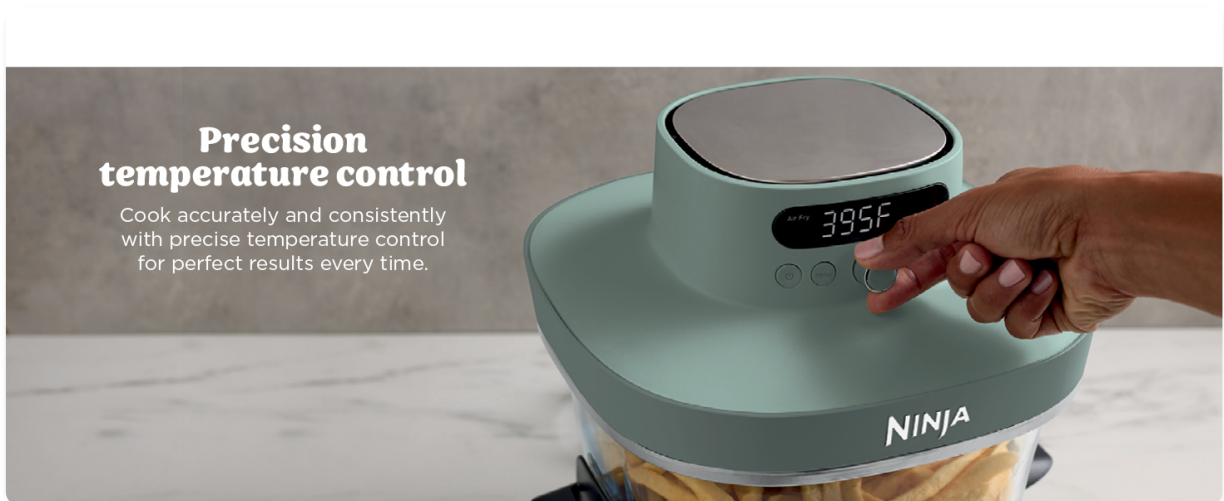


Image: A visual representation of the six cooking functions, showing different food items prepared using each mode.

Precise Temperature Control

Precise Temperature Control

Cook accurately and consistently with precise temperature control for perfect results every time, up to 450°F.



Easy to clean

CleanCrisp™ Glassware, crisper plates, and lids are dishwasher safe.

Image: A close-up of the control panel showing a hand adjusting the temperature setting.

Leakproof Storage Lids

Snap-lock lids keep meals fresh and prevent spills, ideal for prepping or storing leftovers directly in the glassware.

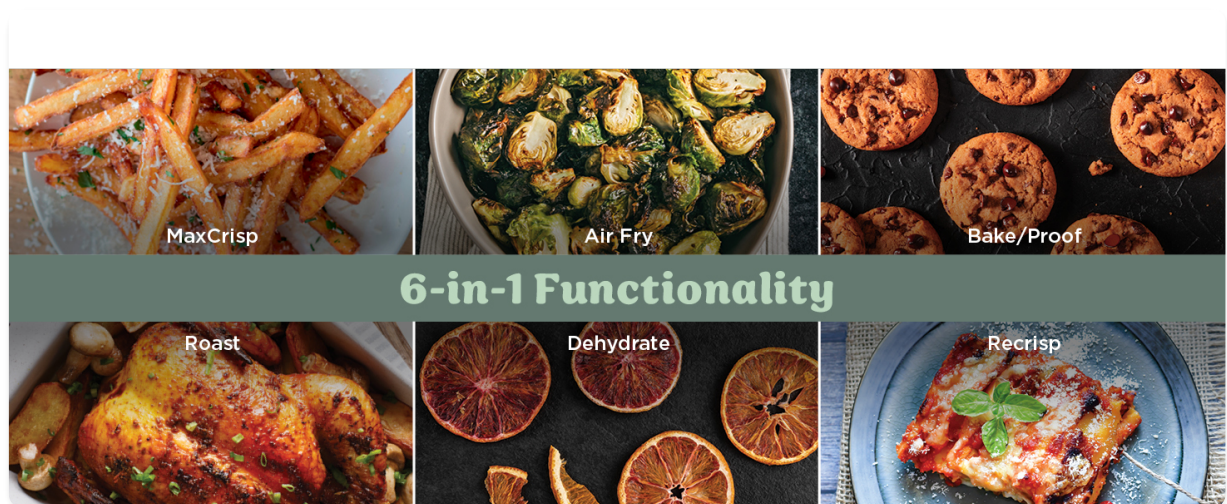


Image: A sequence of images illustrating the full cycle of food handling with the CleanCrisp Glassware: prep, cook, serve, store, and re crisp.

Fixed Heat Protection

Permanently fixed heat-safe feet allow you to safely place glassware on various countertop materials like granite, laminate, quartz, butcher block, and marble.



Image: A close-up of the CleanCrisp Glassware with cooked food, showing its heat-safe feet resting directly on a kitchen counter.

SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Clean:** Wash all glassware, crisper plates, and lids with warm, soapy water or place them in the dishwasher before first use. Wipe the main unit with a damp cloth.
3. **Placement:** Place the main unit on a clean, dry, and level surface. Ensure there is adequate space around the unit for proper ventilation.
4. **Assemble:** Place the desired CleanCrisp Glassware onto the modular base. If using the 6-quart glassware, ensure the modular base is in its extended position. For 2.5-quart glassware, the modular base should be in its compact position. Insert a crisper plate into the glassware if required for your recipe.
5. **Power:** Plug the main unit into a grounded electrical outlet.

OPERATING INSTRUCTIONS

The Ninja Crispi Pro features an intuitive control panel for easy operation. The unit offers 6 customizable functions:

1. **Control Panel:** The main unit features a digital display, a 'MODE' button to cycle through functions, '+' and '-' buttons to adjust time, and a 'START' button to begin cooking.
2. **Select Function:** Press the 'MODE' button to cycle through the available cooking functions: Max Crisp, Air Fry, Bake/Proof, Roast, Recrisp, and Dehydrate. The selected function will illuminate on the display.
3. **Adjust Time:** Use the '+' and '-' buttons to set your desired cooking time.
4. **Start Cooking:** Press the 'START' button to begin the cooking cycle. The unit will automatically preheat if necessary.

Cooking Functions & Temperature Ranges:

- **Max Crisp:** 425-450°F (Best for frozen favorites)
- **Air Fry:** 400-425°F (For crispiness and crunch)
- **Bake/Proof:** 375-400°F (Gentle heat for all your baked treats)
- **Roast:** 350-400°F (Best for large cuts of meat)
- **Recrisp:** 380-400°F (Revive your leftovers)
- **Dehydrate:** 105-195°F (For drying fruits, vegetables, and meats)

CLEANING AND MAINTENANCE

Proper cleaning and maintenance ensure the longevity and optimal performance of your Ninja Crispi Pro.

- **Glassware, Crisper Plates, and Lids:** All CleanCrisp Glassware, crisper plates, and storage lids are dishwasher safe for convenient cleaning. They can also be hand-washed with warm, soapy water.
- **Main Unit:** Wipe the main unit and heating element with a clean, damp cloth after each use. Do not immerse the main unit in water or any other liquid.
- **Cool Down:** Always allow the unit and accessories to cool completely before handling or cleaning.



Image: CleanCrisp Glassware, crisper plates, and lids are shown inside a dishwasher, illustrating their ease of cleaning.

TROUBLESHOOTING

- **Unit Not Turning On:** Ensure the power cord is securely plugged into a working electrical outlet. Check if the main unit is properly seated on the modular base and the glassware is correctly inserted.
- **Food Not Cooking Evenly:** Ensure not to overcrowd the glassware. For best results, cook food in a single layer or in batches. Shake or flip food halfway through the cooking cycle.
- **White Smoke from Unit:** This may occur if cooking high-fat foods. Ensure the glassware and crisper plate are clean and free of excess oil or food debris.
- **Food Not Crispy:** Ensure the crisper plate is used for air frying and max crisp functions. Do not overcrowd the basket. Increase cooking time or temperature slightly if needed.

SPECIFICATIONS

Special Feature	Automatic Shut-Off
Product Dimensions	11.8"D x 12.2"W x 11"H
Capacity	6 Quarts (with included glassware)
Material	Metal (main unit), Glass (containers)
Output Wattage	1800 Watts
Item Weight	11.4 Pounds
Voltage	120 Volts
Control Method	Push Button
Has Nonstick Coating	No

Is Dishwasher Safe	Yes (Glassware, Crisper Plates, Lids)
Max Temperature Setting	450 Degrees Fahrenheit

WARRANTY AND SUPPORT

Ninja products are manufactured to the highest quality standards. For warranty information, product registration, or customer support, please refer to the included documentation or visit the official Ninja website. Keep your purchase receipt as proof of purchase for warranty claims.