



Manuals.plus /

- › Casio /
- › Casio W220H Digital Watch User Manual

Casio W220H

Casio W220H Digital Watch User Manual

Model: W220H

INTRODUCTION

Thank you for choosing the Casio W220H Digital Watch. This manual provides detailed instructions on how to set up and operate your watch, ensuring you can utilize all its features effectively. Please read this manual carefully and keep it for future reference.



Image: Casio W220H digital watch with a black case and green accents, featuring a clear digital display and a comfortable resin strap.

FEATURES

- Casio Illuminator Model with a fully automatic LED backlight.
- Approximate 3-year battery life with the included CR1616 battery.
- 1/100-Second Stopwatch/Chronograph Functions.
- Daily Alarm and Hourly Time Signal Modes.
- 50-meter water resistance.
- Full Auto-Calendar (pre-programmed until the year 2099).

SETUP

Initial Time and Date Setting

Upon first use or after a battery change, you will need to set the current time and date. Refer to the specific button functions on your watch (typically marked 'Mode', 'Adjust', 'Search', 'Light') to navigate the settings. Generally, you will press the 'Adjust' button to enter setting mode, use 'Mode' to cycle through settings (seconds, hour, minute, year, month, day), and 'Search' or 'Light' to change values. Press 'Adjust' again to exit setting mode.

Time Zone Selection

Your watch may include a dual time feature. To set a second time zone, enter the Dual Time mode and follow similar adjustment procedures as for the main timekeeping mode.

OPERATING MODES

The Casio W220H features multiple operating modes accessible via the 'Mode' button. Pressing the 'Mode' button cycles through the following functions:

- **Timekeeping Mode:** Displays the current time, day of the week, and date.
- **Stopwatch Mode:** Measures elapsed time with 1/100-second accuracy. Features include split times and auto-repeat functionality.
- **Countdown Timer Mode:** Allows setting a countdown from 1 second up to 24 hours. Includes auto-repeat for interval training or recurring tasks.
- **Alarm Mode:** Set a daily alarm to sound at a specific time. The hourly time signal can also be activated in this mode.
- **Dual Time Mode:** Displays the time in a second time zone.

Using the Backlight (Illuminator)

Press the 'Light' button to illuminate the display for easy reading in low-light conditions. The watch also features an auto-backlight function that activates when you tilt your wrist towards your face. This feature automatically disables after approximately 3 hours to conserve battery life.

MAINTENANCE

Battery Replacement

The Casio W220H uses a CR1616 lithium battery, providing approximately 3 years of operation. When the display becomes dim or functions become erratic, it is time to replace the battery. Battery replacement should ideally be performed by a qualified technician to ensure proper sealing and water resistance.

Water Resistance (50 Meters)

Your watch is rated for 50-meter water resistance. This means it is suitable for everyday use, including splashes, rain, and brief immersion in water. It is *not* suitable for swimming, diving, or showering with hot water, as steam can penetrate the seals. Do not operate buttons while the watch is wet or submerged.

Cleaning

Wipe the watch case and band with a soft, dry cloth. For stubborn dirt, use a soft cloth dampened with water and a mild soap, then wipe dry. Avoid using chemical cleaners or solvents, as they may damage the watch's materials.

TROUBLESHOOTING

- **Blank Display:** The battery may be depleted. Replace the CR1616 battery.
- **Incorrect Time/Date:** Re-enter the time and date settings as described in the 'Setup' section. Ensure the correct AM/PM setting is selected.
- **Buttons Unresponsive:** The watch may be in a locked mode, or the battery is very low. Try pressing all buttons firmly. If the issue persists after a battery change, contact support.
- **Water Inside Display:** If condensation or water droplets appear inside the watch, stop using it immediately and have it inspected by a qualified technician. This indicates a breach in water resistance.

SPECIFICATIONS

Model Number	W220H-1A2V
Display Type	Digital
Movement Type	Quartz
Power Source	Battery Powered (CR1616)
Water Resistance Depth	50 Meters
Case Material	Resin
Case Diameter	36.6 Millimeters
Case Thickness	10.9 Millimeters
Band Material Type	Nylon (Two Piece Strap)
Clasp Type	Buckle
Approximate Battery Life	3 Years
Auto-Calendar	To Year 2099

WARRANTY AND SUPPORT

Your Casio W220H watch comes with a limited manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official Casio website.

For product support, service, or inquiries, please contact Casio customer service or visit the official Casio store online:

Visit the Official Casio Store

