

- [Manuals.plus](#) /
- › [AGXOV](#) /
 - › AGXOV D50/D28 128GB MP3 Player User Manual

AGXOV D50/D28

AGXOV D50/D28 128GB MP3 Player User Manual

Model: D50/D28

INTRODUCTION

Thank you for choosing the AGXOV D50/D28 MP3 Player. This device is designed to provide a versatile portable audio experience with features including 128GB built-in storage, Bluetooth 5.3 connectivity, FM radio, voice recording, and e-book functionality. This manual provides detailed instructions for setup, operation, and maintenance to ensure optimal performance.



The AGXOV D50/D28 MP3 Player, a compact and versatile portable audio device.

PACKAGE CONTENTS


Please verify that all items are present in your package:

- AGXOV D50/D28 MP3 Player x 1
- USB-C Cable x 1

- Wired Headphones x 1
- User Manual x 1

Package includes:

- ① User Manual
- ② MP3 Player
- ③ USB Cable
- ④ Earphones

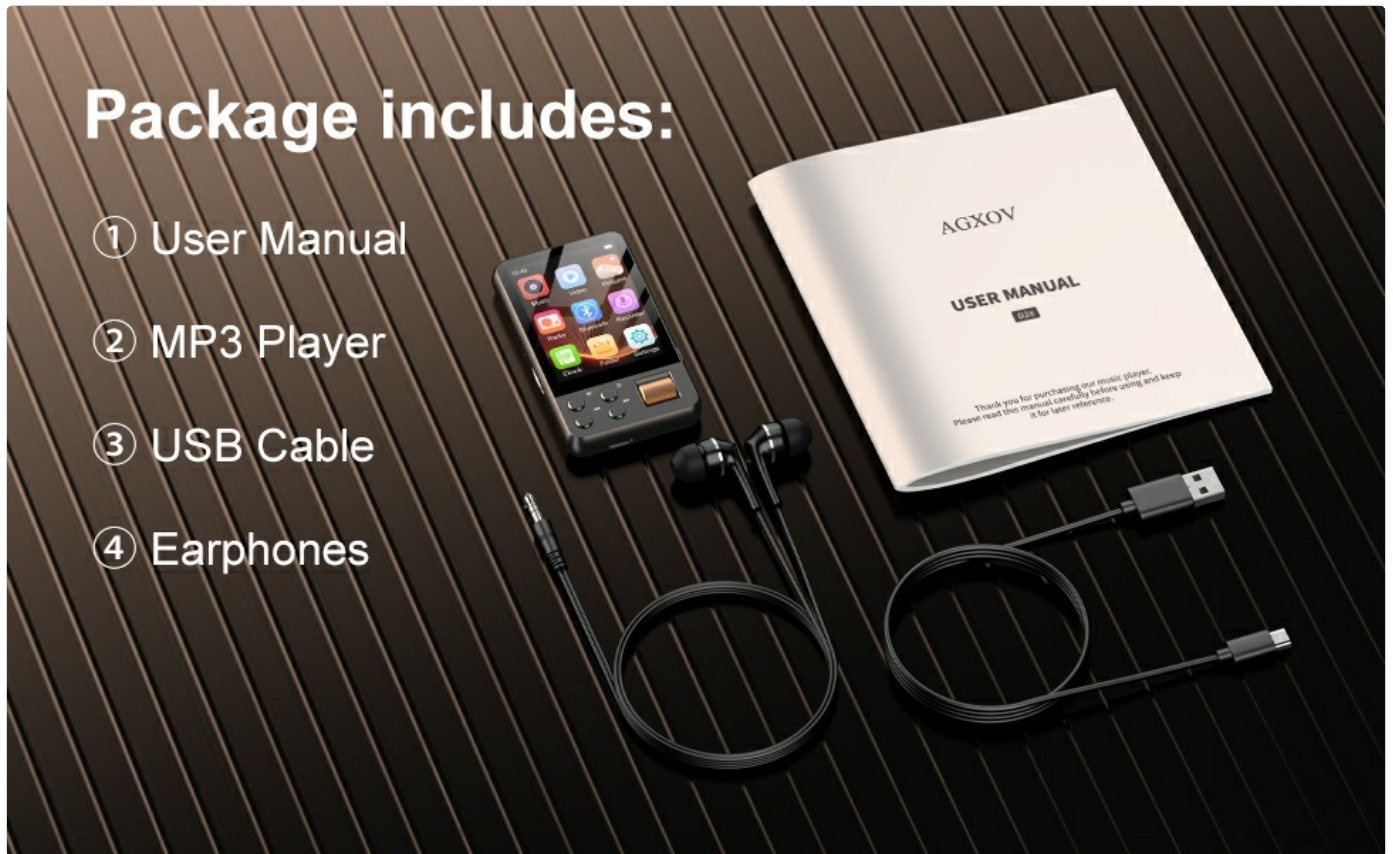

All components included in the AGXOV D50/D28 MP3 Player package.

PRODUCT OVERVIEW

The AGXOV D50/D28 MP3 Player features a compact design with both a touchscreen and physical buttons for intuitive control. Familiarize yourself with the device's layout:

Touchscreen + Buttons, More Control Freedom



The AGXOV D50/D28 MP3 Player features a combination of touchscreen and physical button controls, including a dedicated volume/scroll wheel.

Key Controls:

- **Touchscreen:** Navigate menus and select options.
- **Back Button:** Return to the previous screen or menu.
- **Play/Pause Button:** Control media playback.

- **Previous/Next Buttons:** Skip tracks or navigate through lists.
- **Volume/Scroll Wheel:** Adjust volume or scroll through content.

Playback Time



50H Music



6H Video



410mAh
Charging Battery



Step Counter



Music Player



Video Player



Stopwatch



FM Radio



E-Book Reader



The main interface of the AGXOV D50/D28 MP3 Player, showing available functions.

1. Charging the Device

Before first use, fully charge the MP3 player. Connect the included USB-C cable to the device's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status.

2. Transferring Files

To transfer music, videos, images, or e-books to the player:

1. Connect the MP3 player to your computer using the USB-C cable.
2. The device will appear as a removable disk or media device on your computer.
3. Drag and drop your desired files into the appropriate folders (e.g., 'Music', 'Video', 'Pictures', 'Ebook') on the player's internal storage.
4. Safely eject the device from your computer before disconnecting the cable.



Connecting the AGXOV D50/D28 MP3 Player to a computer for file transfer and charging.

3. Expanding Storage (Optional)

The player supports expandable storage via a TF (Micro SD) card up to 512GB. Insert the TF card into the designated slot until it clicks into place. Files on the TF card can be accessed through the 'Folder' application or directly within the respective media applications.

OPERATING INSTRUCTIONS

1. Power On/Off

- **Power On:** Press and hold the Power button until the screen lights up.
- **Power Off:** Press and hold the Power button, then select 'Power Off' on the screen.

2. Music Playback

1. From the main menu, tap the 'Music' icon.
2. Browse your music by Artist, Album, Songs, or Folders.
3. Tap a song to begin playback.
4. Use the physical buttons or touchscreen controls for Play/Pause, Next/Previous track, and volume adjustment via the scroll wheel.

HIFI Sound Quality

Supported music formats: MP3, WMA, APE, WAV, AAC



Experience high-fidelity audio with the AGXOV D50/D28 MP3 Player.

3. Bluetooth Pairing

The device supports Bluetooth 5.3 for wireless audio output.

1. From the main menu, tap the 'Bluetooth' icon or navigate to 'Settings' > 'Bluetooth'.
2. Turn on Bluetooth. The player will automatically search for nearby Bluetooth devices.
3. Select your desired Bluetooth headphones or speaker from the list to pair.

4. Once paired, audio will be routed wirelessly to the connected device.



Seamlessly connect your AGXOV D50/D28 MP3 Player to Bluetooth headphones or speakers.

4. FM Radio

To use the FM radio function, ensure wired headphones are connected, as they act as the antenna.

1. Connect the wired headphones to the 3.5mm audio jack.
2. From the main menu, tap the 'Radio' icon.
3. Use the on-screen controls to scan for stations, save favorites, or manually tune.

5. Voice Recorder

1. From the main menu, tap the 'Recorder' icon.
2. Tap the record button to start recording.
3. Tap the stop button to end the recording. Recordings are saved automatically.

6. E-Book Reader

1. From the main menu, tap the 'Ebook' icon.
2. Select an e-book file to open and read.
3. Use the touchscreen to turn pages.

7. Settings

Access the 'Settings' menu to customize various aspects of your player, including display brightness, language, date and time, sound equalizer, and system information.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid liquid cleaners or abrasive materials.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Water Resistance:** This device is not waterproof. Avoid exposure to water or high humidity.

TROUBLESHOOTING

Device Will Not Turn On

- Ensure the battery is charged. Connect the player to a power source for at least 30 minutes.
- Try performing a hard reset by pressing and holding the Power button for 10-15 seconds.

Cannot Transfer Files

- Check the USB-C cable connection. Try a different USB port or cable.
- Ensure the device is recognized by your computer. You may need to select 'File Transfer' mode on the player if prompted.

Bluetooth Connection Issues

- Ensure Bluetooth is enabled on both the player and the receiving device.
- Place the devices close to each other during pairing.
- If connection is unstable, try unpairing and re-pairing the devices.
- Some users have reported occasional stuttering with Bluetooth playback; ensure the player's firmware is up to date if available.

FM Radio Signal is Weak

- Ensure wired headphones are securely plugged into the 3.5mm audio jack, as they function as the antenna.
- Try moving to an open area or adjusting the position of the headphone cable to improve reception.

Screen Scratches Easily / Poor Viewing Angle

- Consider applying a screen protector to prevent scratches.
- The screen's viewing angles may vary; adjust the device's position for optimal visibility.

SPECIFICATIONS

Model Name	D50/D28
Brand	AGXOV
Memory Storage Capacity	128 GB (expandable up to 512GB via TF card)
Connectivity Technology	Bluetooth 5.3
Special Features	Built-In Speaker, FM Radio, Voice Recorder, E-Book Reader, HiFi Sound

Screen Size	1.77 Inches
Product Dimensions	0.4 x 1.6 x 3.6 inches
Item Weight	2.19 ounces
Batteries	1 A battery required (included)
Compatible Devices	Personal Computer, Smartphone, Speaker
Media Type	Micro SD

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase documentation or visit the official AGXOV website. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FPPXJ1NQ>

More documents and user manuals: <https://manuals.plus/>