

[Manuals.plus](#) /

› [ECONTROLLY](#) /

› ECONTROLLY Voice Replacement Remote Control User Manual for Tutu 4K Google TV Models

ECONTROLLY 32Q1, 24F1, TSG43, TSG24, TSG32, 43N1

ECONTROLLY Voice Replacement Remote Control User Manual

Compatible with Tutu 4K Google TV Models: 32Q1, 24F1, TSG43, TSG24, TSG32, 43N1

1. PRODUCT OVERVIEW

This manual provides instructions for the ECONTROLLY Voice Replacement Remote Control, designed for seamless operation with specified Tutu 4K Google TV models. It features voice control capabilities and dedicated buttons for popular streaming services.





Image 1.1: Front view of the ECONTROLLY Voice Replacement Remote Control, showing all buttons and the overall design.

2. SETUP

2.1 Package Contents

- 1 x ECONTROLLY Voice Replacement Remote Control

2.2 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two (2) AAA ALKALINE batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Note: Do not use rechargeable batteries. Batteries are not included with the remote control.

2.3 Pairing the Remote Control

This voice remote control requires pairing with your Tutu 4K Google TV before use. The pairing process may vary slightly depending on your specific TV model. Refer to your TV's user manual for detailed pairing instructions if the general steps below are unsuccessful.

1. Ensure your Tutu 4K Google TV is powered on.
2. Navigate to the TV's settings menu. This is typically done using your original TV remote or the physical buttons on the TV.
3. Look for options such as "Remotes & Accessories," "Bluetooth," or "Add Device."
4. Select the option to add a new device or pair a new remote control.
5. On the ECONTROLLY remote, press and hold the **Voice Assistant button** (usually a microphone icon) and the **Back button** simultaneously for a few seconds until an indicator light on the remote begins to flash.
6. Your TV should detect the new remote. Select it from the list of available devices on your TV screen to complete the pairing process.
7. Once paired, the indicator light on the remote will stop flashing, and you should be able to control your TV.

3. OPERATING INSTRUCTIONS

3.1 Basic Functions

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** Directly input channel numbers or other numerical data.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigate through menus and confirm selections.
- **Volume Up/Down (VOL +/-):** Adjust the TV's volume.
- **Channel Up/Down (CH +/-):** Change TV channels.
- **Mute Button:** Mutes or unmutes the TV audio.
- **Back Button:** Returns to the previous screen or menu.
- **Home Button:** Returns to the TV's home screen.
- **Menu Button:** Accesses the TV's main menu or settings.

3.2 Voice Control

The remote features a dedicated Voice Assistant button for voice commands.

1. Press and hold the **Voice Assistant button** (microphone icon).
2. Speak clearly into the microphone located at the top of the remote control.
3. Release the button once you have finished your command.

Examples of voice commands include: "Open Netflix," "Search for action movies," "What's the weather?" or "Turn up the volume."







Image 3.1: The remote control highlighting the voice assistant button and its functionality.

3.3 Dedicated App Buttons

The remote includes dedicated buttons for quick access to popular streaming applications:

- **NETFLIX:** Launches the Netflix application.
- **YouTube:** Launches the YouTube application.
- **'prime video':** Launches the Amazon Prime Video application.
- **USB:** Accesses content from a connected USB device.

4. MAINTENANCE

4.1 Battery Replacement

When the remote control's performance degrades or it stops responding, it is likely time to replace the batteries. Follow the battery installation steps in Section 2.2.

4.2 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote.

4.3 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

5. TROUBLESHOOTING

5.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are correctly inserted and are fresh AAA ALKALINE batteries. Replace if necessary.
- **Re-pair Remote:** If the remote was previously working, try re-pairing it with your TV following the steps in Section 2.3.
- **Obstructions:** Ensure there are no obstructions between the remote and the TV's IR receiver.
- **TV Compatibility:** Confirm your TV model is listed as compatible with this remote control.

5.2 Voice Commands Not Working

- **Pairing:** Ensure the remote is properly paired for voice functionality (see Section 2.3). Voice features often require a Bluetooth connection.
- **Microphone Obstruction:** Ensure the microphone hole on the remote is not blocked.
- **Speak Clearly:** Speak directly into the remote's microphone in a clear voice.
- **Internet Connection:** Voice commands often require an active internet connection on your Google TV.

5.3 Limited Range

- **Batteries:** Weak batteries can reduce the remote's effective range. Replace them.

- **Interference:** Other electronic devices might cause interference. Try moving closer to the TV.

6. SPECIFICATIONS

Brand	ECONTROLLY
Compatible Devices	Tutu 4K Google TV (Models: 32Q1, 24F1, TSG43, TSG24, TSG32, 43N1)
Special Feature	Voice Search
Color	Black
Product Dimensions	8.5 x 1.6 x 0.58 inches
Item Weight	2 ounces
Power Source	2 x AAA ALKALINE batteries (not included)



8.4 inch

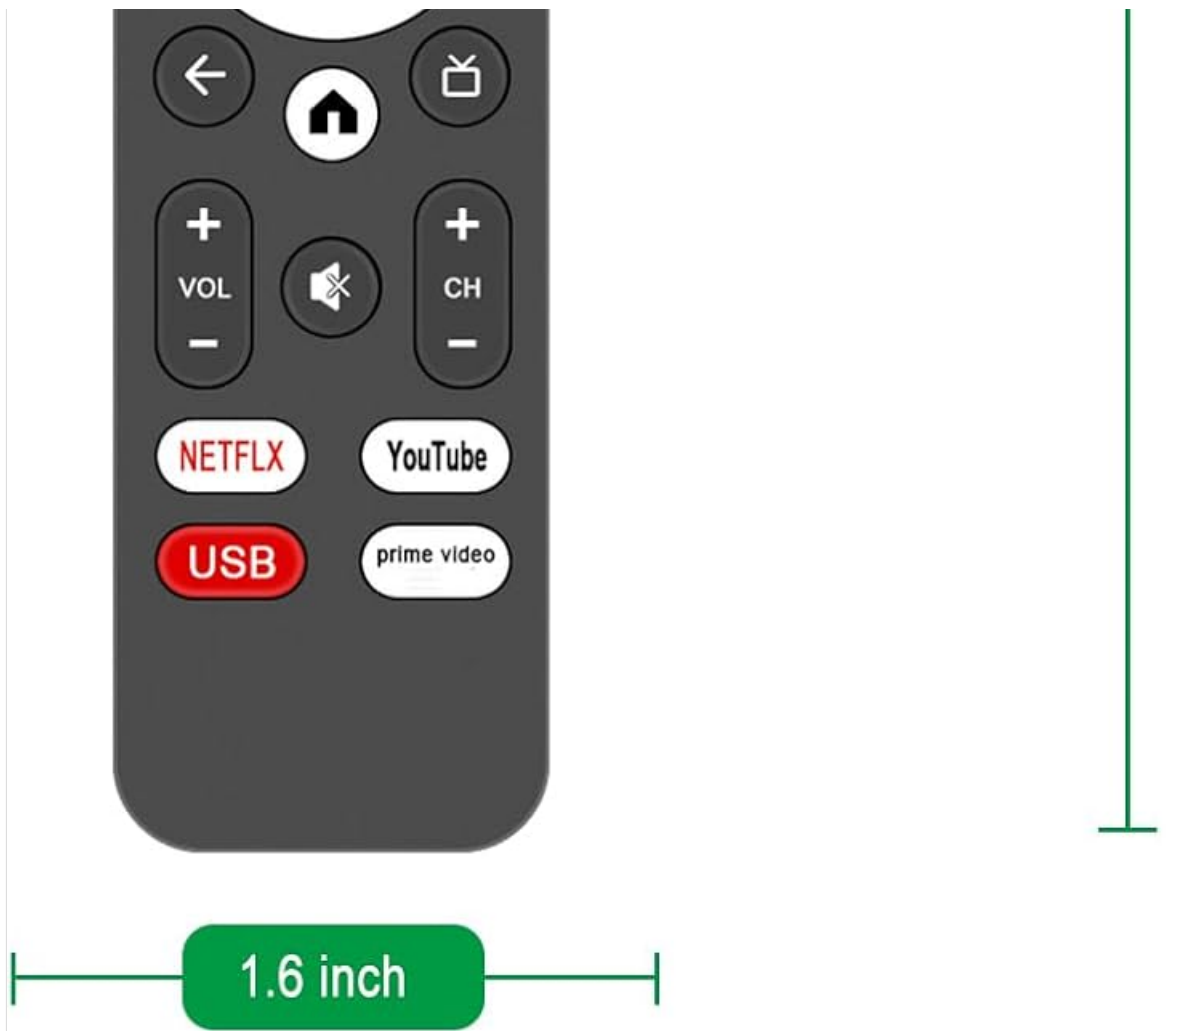


Image 6.1: Dimensions of the ECONTROLLY Voice Replacement Remote Control.

7. WARRANTY INFORMATION

This product may be covered by a limited manufacturer's warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the product packaging or contact the manufacturer directly. Keep your purchase receipt as proof of purchase.

8. SUPPORT

For further assistance, technical support, or inquiries not covered in this manual, please visit the ECONTROLLY official website or contact their customer service department. Contact information can typically be found on the product packaging or the manufacturer's website.