

ASHUAQI D9075

ASHUAQI D9075 30-inch Black 6-Light Modern Farmhouse Chandelier Instruction Manual

Model: D9075

INTRODUCTION

Thank you for choosing the ASHUAQI D9075 30-inch Black 6-Light Modern Farmhouse Chandelier. This manual provides detailed instructions for the safe and proper installation, operation, and maintenance of your new lighting fixture. Please read all instructions carefully before beginning installation and retain this manual for future reference.

SAFETY INFORMATION

- Always disconnect the power supply at the main circuit breaker before installation, cleaning, or maintenance.
- Consult a qualified, licensed electrician if you are not experienced with electrical wiring.
- Use only E12 base bulbs with a maximum wattage of 40W per bulb. Do not exceed the recommended wattage.
- Ensure all electrical connections are secure and properly insulated to prevent electrical shock.
- This fixture is designed for indoor use only.
- Handle glass and metal components with care to avoid damage or injury.

PACKAGE CONTENTS

Carefully unpack all components and ensure all parts are present and undamaged. If any parts are missing or damaged, do not attempt to assemble or install the fixture. Contact customer service for assistance.

- Chandelier Frame (1)
- Fabric Lampshades (6)
- Mounting Canopy (1)
- Hanging Chain (59 inches) (1)
- Mounting Hardware (screws, wire nuts, etc.)

SPECIFICATIONS

Feature	Detail
Brand	ASHUAQI
Model Number	D9075
Material	Metal (Frame), Fabric (Shades)
Color	Black (Frame), White (Shades)
Fixture Dimensions (L x W x H)	17"L x 17"W x 9.5"H (excluding chain)
Adjustable Height	Yes, via 59-inch chain
Light Source Type	Incandescent, LED, CFL, Halogen
Bulb Base	E12
Number of Lights	6
Max Wattage per Bulb	40W
Dimmable	Yes (with compatible bulbs and dimmer switch, not included)
Mounting Type	Ceiling Mount (Flat, Sloped, Vaulted ceilings)
Indoor/Outdoor Usage	Indoor
Assembly Required	Yes

Note: Bulbs are not included with this fixture.

SETUP (INSTALLATION)

Follow these steps carefully for proper installation. If you are unsure about any step, consult a qualified electrician.

1. Prepare for Installation:

- Turn off the electrical power at the main circuit breaker or fuse box.
- Unpack all components from the packaging and inspect them for any damage. Ensure all parts listed in the 'Package Contents' section are present.

2. Mounting the Canopy:

- Attach the mounting bracket to the electrical junction box in the ceiling using the provided screws.
- Connect the fixture's ground wire (usually bare copper or green) to the house ground wire.
- Connect the neutral (white) wire from the fixture to the neutral (white) wire from the junction box using a wire nut.
- Connect the live (black) wire from the fixture to the live (black) wire from the junction box using a wire nut.
- Carefully tuck all wires into the junction box.
- Secure the mounting canopy to the mounting bracket with the provided screws.

3. Assembling the Chandelier Frame and Adjusting Height:

- Assemble the metal frame components according to the detailed diagrams provided in the separate assembly sheet.
- Attach the hanging chain to the chandelier frame and then to the mounting canopy. The 59-inch chain includes two detachable buckles, allowing you to adjust the hanging height to suit your space.

4. Attaching Lampshades and Bulbs:

- Carefully install each of the six fabric lampshades onto their respective lamp holders.
- Screw E12 base bulbs (max 40W, not included) into each of the six sockets.

5. Final Check:

- Ensure all connections are secure and the fixture is stable and level.
- Restore power at the main circuit breaker.

PRODUCT DETAIL

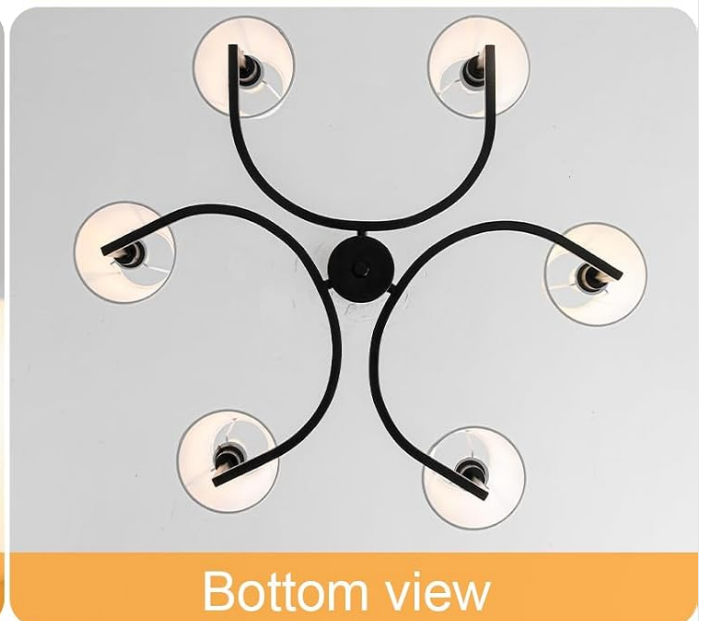


Image: Chandelier dimensions and compatibility with various ceiling types, including flat, sloped, and vaulted ceilings.



Image: Detailed views of the chandelier's components, including the adjustable chain mechanism, the sturdy metal frame, the white fabric lampshade, and a bottom-up perspective of the light sockets.

OPERATING INSTRUCTIONS

Your ASHUAQI D9075 Chandelier is designed for simple operation.

- **Power On/Off:** Use your standard wall switch to turn the chandelier on or off.
- **Dimming Function:** This chandelier is dimmable. To utilize the dimming feature, you must install dimmable E12 base bulbs and connect the fixture to a compatible dimmer switch (both sold separately).



Compatible with all E12 base bulbs Max 40W
(Bulbs Not Included)



Image: Illustration of various E12 base bulb types (incandescent, LED, CFL, halogen) that are compatible with the chandelier, emphasizing a maximum of 40W per bulb and that bulbs are not included.

MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your chandelier.

- **Cleaning:** Dust the chandelier regularly with a soft, dry, lint-free cloth. For more thorough cleaning, ensure the power is off. Gently wipe metal surfaces with a slightly damp cloth, then immediately dry with a clean, dry cloth. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish.
- **Bulb Replacement:** Always turn off the power at the circuit breaker before replacing bulbs. Allow old bulbs to cool completely before touching them. Replace with E12 base bulbs, ensuring they do not exceed the maximum 40W rating.

TROUBLESHOOTING

If you encounter any issues with your chandelier, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Light does not turn on	1. Power is off at the circuit breaker. 2. Bulbs are loose or burnt out. 3. Loose wiring connection.	1. Check the circuit breaker and ensure power is on. 2. Tighten or replace bulbs. 3. Turn off power, then check and secure all wire connections.
Lights flicker	1. Loose bulbs. 2. Incompatible dimmer switch or bulbs. 3. Loose wiring connection.	1. Ensure all bulbs are screwed in tightly. 2. Verify dimmer switch and bulbs are compatible and correctly installed. 3. Turn off power, then check and secure all wire connections.
Chandelier is unstable or hangs crooked	1. Mounting bracket not securely fastened. 2. Canopy not tightly secured. 3. Chain not properly adjusted.	1. Turn off power and ensure the mounting bracket is firmly attached to the junction box. 2. Tighten the canopy screws. 3. Adjust the chain length evenly.

WARRANTY AND SUPPORT

This ASHUAQI product is covered by the manufacturer's warranty. Please refer to the specific warranty information included with your purchase for details regarding coverage, terms, and conditions.

For technical assistance, replacement parts, or any questions not addressed in this manual, please contact ASHUAQI customer service through the retailer where the product was purchased or visit the official ASHUAQI website for support contact information.

PRODUCT APPLICATION EXAMPLES

The ASHUAQI D9075 Chandelier is versatile and suitable for various indoor settings, enhancing the aesthetic of your home.



Living Room: The chandelier provides ambient lighting in a contemporary living space.



Kitchen Island: Illuminating a kitchen island, complementing modern kitchen decor.



Dining Nook: Providing focused lighting over a dining area.



Foyer/Entryway: A welcoming centerpiece in an entryway or foyer.

© 2026 ASHUAQI. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

