

[Manuals.plus](#) /

› [WOLFBOX](#) /

› WOLFBOX MF200 Electric Air Duster User Manual

WOLFBOX MF200

WOLFBOX MF200 Electric Air Duster User Manual

Model: MF200

1. INTRODUCTION

Thank you for purchasing the WOLFBOX MF200 Electric Air Duster. This cordless, high-performance device is designed for efficient cleaning and drying across various applications, from delicate electronics to car detailing. With its powerful airflow, detachable battery, and versatile nozzles, the MF200 offers a convenient and eco-friendly alternative to traditional compressed air cans. Please read this manual thoroughly before use to ensure safe and optimal operation.



Figure 1: WOLFBOX MF200 Electric Air Duster in use, demonstrating its powerful airflow for car cleaning.

2. PRODUCT OVERVIEW

2.1 Package Contents

The WOLFBOX MF200 package includes the following items:

- Main Unit (WOLFBOX MF200 Electric Air Duster)
- Soft Brush
- Hard Brush
- Universal Nozzle
- Airbed Inflation Nozzle
- Charging Cable (Type-C)
- Flat Diffusion Nozzle

- Extended Slim Nozzle
- User Manual
- Storage Bag

WOLFBOX

エアダスター 製品一覧

				
	MF200	MF70	MF60	MF50
最大風速	88m/s	75m/s	75m/s	75m/s
バッテリー種類	バッテリー交換可能	バッテリー不可	バッテリー不可	バッテリー不可
バッテリー容量	6000mAh	6000mAh	5000mAh	5000mAh
最大連続使用時間	100min	300min	240min	240min
ノズル	4つのノズル +2つのブラシ	5つのノズル	5つのノズル	4つのノズル
フル充電時間	2.5H	3.5H	3H	3H
重さ (本体)	380g	233g	227g	205g
メーカー保証	2年間の メーカー保証	2年間の メーカー保証	2年間の メーカー保証	2年間の メーカー保証

Figure 2: Contents of the WOLFBOX MF200 package.

2.2 Key Features

- **Powerful Airflow:** Max wind speed of 88m/s for effective cleaning.
- **3-Stage Air Volume Adjustment:** Choose from Eco (18m/s), Strong (38m/s), and Storm (88m/s) modes.
- **Detachable Battery:** Industry-first detachable 6000mAh (3000mAh x 2) battery for extended use and easy replacement.

- **Long Battery Life:** Up to 100 minutes of continuous use in Eco mode.
- **4-Way Charging:** Supports various charging methods via Type-C port.
- **Fast Charging:** Approximately 2.5 hours for a full charge.
- **Versatile Nozzles & Brushes:** Includes 4 nozzles and 2 brushes for diverse cleaning tasks.
- **Compact & Lightweight:** Weighs only 380g for easy portability and single-handed operation.
- **Eco-Friendly Design:** Rechargeable and durable, reducing waste from disposable cans.
- **Advanced Protection:** Built-in overcurrent, overload, and over-temperature protection for safe operation.

エアダスター業界初! 交換式バッテリーを採用

バッテリー交換で、
さらに長時間使える



電池が劣化しても、本体は
そのまま
使い続け
られる



バッテリー交換可能
予備バッテリーは別売りです



Figure 3: Compact design and weight of the MF200.

3段階調節可能

6000mAhの大容量バッテリーで、最大100分の連続使用!



日常モード:

18m/s

連続使用時間: 約**100**分



強力モード:

38m/s

連続使用時間: 約**20**分



暴風モード:

88m/s

連続使用時間: 約**10**分



Figure 4: Four types of nozzles for various applications.

一台多役

4つのノズル付き



長細充填ノズル

浮き輪などの空気入れが一瞬!
わずか数秒でフル充填



大口径ノズル

洗車後の水滴も、冬の積雪も
一気に吹き飛ばそう!



多目的清掃ノズル

フィルターの清掃やマット
の砂飛ばしなどに大活躍!



隙間ノズル

窓サッシの清掃、
車内シートの隙間、など大活躍!



Figure 5: Soft and hard brushes for detailed cleaning.

3. SETUP

3.1 Battery Installation and Charging

1. Ensure the device is powered off before handling the battery.
2. To install the battery, align the battery pack with the slot at the bottom of the main unit and push until it clicks into place.
3. To remove the battery, press the release button (if present) and pull the battery pack out.
4. Connect the provided Type-C charging cable to the charging port on the battery pack or the main unit.

5. Connect the other end of the cable to a compatible USB power adapter (not included).
6. The battery indicator lights will show the charging status. A full charge takes approximately 2.5 hours.



Figure 6: Detachable battery for convenience. Spare batteries are sold separately.

3.2 Attaching Nozzles and Brushes

1. Select the appropriate nozzle or brush for your cleaning task.
2. Align the chosen attachment with the air outlet of the main unit.
3. Push and twist the attachment gently until it is securely fastened. Ensure it is firmly attached to prevent it from detaching during operation.
4. To remove, twist and pull the attachment off.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off and Wind Speed Adjustment

1. **Power On:** Press and hold the power button for a few seconds until the device starts.
2. **Adjust Wind Speed:** Briefly press the power button to cycle through the three wind speed modes: Eco (18m/s), Strong (38m/s), and Storm (88m/s).
3. **Power Off:** Press and hold the power button again until the device shuts down.

コンパクト設計

重さ:

380g



サイズ:



Figure 7: Three adjustable wind speed modes and their approximate continuous use times.

4.2 Usage Applications

- **Electronics Cleaning:** Use the soft brush and Eco mode for delicate items like camera lenses. The hard brush and a low-to-medium setting are ideal for keyboards and PC interiors.
- **Car Detailing:** The powerful Storm mode is excellent for drying water from crevices after car washing or blowing away dust from car interiors and seat gaps.
- **Household Cleaning:** Effectively remove dust from hard-to-reach areas like window sills, tatami mat gaps, and air conditioner filters.
- **Outdoor Activities:** Use the airbed inflation nozzle for quick inflation of air mattresses or the powerful airflow for starting campfires.

WOLFBOX

MF200エアダスター

コンパクトで MAX の爆風



 バッテリー交換可能	 88m/s最大風量	 3段階調節可能
 最大100min使用時間	 380g超軽量	 一台多役

Figure 8: Drying a car windshield with the MF200.

キャンプ後は爆風エアダスターで 掃かずに「吹く」



キャンプ後
ゴミや砂の掃除が手間



エアダスターで解決
ひと吹きでスッキリ

Figure 9: Car drying after washing.

2つのブラシ付き

細かな場所や狭いすき間までしっかり清掃できます。



ソフトブラシ

細かい箇所の
表面ホコリを払う



ハードブラシ

狭いすき間の
ゴミをかき出す

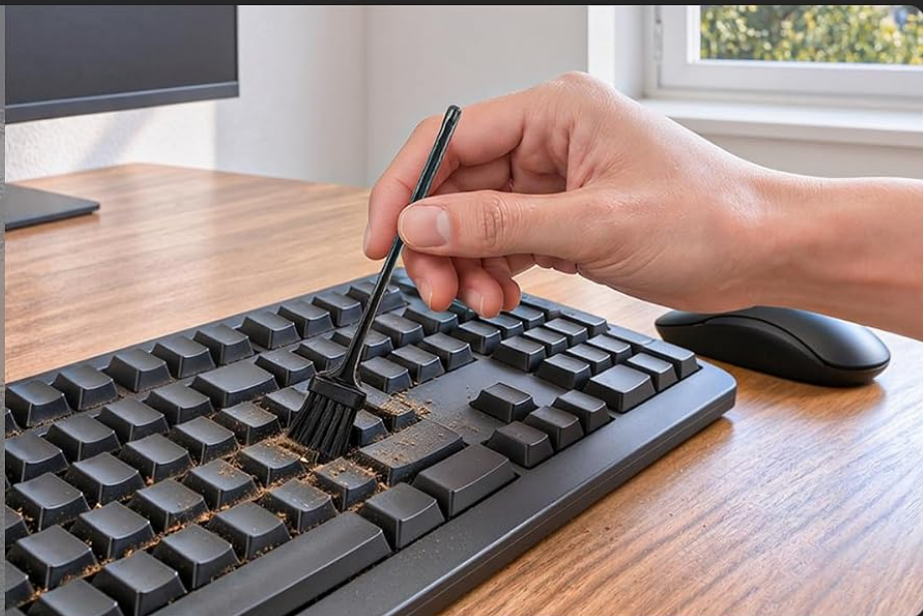


Figure 10: Cleaning floor gaps with the MF200.

拭きにくい隙間の残水も 爆風でラクラク吹き飛ばす



昔は畳のすき間
に入り込んだホコリは、
掃除しにくい



エアダスターなら
爆風で簡単一掃

Figure 11: Cleaning after camping.

5. MAINTENANCE

5.1 Cleaning the Device

- Ensure the device is powered off and disconnected from any power source before cleaning.
- Wipe the exterior of the air duster with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Periodically check the air intake and outlet for any obstructions and clear them carefully.
- Clean nozzles and brushes with water if necessary, ensuring they are completely dry before reattaching.

5.2 Battery Care

- Store the battery in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid fully discharging the battery frequently to prolong its lifespan.
- If storing for an extended period, charge the battery to approximately 50-70% capacity.
- The MF200 battery is designed for durability, maintaining high capacity even after many charge cycles.

MF200エアダスター

同梱物一覧



本体



ソフトブラシ
ハードブラシ




汎用丸型
ノズル



エアベッド用インフ
レーションノズル



充電ケーブル

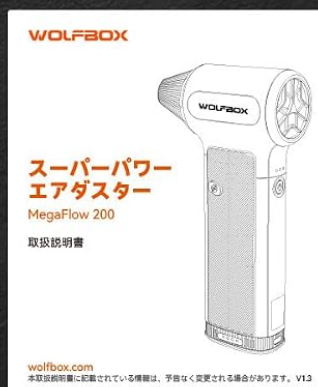

取扱説明書



収納バッグ



平面拡散
ノズル



延長用スリム
ノズル

Figure 12: Durable battery and motor performance.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted or not properly installed.	Charge the battery. Ensure the battery is securely installed.
Weak airflow.	Low battery. Obstruction in air intake/outlet. Incorrect mode selected.	Charge the battery. Clear any obstructions. Switch to a higher wind speed mode.
Nozzle detaches during use.	Nozzle not securely attached.	Ensure the nozzle is twisted firmly into place.
Device overheats.	Prolonged use at high power. Blocked air vents.	Allow the device to cool down. Ensure air vents are clear. The device has built-in over-temperature protection.

If you encounter any issues not listed here or if the problem persists, please contact WOLFBOX customer support for assistance.

7. SPECIFICATIONS

Feature	Detail
Brand	WOLFBOX
Model Number	MF200 (BLFS-MF200-HB)
Max Wind Speed	88 m/s
Wind Speed Adjustment	3 Stages (Eco, Strong, Storm)
Battery Type	Detachable Lithium-ion
Battery Capacity	6000mAh (3000mAh x 2) / 22.2Wh
Max Continuous Use Time	Approx. 100 minutes (Eco mode)
Charging Time	Approx. 2.5 hours
Weight	380g
Country of Origin	China
Warranty	2-year manufacturer warranty

バッテリーアップグレードで、 より長く使える



過電流
保護



過負荷
保護



過温度
保護

高性能バッテリーの採用により、連続使用時でも風量自動コントロール機能が安定作動。
内部の過熱をしっかり防ぎながら、最大風量を常にキープします。

Figure 13: WOLFBOX Air Duster Product Lineup Comparison.

8. WARRANTY AND SUPPORT

WOLFBOX stands behind the quality of its products. The MF200 Electric Air Duster comes with a **24-month manufacturer warranty** from the date of purchase.

- In case of a confirmed defect within 24 months, WOLFBOX offers a new product exchange instead of repair.
- Registering as a WOLFBOX member extends the warranty period by an additional 6 months, for a total of up to 30 months.
- Japanese language support is available for any questions or concerns regarding the product or its usage.

How to claim warranty: Navigate to the product page, find the seller information (usually "Sold by [Seller Name]"), and send a message or inquiry.

同じエアダスターでも、 中身は全然違う

価格重視のメーカー

WOLFBOX が選ぶ道



安価な部品
でコストを削減



耐久性を重視
した部材を厳選



最低限の
出荷検査のみ



一台ごとに厳しい
品質検査を実施



短期間の
使用を想定



長期間の連続使用
に耐える設計



保証やサポ
ートが手薄



2 年間の保証
付きで安心

創業から一貫して、「**安さより品質**」を貫いてきました。
目先のコストよりも、長く使っていただける製品づくりを大切にしています。

Figure 14: WOLFBOX Warranty and Support Details.

Important Notice: Beware of Imitations

Please be aware that imitation and counterfeit WOLFBOX products are circulating in the market. These products are not guaranteed for quality or safety and may lead to unexpected problems or accidents. To ensure your safety and satisfaction, always choose genuine WOLFBOX products.

ご購入後も安心

最大
30
ヶ月

24ヶ月 + 6ヶ月
製品保証 延長保証

会員限定

ご購入日より24ヶ月以内に不具合が確認された場合、
新商品への交換または修理など、状況に応じて適切に対応いたします。
さらにWOLFBOX会員にご登録いただくと保証期間が6ヶ月延長され、
最長30ヶ月まで安心してご使用いただけます。



日本語対応のサポート

製品やお届けに関するご不明点がございましたら、
サポート窓口までお気軽にお問い合わせください。



WOLFBOX

すべての対象製品(エアダスター・空気入れ・
ジャンプスターターなど)は、
日本の電気用品安全法 (PSE) の基準をクリアしています。

Figure 15: Warning against imitation products.

© 2026 WOLFBOX. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FPQ7GT1J>

More documents and user manuals: **<https://manuals.plus/>**