

[Manuals.plus](#) /

› [FLEXISPOT](#) /

› FLEXISPOT SK2 Electric Standing Desk User Manual

## FLEXISPOT SK2W

# FLEXISPOT SK2 Electric Standing Desk User Manual

Model: SK2W

## INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your FLEXISPOT SK2 Electric Standing Desk. Please read this manual thoroughly before use to ensure proper function, safety, and longevity of the product. Keep this manual for future reference.

The FLEXISPOT SK2 is an electric standing desk designed for versatility, offering adjustable height and a tiltable tabletop. Its compact design makes it suitable for various environments, including children's rooms and home offices.

## SAFETY INSTRUCTIONS

- Ensure all components are securely fastened before operating the desk.
- Keep children and pets away from the desk during height adjustment to prevent injury.
- Do not place more than the maximum load capacity (50kg) on the desk.
- Avoid placing liquids directly on the control panel or near electrical components.
- In case of malfunction or unusual noise, immediately unplug the desk and contact customer support.
- The desk features an anti-collision system. If an obstacle is detected during movement, the desk will stop and reverse slightly. Do not interfere with this mechanism.
- The control panel includes a child lock function. Activate it to prevent accidental adjustments by children.

## PACKAGE CONTENTS

Verify that all parts are present and undamaged before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Desk Frame (Legs and Crossbar)
- Tabletop (110x52cm)
- Control Panel with LED Display
- Power Adapter and Cable
- Assembly Hardware (Screws, Allen Wrenches, etc.)
- Instruction Manual
- Power Strip (Included component as per specifications)

## SETUP AND ASSEMBLY

Assembly requires two adults due to the weight of the components. Follow the steps below carefully.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, clean surface to prevent scratches.
2. **Assemble Desk Frame:** Attach the desk legs to the crossbar using the provided screws and tools. Ensure all connections are tight.
3. **Attach Tabletop:** Place the tabletop upside down on the soft surface. Carefully align the assembled desk frame with the pre-drilled holes on the tabletop. Secure the tabletop to the frame with the designated screws.
4. **Install Control Panel:** Mount the control panel to the underside of the tabletop in the designated area. Connect the control panel cable to the motor.
5. **Connect Power:** Connect the power adapter to the desk and then plug it into a wall outlet.
6. **Initial Calibration:** After connecting power, the desk may require an initial calibration. Press and hold the 'Down' button until the desk reaches its lowest point, then release. Press and hold 'Down' again until the desk moves slightly down, then up, and stops. This indicates successful calibration.



**Image:** Detailed dimensions of the FLEXISPOT SK2 Electric Standing Desk, showing overall width, depth, and adjustable height range from 585mm to 905mm. The main tabletop measures 1103mm x 520mm, and the smaller fixed section is 750mm x 250mm.

## OPERATING INSTRUCTIONS

### Height Adjustment

The desk's height can be adjusted electrically from 58.5 cm to 90.5 cm.

- Press the **Up (^)** button to raise the desk.
- Press the **Down (v)** button to lower the desk.
- Release the button at your desired height.



**Image:** Close-up of the FLEXISPOT SK2 control panel, showing buttons for up/down adjustment, three memory presets (1, 2, 3), and a child lock button (M).



**Image:** Illustration demonstrating the height adjustment range of the FLEXISPOT SK2 desk, showing two children of different heights comfortably using the desk in both sitting and standing positions. The height range is indicated as 585-905mm.

### Memory Presets

The desk allows you to save up to three preferred height settings.

1. Adjust the desk to your desired height.
2. Press the **"M"** button. The LED display will show "S-".
3. Immediately press one of the number buttons (**"1"**, **"2"**, or **"3"**) to save the current height to that preset. The display will show "S-1", "S-2", or "S-3" to confirm.
4. To recall a saved height, simply press the corresponding number button (**"1"**, **"2"**, or **"3"**). The desk will automatically move to the saved position.

### Tabletop Tilt Function

- The main section of the tabletop can be tilted from 0° to 40° for ergonomic comfort during activities like reading or drawing.
- To tilt the tabletop, locate the adjustment mechanism on the underside of the main tabletop section.
  - Release the locking mechanism (usually a lever or knob).
  - Adjust the tabletop to the desired angle (0-40°).
  - Secure the locking mechanism to fix the tabletop in place.



**Image:** The FLEXISPOT SK2 desk with its main tabletop section tilted to 40 degrees, illustrating how it can be used for reading or drawing. A close-up inset shows the one-touch tilt mechanism.

Child Lock Function

To prevent accidental adjustments, activate the child lock.

- Press and hold the **"M"** button for approximately 5 seconds until "LOC" appears on the LED display. The control panel is now locked.
- To unlock, press and hold the **"M"** button again for approximately 5 seconds until "LOC" disappears.

Additional Features

The FLEXISPOT SK2 desk incorporates thoughtful design elements for enhanced usability and safety.

- **Headphone Hook:** A convenient hook is integrated into the desk frame, allowing you to hang headphones or bags, keeping your workspace tidy.
- **Stable Base Design:** The desk features a robust and stable base with rounded edges, designed to prevent accidental bumps and ensure safety, especially for children.



**Image:** Close-up views of the FLEXISPOT SK2 desk highlighting key features: a headphone hook on the side, the stable and rounded base design, and the control panel for height adjustment and memory presets.

MAINTENANCE

- **Cleaning:** Wipe the desk surface with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that may damage the finish. The high-quality wood board is designed to be scratch and stain-resistant, making it easy to clean.
- **Inspection:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Cable Management:** Ensure power cables are neatly organized and not pinched or tangled to prevent damage.
- **Load Capacity:** Do not exceed the maximum load capacity of 50kg to prevent damage to the motor and frame.



**Image:** An illustration showing the FLEXISPOT SK2 desk's robust design and its load capacity of 50kg, ensuring stability for various items.

TROUBLESHOOTING

| Problem             | Possible Cause                                               | Solution                                                                                                            |
|---------------------|--------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------|
| Desk does not move. | Power cable disconnected, child lock active, motor overload. | Check power connection. Deactivate child lock. Unplug for 10 minutes, then plug back in. Reduce load if overloaded. |

| Problem                                     | Possible Cause                               | Solution                                                                                                                                                                           |
|---------------------------------------------|----------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Desk moves unevenly or makes unusual noise. | Loose connections, uneven load, obstruction. | Check and tighten all screws. Redistribute weight evenly. Check for obstructions under the desk. Perform calibration.                                                              |
| LED display shows an error code.            | Specific error condition.                    | Refer to the specific error code in the full manual (if available) or contact customer support with the error code. Often, unplugging and replugging can resolve temporary errors. |
| Anti-collision system frequently activates. | Obstruction in the path of movement.         | Ensure there are no objects under or above the desk that could interfere with its movement.                                                                                        |

## SPECIFICATIONS

- Brand:** FLEXISPOT
- Model:** SK2W
- Type:** Electric Standing Desk
- Tabletop Dimensions:** 110 cm (Width) x 52 cm (Depth)
- Adjustable Height Range:** 58.5 cm - 90.5 cm
- Tabletop Tilt Angle:** 0° - 40°
- Load Capacity:** 50 kg
- Weight:** Approximately 25 kg
- Color:** White
- Base Material:** Wood
- Features:** Electric height adjustment, height memory presets, tabletop tilt, child lock, anti-collision system, LED display.
- Included Components:** Power strip
- GTIN:** 840460482646

## WARRANTY AND SUPPORT

FLEXISPOT offers a manufacturer's free long-term warranty for this product. During the warranty period, there are no limits on the number of support responses, ensuring peace of mind.

For any inquiries, technical assistance, or warranty claims, please contact FLEXISPOT customer support. A dedicated support system is available in Japan, with Japanese-speaking staff to assist you.

Please visit the official FLEXISPOT website or refer to your purchase documentation for the most up-to-date contact information and warranty details.

**Online Support:** [www.flexispot.jp/support](http://www.flexispot.jp/support) (Example link, please verify official support page)

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**