

[Manuals.plus](#) /

› [AGARO](#) /

› AGARO Regal Jump Starter and Tyre Inflator User Manual

AGARO 34408

AGARO Regal Jump Starter and Tyre Inflator

Model: 34408


INTRODUCTION

Thank you for choosing the AGARO Regal Jump Starter and Tyre Inflator. This 2-in-1 device is designed to provide reliable emergency jump-starting for 12V vehicles and fast tyre inflation up to 150 PSI. It also functions as a power bank and features an LED light. Please read this manual thoroughly before use to ensure safe and optimal operation.

What's in The Box



Main Unit

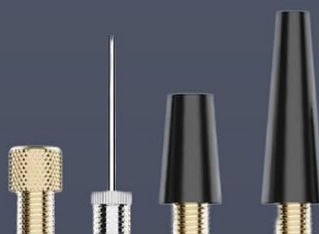

Air Valves



Type-C Cable



Detachable Air Hose



Manual



Jumper Cables with Plug

Image: The AGARO Regal device showcasing its four main functions: Jump Starter, Inflator, Power Bank, and Flashlight.

SAFETY INFORMATION

Always observe the following safety precautions to prevent injury or damage to the device and vehicle:

- Read all instructions before using the product.
- Do not operate the device if it is damaged.
- Keep out of reach of children.
- Ensure proper ventilation during use.
- Do not expose the device to water or extreme temperatures.
- Always connect the jumper cables correctly: red to positive (+), black to negative (-).
- Avoid short-circuiting the jumper clamps.
- Do not attempt to jump-start a frozen battery.
- Remove jumper cables within 30 seconds after the vehicle starts.

- Ensure the device has at least 75% charge before attempting a jump start.



Image: Illustration of the smart battery clips and the 8 types of safety protection integrated into the AGARO Regal device, including short-circuit, reverse connection, low-voltage, over-discharge, over-current, over-voltage, over-temperature, and over-charge protection.

PACKAGE CONTENTS

Verify that all items are present in the package:

- AGARO Regal Main Unit
- Detachable Air Hose
- Jumper Cables with Plug
- Type-C Cable (for charging the device)
- Multiple Air Valves (for various inflatables)
- User Manual

4-in-1 Versatile & Compact



Image: A visual representation of all components included in the AGARO Regal package: the main unit, air valves, Type-C cable, detachable air hose, jumper cables with plug, and the user manual.

PRODUCT OVERVIEW

The AGARO Regal is a versatile device combining a jump starter, tyre inflator, power bank, and LED flashlight. It features a digital display for pressure readings and battery status.

Key Features:

- **Jump Starter:** Safely starts 12V vehicles (cars, SUVs, bikes) with up to 3.5L petrol engines or 2L diesel engines. Peak current of 800A.
- **Tyre Inflator:** Inflates up to 150 PSI for car tyres, motorcycle tyres, bicycle tyres, and various sports balls.
- **Power Bank:** 10000mAh battery capacity for charging mobile phones, tablets, cameras, and headphones.
- **LED Light:** Integrated flashlight with SOS mode for emergencies.
- **Digital Display:** Shows battery level and inflation pressure.

SETUP

Charging the Device:

1. Connect the provided Type-C cable to the charging port on the AGARO Regal unit.
2. Connect the other end of the Type-C cable to a suitable USB power adapter (not included).
3. The digital display will indicate the charging status. Charge the device fully before first use.

Note: Ensure the device is fully charged before attempting to jump start a vehicle.

OPERATING INSTRUCTIONS

1. Jump Starter Operation

Before starting, ensure the AGARO Regal unit has at least 75% battery charge.

1. **Connect the car battery:** Connect the red clamp of the jumper cables to the positive (+) terminal of the vehicle's battery. Connect the black clamp to the negative (-) terminal of the vehicle's battery. Ensure the connections are secure and free of rust or corrosion.
2. **Connect emergency power:** Insert the jumper cable plug into the jump start port on the AGARO Regal unit. Ensure the plug is fully inserted.
3. **Start the car battery:** Start the car engine. If the engine does not start after 3 attempts, stop and allow the device to cool before reattempting or seeking professional assistance.
4. **Complete the operation:** After successfully starting the car, remove the jumper cable plug from the AGARO Regal unit within 30 seconds. Then, disconnect the black clamp from the car battery, followed by the red clamp.

How to use **Jump Starter**



Step 1: Connect the car battery

Connect the red clamp to the positive pole and the black clamp to the negative pole of the car battery. Ensure the connection is secure and free of rust or corrosion.



Step 2: Connect emergency power

Connect the battery clip to the power supply, making sure the plug is fully inserted into the power port



Step 3: Start the car battery

Start the car engine. If it fails to start after 3 attempts, stop and seek help.



Step 4: Complete the operation

After successfully starting the car, remove the power supply within 30 seconds to prevent damage to the unit.

Note: Before using, ensure the power is above **75%** . Do not continue to jump start, if not successful for 3 times

Image: A four-step visual guide demonstrating how to use the jump starter function: connecting clamps to the car battery, connecting the emergency power to the device, starting the car engine, and completing the operation by disconnecting the cables.

Jump-Start Dead Engines



Car



Motorcycle



Rated Voltage
14.8V

Petrol Engine
Up to 3.5L

Diesel Engine
Up to 2L

Peak Current
800A

Image: The AGARO Regal device indicating its ability to jump-start dead engines for both cars and motorcycles, with specifications for rated voltage (14.8V), petrol engine size (up to 3.5L), diesel engine size (up to 2L), and peak current (800A).

2. Tyre Inflator Operation

The device can inflate tyres up to 150 PSI and supports various pressure units (PSI, BAR, KPA, KG/CM²).

1. **Connect the air pipe:** Screw the detachable air hose onto the inflation port of the AGARO Regal unit. Securely attach the connector nozzle to the tyre valve or other inflatable item. Turn ON the device.
2. **Select mode:** Press the "MODE" key to cycle through and select the desired inflation mode (e.g., car, motorcycle, bicycle, ball).
3. **Adjust pressure value:** Use the "+" and "-" buttons to set the target pressure value manually on the digital display.
4. **Start inflation:** Press the "POWER" button to begin inflation. The device will automatically shut off once the preset pressure is reached.

How to use Tyre Inflator



Step 1:

Connect the air pipe & properly fix the connector nozzle & turn ON the device.



Step 2:

Press the MODE key  to select the desired mode manually.



Step 3:

Press the + & - button to adjust the pressure value manually.



Step 4:

Press the POWER button to inflate. Once done it will AUTO Shut-OFF.

Image: A four-step visual guide demonstrating how to use the tyre inflator function: connecting the air pipe, pressing the MODE key to select the desired mode, adjusting the pressure with '+' and '-' buttons, and pressing POWER to inflate until auto shut-off.

Fast Inflation

MAX Inflation Pressure: **150PSI**

Unit: **PSI, BAR, KPA, KG/CM²**



Can **Inflate**



Car



Motorcycle



Bicycle



Ball

Image: The AGARO Regal device highlighting its fast inflation capability with a maximum inflation pressure of 150 PSI and support for various units. It shows icons for items it can inflate: car, motorcycle, bicycle, and ball.



Image: The AGARO Regal device connected to a car tire, illustrating its ability to inflate in minutes, with icons for car, motorcycle, bicycle, and basketball.

3. Power Bank Function

The AGARO Regal unit can charge other electronic devices using its 10000mAh battery.

1. Connect your device's charging cable (e.g., USB-A to Type-C, USB-A to Lightning) to the USB output port on the AGARO Regal unit.
2. Connect the other end of the cable to your electronic device (mobile, tablet, camera, headphones).
3. The AGARO Regal will begin charging your device.

Quick Recharge Power Bank



Image: The AGARO Regal device being used to charge a mobile phone, demonstrating its quick recharge power bank function with a 10000mAh capacity, suitable for mobile, tablet, camera, and headphones.

4. LED Light Function

The integrated LED light provides illumination for various situations.

- Press the dedicated light button (refer to device diagram in manual for exact location) once for constant flashlight mode.
- Press again to activate SOS flashing mode for emergencies.
- Press a third time to turn off the light.

LED Illumination

 Flashlight

 SOS



Image: A person using the AGARO Regal device's LED light to illuminate an engine bay at night, demonstrating its flashlight and SOS illumination capabilities.



Image: The AGARO Regal device on a table, with its LED light shining, illustrating the two modes: flashlight and SOS.

MAINTENANCE

- **Cleaning:** Wipe the device with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the device in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** For optimal battery life, charge the device at least once every three months, even if not in use.
- **Cable Inspection:** Regularly inspect the jumper cables and air hose for any signs of wear, damage, or corrosion. Replace if necessary.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Battery is depleted.	Charge the device fully using the Type-C cable.
Vehicle does not jump start.	Device battery too low (below 75%). Incorrect cable connection. Vehicle battery severely damaged. Engine size exceeds device capacity.	Ensure device is charged above 75%. Verify red clamp to positive, black to negative. Seek professional vehicle service. Check product specifications for engine compatibility.

Problem	Possible Cause	Solution
Tyre inflator not working or slow.	Air hose not securely connected. Incorrect pressure setting. Device battery low.	Ensure all connections are tight. Verify target pressure is set correctly. Charge the device.
Digital display not showing correct readings.	Sensor issue or device malfunction.	Contact customer support for assistance.

SPECIFICATIONS

Model Number	34408
Battery Capacity	10000mAh
Battery Cell Composition	Lithium Ion
Jump Start Output	12V
Peak Current	800A
Max Inflation Pressure	150 PSI
Product Dimensions (LxWxH)	12 x 7 x 19.8 cm
Item Weight	720 g
Manufacturer	Universal Corporation Limited, Shanghai, China
Country of Origin	China

WARRANTY AND SUPPORT

The AGARO Regal Jump Starter and Tyre Inflator comes with a **1 Year Warranty** from the date of purchase. For warranty claims, technical support, or any inquiries regarding your product, please contact AGARO customer service. Refer to the product packaging or AGARO's official website for the most current contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FPQQ94WW>

More documents and user manuals: <https://manuals.plus/>