

MUPATER TG0101-01WA-0904

MUPATER Solid Wood Hexagonal Board Game Table

MODEL: TG0101-01WA-0904

1. Introduction

Thank you for choosing the MUPATER Solid Wood Hexagonal Board Game Table. This versatile table is designed to serve as both a stylish dining table and a functional gaming surface, perfect for gatherings with family and friends. Crafted from high-quality wood, it offers durability and a modern aesthetic. Please read this manual carefully before assembly and use to ensure proper setup and longevity of your product.

2. Safety Information

- This product is heavy. Assembly requires at least two adults.
- Keep all small parts and packaging materials away from children and pets to prevent choking hazards.
- Ensure all screws and fasteners are securely tightened before use. Periodically check and re-tighten as necessary.
- Do not stand or sit on the table.
- Avoid placing hot items directly on the table surface without protective coasters.

3. What's in the Box

Verify that all components are present before beginning assembly:

- Board game table frame and panels
- Cup Holders (x6)
- Game Trays (x6)
- Leatherette Playmat
- Assembly Hardware (screws, allen wrench, etc.)

4. Assembly Instructions

Follow these steps for proper assembly. It is recommended to have two people for certain steps, especially when handling

heavy components.

1. **Assemble the Table Frame:** Connect the hexagonal frame pieces using the provided screws. Ensure they are aligned correctly before tightening.
2. **Attach the Table Legs:** Insert the positioning wooden screws into the frame. Install the table legs and secure them with the corner brackets and screws. Tighten all screws using the allen wrench. Apply foot pads to the bottom of each leg.
3. **Install the Bottom Panel of the Table:** Insert positioning screws into the frame. Carefully place the bottom panels (parts 12, 13, 14, 15) into the frame and secure them with screws.
4. **Install the Tabletop and Accessories:** Lay the desk mat (part 19) inside the table. Install the top table panels (parts 1, 2, 3, 4) to cover the gaming surface. Attach the storage trays (part 16) into the table edge slots. Insert the cup holders (parts 17, 18) into the designated slots on the trays.

Your browser does not support the video tag.

Video: Assembly Guide for the MUPATER Board Game Table. This video demonstrates the step-by-step process of assembling the table frame, attaching legs, installing bottom panels, and setting up the tabletop with accessories.

Your browser does not support the video tag.

Video: Detailed Assembly of a Solid Wood Board Game Table. This video provides a more in-depth look at the assembly process, highlighting key connections and hardware installation.

Your browser does not support the video tag.

Video: Hex Game Table Assembly. This video illustrates the assembly of a hexagonal game table, focusing on the unique frame and leg attachment for this design.

5. Operating Instructions

Converting Between Dining and Gaming Modes

The MUPATER table features a removable top, allowing it to function as both a dining table and a dedicated gaming surface. To switch modes:

1. To reveal the gaming surface, carefully lift and remove the individual tabletop panels. Store these panels safely, ideally in a dedicated rack if available, to prevent damage.
2. The recessed play area, lined with a leatherette playmat, is now accessible for your board games.
3. To convert back to a dining table, simply place the tabletop panels back into their positions, ensuring they are flush with the table frame.

MULTIFUNCTIONAL GAMING & DINING TABLE



Image: The multifunctional design of the MUPATER table, illustrating how the removable top panels can be lifted to transition from a dining table to a gaming table.

Your browser does not support the video tag.

Video: Gaming and Dining Table Conversion. This video demonstrates the ease of converting the table between its dining and gaming configurations by removing and replacing the tabletop panels.

Using Cup Holders and Hobby Trays

The table includes six detachable cup holders and six hobby trays that slide into the table's edge slots.

- Slide the trays out from the table's edge to access them.
- Place beverages in the stainless steel cup holders to keep them secure and prevent spills on the gaming surface.
- Use the hobby trays to organize game pieces, cards, or other small accessories, keeping the main play area clear.



Detachable Sliding Cup Holders

Keep drinks organized and within reach during gameplay

Detachable Sliding Trays

Easily removable for quick cleaning & Keep your tabletop clean



Image: Detachable sliding cup holders and hobby trays. This close-up shows the convenient design of the pull-out trays and integrated cup holders for organizing game components and drinks.

6. Maintenance

- **Cleaning the Wood Surface:** The table features a waterproof surface. Wipe spills immediately with a soft, damp cloth. For general cleaning, use a mild wood cleaner and a soft cloth. Avoid abrasive cleaners or harsh chemicals.
- **Playmat Care:** The leatherette playmat can be wiped clean with a damp cloth. Avoid sharp objects that could puncture or tear the mat.
- **Hardware Check:** Periodically inspect all screws and fasteners to ensure they remain tight. Re-tighten as needed to maintain stability.

MORE DETAILS DISPLAY



Leatherette Playmat



Anti-slip Mats



Anti-slip Locating Design

Image: More details display, highlighting the leatherette playmat, anti-slip mats for stability, and the anti-slip locating design for the tabletop panels, all contributing to product durability and user experience.

7. Specifications

Brand	MUPATER
Model Number	TG0101-01WA-0904
Color	Walnut
Material	Wood
Product Dimensions (L x W x H)	62.2"L x 53.87"W x 30.1"H
Item Weight	147.8 Pounds
Number of Players	6

Assembly Required	Yes
Included Components	Board game table, Cup Holders (x6), Game Trays (x6), Leatherette Playmat



Image: Detailed dimensions of the MUPATER Solid Wood Hexagonal Board Game Table, including overall length, width, and height, as well as individual panel measurements.

8. Troubleshooting

- **Table Wobbles:** Ensure all leg attachment screws are fully tightened. Check that the table is on a level surface. Adjust foot pads if necessary.
- **Tabletop Panels Not Flush:** Verify that the underlying playmat is correctly positioned and not bunched up. Ensure all panels are inserted in the correct orientation and fully seated.
- **Difficulty Sliding Trays:** Check for any obstructions in the sliding rails. Ensure the trays are inserted correctly and are not misaligned.

9. Warranty and Support

For warranty information, product support, or to order replacement parts, please refer to the contact information provided at the point of purchase or visit the official MUPATER website. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question