

[Manuals.plus](#) /

› [Nictemaw](#) /

› Nictemaw Niwasher-7001 Portable Washing Machine User Manual

Nictemaw Niwasher-7001

Nictemaw Niwasher-7001 Portable Washing Machine User Manual

Model: Niwasher-7001

1. INTRODUCTION

Thank you for choosing the Nictemaw Portable Washing Machine. This appliance is designed to provide efficient and convenient laundry solutions for various living spaces such as apartments, dormitories, RVs, and homes. With a 20 lbs (2.8 Cu.ft) capacity, 10 washing programs, and 8 water levels, it offers versatile cleaning options. Please read this manual thoroughly before operation to ensure safe and optimal use of your washing machine.



Image: Nictemaw Portable Washing Machine, front view with lid closed.

2. SAFETY INSTRUCTIONS

To prevent injury to yourself and others, or damage to the appliance, please observe the following safety precautions:

- **Electrical Safety:** Ensure the power outlet is properly grounded. Do not use extension cords or adapters. Unplug the machine before cleaning or maintenance.
- **Water Safety:** Do not immerse the machine in water. Ensure all water connections are secure to prevent leaks. Do not operate if water is leaking.
- **Child Safety:** Keep children away from the appliance during operation. Utilize the child lock function to prevent accidental operation.
- **Placement:** Place the machine on a firm, level surface. Ensure adequate clearance around the machine for ventilation and

operation.

- **Flammable Materials:** Do not wash items that have been soiled with flammable substances (e.g., gasoline, cooking oil).
- **Overloading:** Do not overload the machine beyond its specified capacity (20 lbs).

3. PRODUCT COMPONENTS

The Nictemaw Portable Washing Machine comes with the following components:

- Nictemaw Portable Washing Machine Unit
- Inlet Pipe (for water supply)
- Drain Pipe (pre-attached or included)
- Adapter (for faucet connection)
- User Manual (this document)



Image: Detailed view of internal features including the filter box, transparent cover, side handle, and adjustable feet.

4. SETUP

Follow these steps to set up your washing machine:

4.1 Unpacking

- Carefully remove all packaging materials.
- Inspect the machine for any damage. Contact customer service if damage is found.

4.2 Placement

- Place the machine on a stable, level surface to minimize vibration and noise during operation.
- Use the adjustable leveling legs at the base of the machine to ensure it is perfectly level.
- Ensure there is sufficient space around the machine for air circulation and hose connections.

4.3 Water Connection

Connect the inlet pipe to a water faucet and the machine's water inlet port. Ensure connections are tight to prevent leaks.

FREE YOUR HANDS - MEET VARIOUS NEEDS!

Dorms

Apartment

RV Camping

Balcony

Bathroom

T-shirt

Shirt

Coat

Pants

Underwear

Jacket

Silk

Cardigan

Curtain

Sheet

Image: Step-by-step guide for connecting the water inlet hose to a standard faucet using the provided adapter.

Position the drain pipe into a sink or drain. Ensure the drain pipe is securely placed to prevent it from dislodging during drainage.

4.4 Power Connection

Plug the power cord into a grounded electrical outlet. Do not share the outlet with other high-power appliances.

5. OPERATING INSTRUCTIONS

This section guides you through the daily operation of your Nictemaw washing machine.

5.1 Control Panel Overview

10 WASHING PROGRAMS

Improve washing efficiency & enjoy relaxing moments!



Put In Clothes



One-Button Start



Full-Auto Laundry



Standard



Spin



Quick Wash



Blanket



Air Dry



Soak



Wash



Tub Clean



Water Recycle



Rinse Spin

Image: Close-up of the control panel with buttons for programs, water levels, and special functions.

The control panel features an intuitive layout for selecting wash programs, water levels, and other functions. Refer to the labels on the panel for specific button functions.

5.2 Loading Laundry

- Open the lid and place clothes loosely into the wash tub. Do not overfill.
- The maximum capacity is 20 lbs. For optimal cleaning, avoid exceeding this limit.

20LBS LARGER CAPACITY

More laundry space for all types of clothes!



SHIRTS

25 PCS



JEANS

15 PCS



THICK

4 COATS



SHEETS

3 PCS

Product Size

19.3 X 20.1 X 35 inch

Height after opening: **45.7** inch

Wash/Spin Capacity

9kg / 20lbs



Image: Visual representation of the 20 lbs capacity, indicating approximate quantities for different clothing types.

5.3 Adding Detergent

Add the appropriate amount of detergent directly into the wash tub with the clothes. The machine does not have a dedicated detergent compartment.

5.4 Selecting Programs

The machine offers 10 washing programs to suit various fabric types and soil levels:

1. **Standard:** For daily laundry.
2. **Quick Wash:** For lightly soiled items or small loads.
3. **Heavy Duty:** For heavily soiled items.
4. **Bulky/Blanket:** For larger items like blankets.
5. **Delicate:** For fragile garments.
6. **Spin Only:** To extract excess water.
7. **Rinse & Spin:** For rinsing and spinning.

8. **Soak:** For pre-soaking heavily soiled items.
9. **Tub Clean:** For cleaning the wash tub.
10. **Air Dry:** For air drying the tub.

Press the 'Program' button to cycle through the available options.

5.5 Selecting Water Levels

Choose from 8 water levels based on your load size. Press the 'Water Level' button to adjust.

8 WATER LEVELS

Low soak & high rinse, more even and full laundry!

Detergent	Water Level
 	7-8L
 	5-6L
 	3-4L
	1-2L

Low Water Level Flush



High Water Level Rinse



The spin drying effect of the same clothes

95% moisture content drop

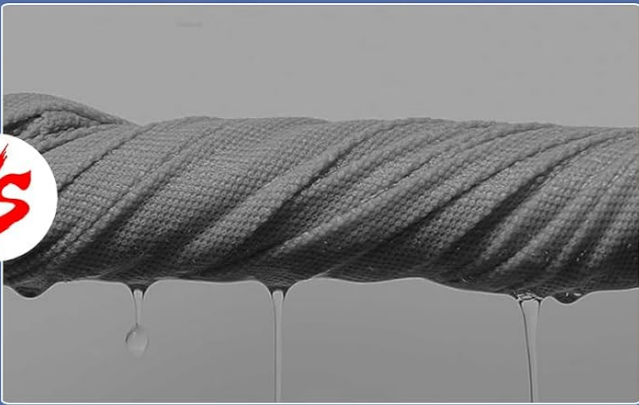



Image: Diagram illustrating 8 water levels (1-2L to 7-8L) and their corresponding detergent recommendations.

5.6 Special Functions

- **Child Lock:** Press and hold the 'Child Lock' button (or combination as indicated on panel) to activate. This prevents accidental changes to settings during operation.
- **Delay Start:** Use the 'Delay Start' function to set a delayed start time for your wash cycle, up to 24 hours.
- **Auto-Balance:** The machine features an auto-balance detection system to ensure stable operation and efficient spinning.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your washing machine.

6.1 Cleaning the Filter Box

The built-in filter box collects lint and debris. Clean it regularly to maintain washing efficiency and prevent blockages.

- Open the filter box cover located inside the tub.
- Remove any accumulated lint or debris.
- Rinse the filter box under running water.
- Reinstall the filter box securely.

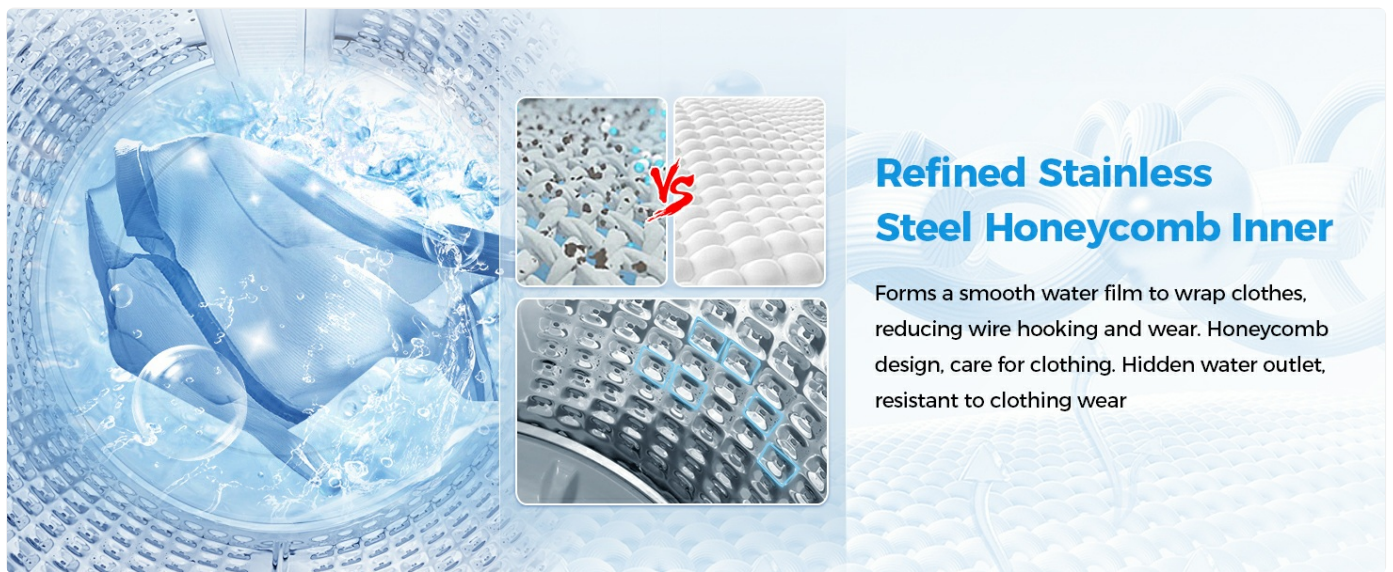


Image: Diagram showing the built-in filter box and its function in collecting thread and paper scraps.

6.2 Tub Self-Cleaning

Use the 'Tub Clean' program periodically to clean the inner tub and prevent mold and bacteria buildup.

- Ensure the tub is empty.
- Select the 'Tub Clean' program.
- Start the cycle.



Image: Illustration of the Tub Self-Clean function using high-pressure water flow and Tub Air-Dry to prevent mildew.

6.3 General Cleaning

- Wipe the exterior of the machine with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.
- Keep the control panel dry.

7. TROUBLESHOOTING

If you encounter issues with your washing machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Lid not closed; Child lock active; Program not selected.	Check power connection; Ensure lid is fully closed; Deactivate child lock; Select a program and press Start.
No water filling	Water faucet off; Inlet hose kinked or blocked; Water pressure too low.	Turn on water faucet; Straighten hose; Check water supply pressure.
Water not draining	Drain hose kinked or blocked; Drain pump filter clogged.	Straighten drain hose; Clean drain pump filter (refer to maintenance section).
Excessive vibration/noise	Machine not level; Load unbalanced; Shipping bolts not removed.	Adjust leveling legs; Redistribute laundry evenly; Ensure all shipping bolts are removed before first use.
Spin cycle not working	Lid not closed; Load unbalanced; Drain issue.	Ensure lid is fully closed; Redistribute laundry; Check for drain blockages.
Water leaks	Hose connections loose; Drain hose improperly positioned.	Tighten all hose connections; Ensure drain hose is securely placed in a drain.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Model Name	Niwasher-7001
Brand	Nictemaw
Capacity	2.8 cubic feet (20 lbs)
Product Dimensions (D x W x H)	20.1" x 19.3" x 35"
Item Weight	51.5 pounds
Motor Power	480W
Access Location	Top Load
Number of Standard Cycles	10
Water Levels	8
Material	Plastic, Stainless Steel (Drum)
Special Features	Adjustable Leveling Legs, Child Lock, Delay Start, Drum Clean, Time Remaining Display, Auto-Balance

9. WARRANTY AND SUPPORT

9.1 Warranty Information

This Nictemaw Portable Washing Machine (Model: Niwasher-7001) comes with a **1-Year Limited Warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, alteration, neglect, or unauthorized repair.

9.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your Nictemaw washing machine, please contact our customer service team. Refer to the contact information provided with your purchase documentation or visit the official Nictemaw website for support details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question