

SUNVIVI 4 Slices-Knob Control

Sunvivi 4 Slices Waffle Maker Instruction Manual

Model: 4 Slices-Knob Control

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before operating the appliance.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. This appliance is for household use only.

PRODUCT OVERVIEW

The Sunvivi 4 Slices Waffle Maker is designed for efficient and convenient waffle preparation. It features non-stick plates, adjustable temperature control, and indicator lights for ease of use.



Image: The waffle maker features four non-stick plates, allowing for the simultaneous preparation of four waffles. The non-stick surface facilitates easy removal of waffles and simplifies cleaning.

1600W

HIGH EFFICIENCY

Create quick & easy waffles at home



**INTEGRATED
DESIGN**



**DOUBLE-SIDED
BAKING**



**1000W HIGH
EFFICIENCY**

Image: This 1600W waffle maker is designed for high efficiency, ensuring quick heating and cooking. Its integrated design and double-sided baking capability contribute to evenly cooked waffles.

Adjustable Temperature Knob



light & fluffy



golden brown



crispy edges



deep golden



extra crispy

Image: The adjustable temperature knob allows users to select their preferred browning level, from light and fluffy to extra crispy, catering to various preferences.

BEFORE FIRST USE

1. Unpack the waffle maker and remove all packaging materials, including any stickers or labels.
2. Wipe the exterior of the appliance with a damp cloth.
3. Clean the non-stick cooking plates with a damp cloth or sponge. Do not use abrasive cleaners or scouring pads.
4. Dry thoroughly.
5. For the first use, it is recommended to lightly grease the cooking plates with a small amount of cooking oil or butter. This helps condition the non-stick surface.



Image: Ensure all protective films and stickers are removed from the appliance before initial use. The labels are designed for clean removal without leaving residue.

SETUP

1. Place the waffle maker on a clean, dry, flat, and heat-resistant surface. Ensure there is adequate ventilation around the appliance.
2. Ensure the power cord is not tangled and is positioned away from hot surfaces.
3. Plug the power cord into a standard 120V AC electrical outlet. The 'POWER' indicator light will illuminate.

OPERATING INSTRUCTIONS

1. Preheating

- Close the lid of the waffle maker.
- Turn the temperature control knob to your desired setting (e.g., medium for golden brown waffles).
- Allow the waffle maker to preheat. The 'READY' indicator light will illuminate when the appliance has reached the set temperature. This typically takes 3-5 minutes.

2. Making Waffles

- Once the 'READY' light illuminates, open the lid.
- Pour approximately 1/2 to 3/4 cup of waffle batter onto the center of the lower cooking plate, distributing it evenly across the four sections. Do not overfill.
- Carefully close the lid. Do not force it shut.
- Cook for 3-5 minutes, or until the 'READY' light illuminates again and the waffles are golden brown and crispy to your preference. Cooking time may vary based on batter type and desired crispness.
- Open the lid and carefully remove the cooked waffles using a heat-resistant plastic or wooden utensil.

Do not use metal utensils, as they can damage the non-stick coating.

- Close the lid to maintain heat for subsequent waffles.

3. Adjusting Temperature

- The temperature control knob allows you to customize the waffle's texture and browning.
- Turn the knob towards 'Min' for lighter, softer waffles.
- Turn the knob towards 'Max' for darker, crispier waffles.
- Experiment with different settings to find your ideal waffle.

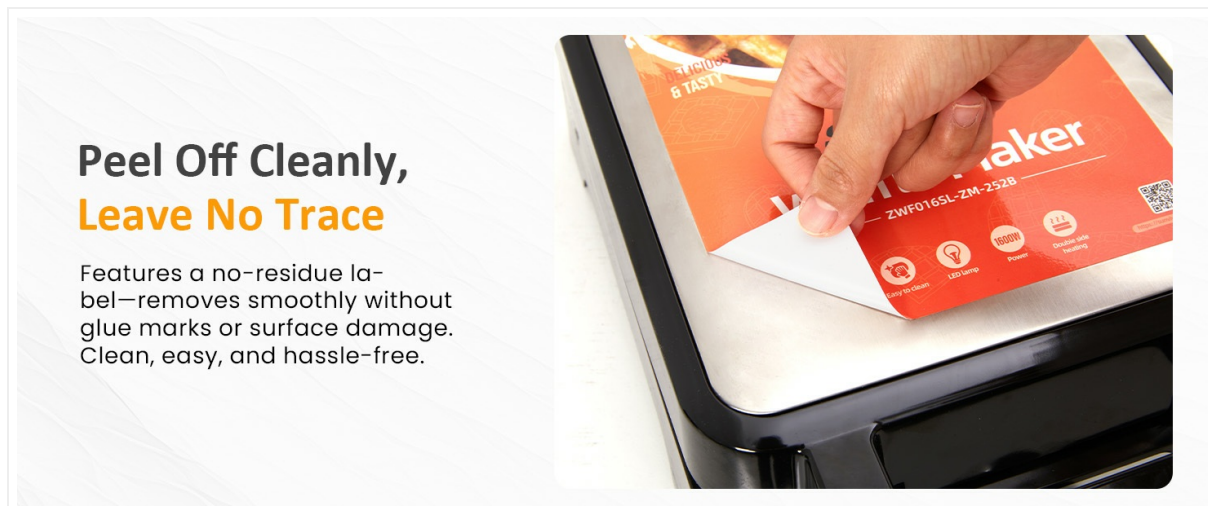


Image: A visual guide to the waffle-making process: preheating the unit, adding batter to the plates, cooking until golden, and finally, enjoying the freshly made waffles.

CLEANING AND MAINTENANCE

1. Always unplug the waffle maker from the power outlet and allow it to cool completely before cleaning.
2. Wipe the exterior of the appliance with a damp cloth. Do not use abrasive cleaners or harsh chemicals.
3. For the non-stick cooking plates, gently wipe away any excess batter or residue with a soft, damp cloth or sponge. For stubborn residue, a small amount of cooking oil can be applied to soften it before wiping.
4. Do not use metal scouring pads or abrasive cleaners on the non-stick surfaces, as this can damage the coating.
5. Never immerse the waffle maker in water or any other liquid.
6. Ensure all parts are thoroughly dry before storing.



Image: The non-stick surface allows for easy cleaning. After the unit has cooled, simply wipe the plates with a damp cloth to remove any residue.

STORAGE

The Sunvivi 4 Slices Waffle Maker is designed for compact storage.

- Ensure the appliance is completely cool and clean before storing.
- The waffle maker can be stored upright to save counter or cabinet space.
- Wrap the power cord neatly around the base or secure it with a cord tie.



Compact Upright Storage

Perfect for dorms, apartments, RVs, kitchenettes...



Peelable surface sticker

Image: The compact design of the waffle maker allows for convenient upright storage in cabinets, making it suitable for smaller kitchens or limited spaces.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Waffle maker does not heat up.	Not plugged in; power outlet malfunction; appliance malfunction.	Ensure the appliance is securely plugged into a working outlet. Check the circuit breaker. If the issue persists, contact customer support.
Waffles stick to the plates.	Plates not properly seasoned; too little oil/butter; batter too thick.	Lightly grease the plates before each use. Ensure batter consistency is appropriate. Do not use metal utensils to remove waffles.
Waffles are not evenly cooked or browned.	Insufficient preheating; uneven batter distribution; temperature setting too low.	Allow the waffle maker to fully preheat until the 'READY' light illuminates. Distribute batter evenly. Adjust the temperature knob to a higher setting for darker waffles.

Problem	Possible Cause	Solution
Smoke or odor during first use.	Residual manufacturing oils burning off.	This is normal for the first use. Ensure good ventilation. If smoke persists after initial uses, unplug and contact customer support.

SPECIFICATIONS

- **Model:** 4 Slices-Knob Control
- **Brand:** SUNVIVI
- **Color:** Silver
- **Material:** Stainless Steel
- **Product Dimensions:** 13.66"D x 9.49"W x 4.13"H
- **Wattage:** 1600 watts
- **Voltage:** 120 Volts
- **Special Feature:** Non Stick Coating, Adjustable Temperature Control

WARRANTY AND SUPPORT

The Sunvivi 4 Slices Waffle Maker comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use.

For warranty claims, technical assistance, or any product-related inquiries, please contact Sunvivi customer service. Please have your purchase receipt and product model information available when contacting support.

Contact Information: Please refer to the contact details provided on the product packaging or the official Sunvivi website for the most current support information.